

QUICKSTART

BRC 30/15 C



Warning
These are only brief instructions! Please read and comply with these instructions prior to using or servicing your appliance.
The non-compliance of the operating and safety instructions may lead to damages of the appliance and to dangers for the operator and other persons.

Start up

1

A

B

C

A Swivel the dome lock to the rear.
B Tilt the dome backwards.
C Lift out the waste water reservoir and put it aside.

2

A

B

C

A Fill the fresh water tank with clear water. For improved cleaning hot water (max. 60°C) can be filled in the tank.
B Dosing of detergent.
C Pour in detergent.

3

A

B

C

A Insert the waste water container back onto the appliance.
B Replace the lid of the waste water reservoir and align it.
Note
C Dome lock. Ensure that the dome is seated correctly and the flap is tightly closed! The opening mustn't leak!

Operation

1

A

B

C

A Swivel the push handle lock outwards.
B Adjust the desired push handle height.
C Reclose the lock.

2

A

B

C

A Plug in the main plug.
B Set the appliance switch to normal operation - start the suction turbine and the brush drive.
C Use the cleaning solution key on the handle to spray on the cleaning solution.

Operation

3

A




Cleaning

A Run across the surface to be cleaned in overlapping paths. Pull the appliance backwards during this procedure (do not push).


Finish operation

1


A




B




C



GB



E



A Set the appliance switch to "OFF".

B Disconnect the mains plug from the mains power.

C Swivel the domelock to the front.

D Tilt the dome backwards.

E Take the wastewater reservoir and empty it.

Maintenance and care

1

A




A Thoroughly rinse the fresh water tank and the spray nozzle with approx. 2 litres of fresh water.

	daily	monthly	Kärcher Customer Service

Maintenance and care

2

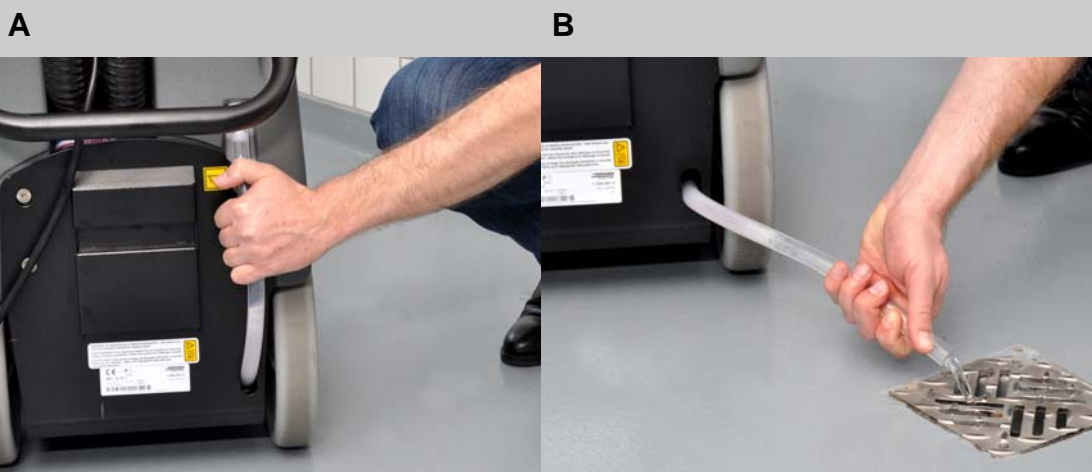


- A Remove drain hose.
- B Let the remaining water drain out of the appliance.

3



- A Clean the sieves below the fresh water tank and inside the dome.

4

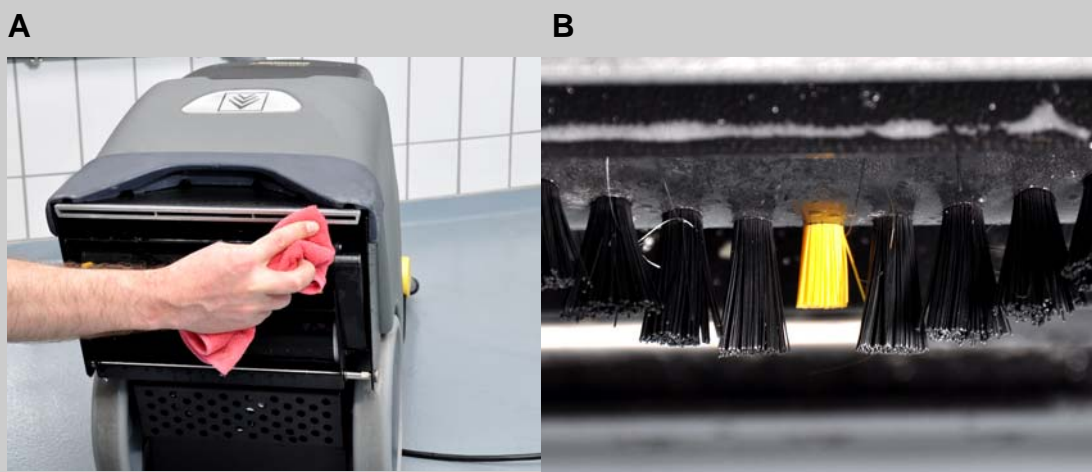

- A Tilt the appliance backwards and clean the cleaning head and the vacuum bar.
- B Clean brushes and check for wear and tear.

5



- A Parking position
- Note**
Leave the dome open when in parking position so that the moisture can dry.

daily	monthly	Kärcher Customer Service
-------	---------	--------------------------