
User Manuel	No: JLDK.26.09.01
RF365A (JLDK.26.09.01)	Page 1 of 2

JLDK.26.09.01 User Guide

1. Appearance



Front side

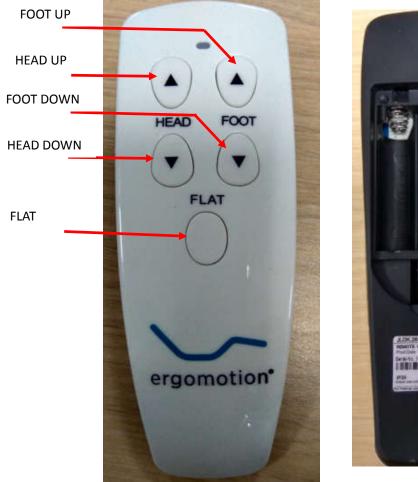

Back side

2. Function description

- 1. HEAD UP: Press this key, the head actuator out, release to stop it.
- 2. HEAD DOWN: Press this key, the head actuator in, release to stop it.
- 3. FOOT UP: Press this key, the foot actuator out, release to stop it.

User Manuel	No: JLDK.26.09.01
RF365A (JLDK.26.09.01)	Page 2 of 2

- 4. FOOT DOWN: Press this key, the foot actuator in, release to stop it.
- 5. **FLAT**: Actuators are moved into FLAT automatically. The movement starts when the key is released. Click any key to stop it.
- 6. **Pairing Key**: Press this key for more than 1 second, the remote will enter pairing mode

and a blue LED besides the pairing key will flash. Release this key to stop pairing .After

the pairing is successful, LED will stop flashing.

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.