
RF368C(JLDK.30.04.01) Remote Model Instructions

1.1 Appearance

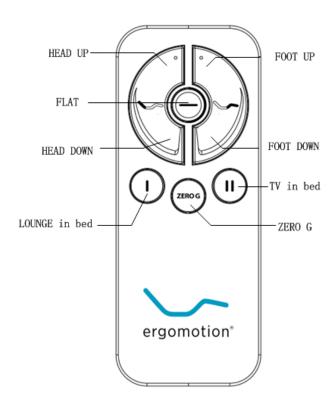

1.2 Function description

After pairing with the bed control box .we can control the bed movement, functions of keys are described as follows:

- **1. HEAD UP:** Press this key, the head actuator out, release to stop it.
- **2. HEAD DOWN:** Press this key, the head actuator in, release to stop it.
- **3. FLAT:** Actuators are moved into FLAT automatically. The movement starts when the key is released. Click any key to stop it.
- **4. FOOT UP:** Press this key, the foot actuator out, release to stop it.
- **5. FOOT DOWN:** Press this key, the foot actuator in, release to stop it.
- 6. LOUNGE in bed: Actuators are moved into LOUNGE automatically. The

movement starts when the key is released. Click any key to stop it.

- **7. ZERO-G:** Actuators are moved into ZERO-G automatically. The movement starts when the key is released. Click any key to stop it.
- **8. TV in bed:** Actuators are moved into TV automatically. The movement starts when the key is released. Click any key to stop it.

FCC NOTE:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.