


UPDATE KENMORE ELITE® 19010 SYSTEM PROGRAM TO VERSION 2.0

Be sure to read and understand the following instructions before beginning the update procedure.


CAUTION:

All of the saved data in the built-in memory will be deleted when you perform the update process. Save your stored files on a PC card before beginning the update.


- 1 Turn the power switch OFF ①.
 Insert the 19010 Ver. 2.0 Update PC Card into the PC card slot ②. Make sure the PC card is completely inserted into the slot.
Do not remove the PC card until you have completed the steps below.

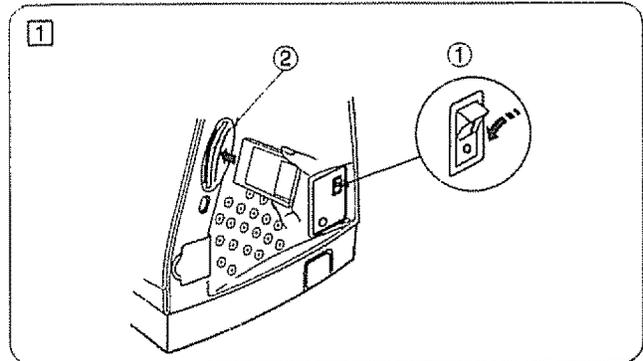


- 2 Press the Auto-Lock button ① and the Needle Up/Down button ② at the same time, keeping them pressed while you turn the power switch ON.
Do not release the buttons.

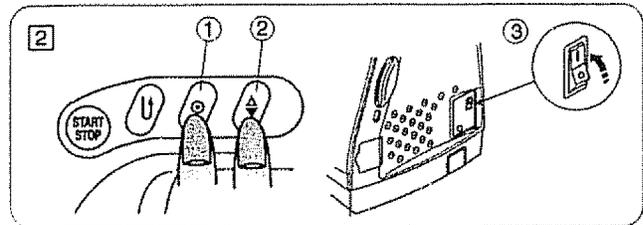

- 3 When a color bar appears ① on the left side of the screen, release the buttons. The LCD screen and Start/Stop button will turn different colors, and the buzzer will beep when the updating process is finished. When the update has been completed, the Start/Stop button will remain green, and the word "Complete" ② will appear on the LCD screen. This process may take several minutes.

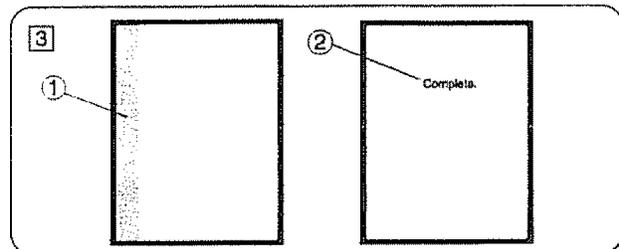

- 4 Turn the power switch OFF, wait five seconds and turn the power switch ON again. You should notice that the opening screen briefly shows, "Ver. 2.00" ① instead of "Ver. 1.00." This confirms that the update has been installed, and you can remove the PC card from the card slot ②.

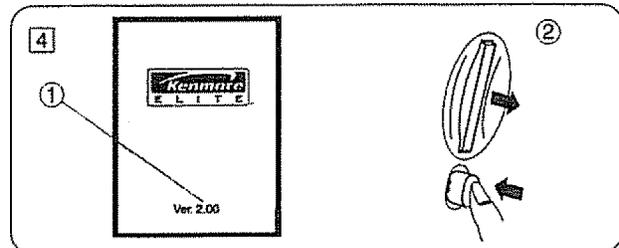

If the screen shows "Ver. 1.00" instead of "Ver. 2.00," or the screen appears completely blank, check the following:

- Did you properly insert the 19010 Ver. 2.00 Update PC card?
- Did you accidentally turn off the machine before update was complete?

To correct problem, turn the machine switch OFF and repeat the update process beginning from Step 1.

If you are unable to update your machine after repeated attempts, please call or email:
 1-877-SEWING-U (1-877-739-4648) 9 am - 4:30 pm, CST, Monday - Friday.
 support@kenmore-sewing.com

KENMORE ELITE 19010 VERSION 2.0 SUPPLEMENTARY INSTRUCTIONS

Conventional Sewing and Embroidery

1. Memory Space Indicator (refer to page 52)

An available memory space will be indicated when saving a programmed stitch combination or embroidery design.

The memory space indicator informs you of the available memory size of the machine's built-in memory or a CompactFlash card in Kilo Bytes (KB).


When you press the  key, the save file window will open.

Press the  key to select the location of either the internal memory of the sewing machine or a CompactFlash card (adapter required).

The memory size of free space is indicated in the window.

NOTE:

If a CompactFlash card is not inserted, 0KB of free space will be indicated.

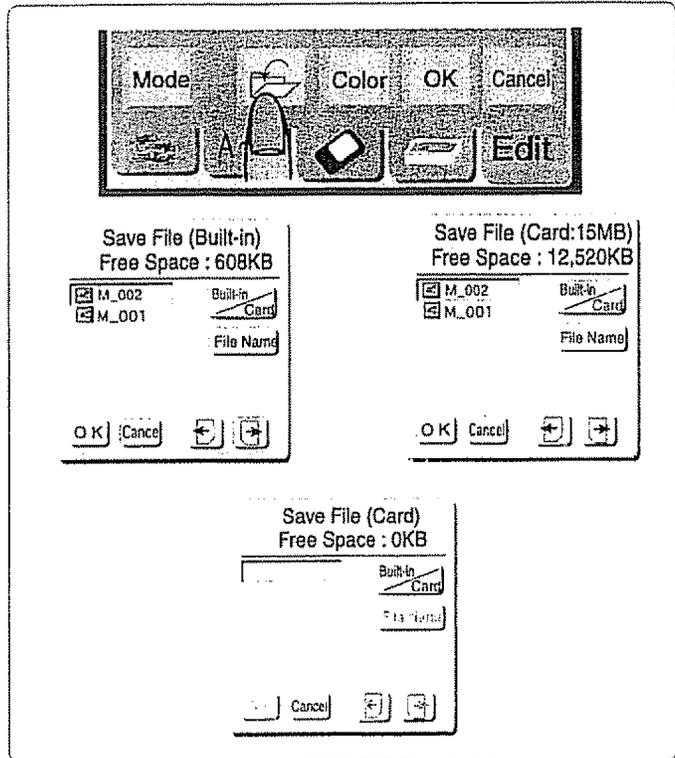


Embroidery

2. Additional Built-in Embroidery Design Patterns (refer to page 60)

Model 19010, Version 2.0 offers 26 additional embroidery designs, which increases the total number of embroidery designs to 48.

There are 4 pages in the built-in pattern selection window.

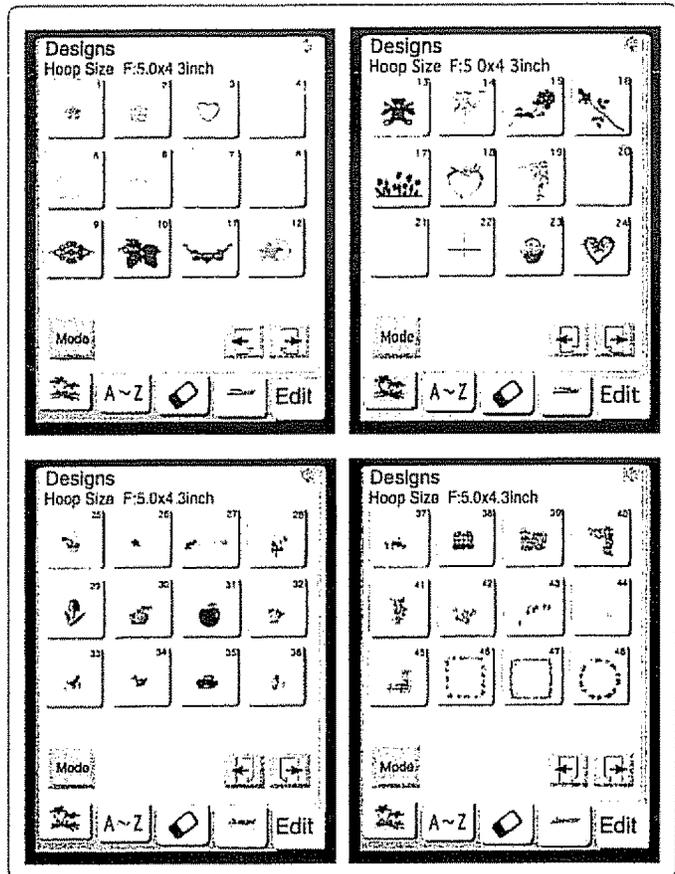


Embroidery, Editing Mode

3. Drag-and-Drop Design Positioning

(refer to page 70)

You can move the pattern to the desired position on the edit screen with your fingertip.

Touch the image of the desired pattern with your fingertip and drag and drop it to the desired position.

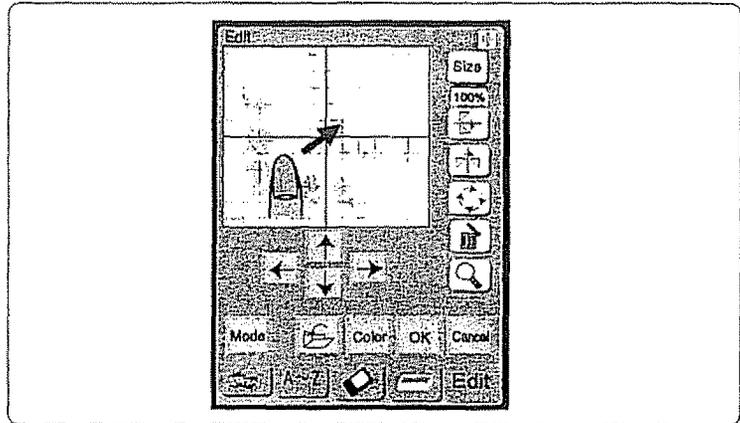


4. Magnifying the Pattern Image

The pattern image in the editing window can be zoomed-in to full screen.

You can view a magnified image of the selected pattern to check the results of editing that you have made.

Press the Magnifier key  to show a magnified image of the selected pattern.

Press the Cancel key  to return to the previous screen.

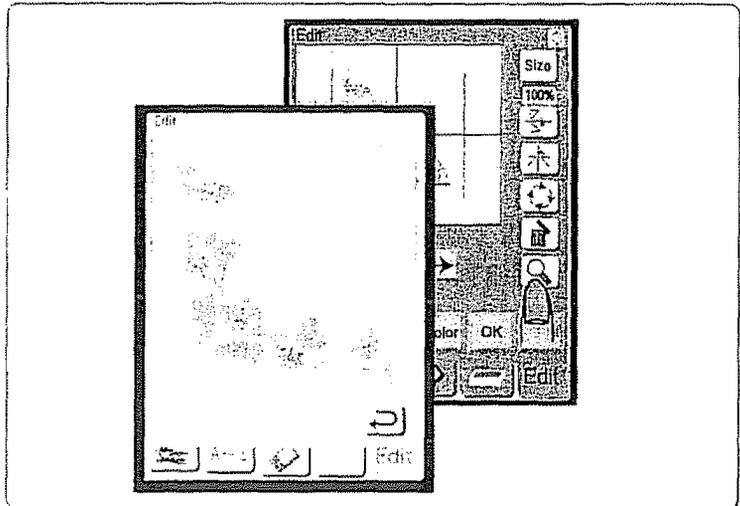

5. Rotating the Design Pattern

(refer to page 72)

The selected design pattern can be rotated every 5 degrees. This new feature allows you to position the design pattern at any angle. You can rotate the design also by 45 degrees increment.

Select the pattern you wish to rotate.


Press the rotation key  to open the rotation window.







Each time you press the  key, the pattern will rotate 45 degrees clockwise.

Each time you press the  key, the pattern will rotate 5 degrees clockwise.

When you press the OK key, the pattern will be displayed at the new angle.

If you press the Cancel key, the angle will not change and the screen will return to the Edit mode window.

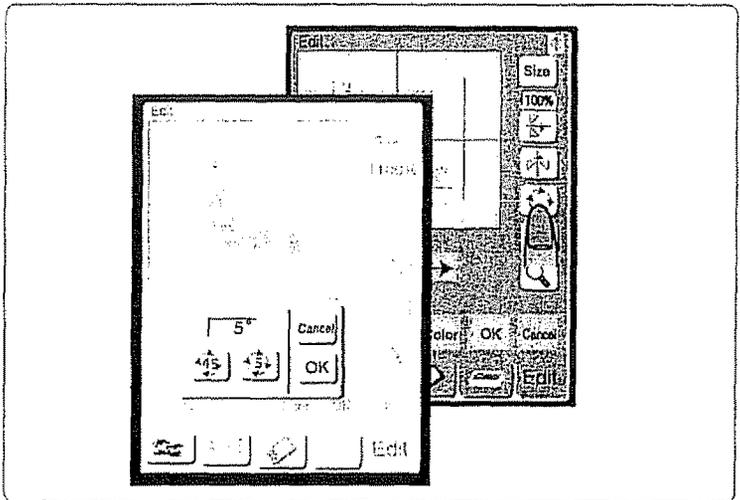

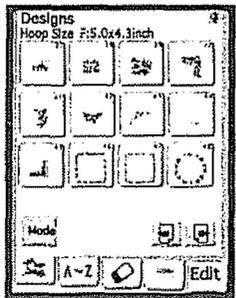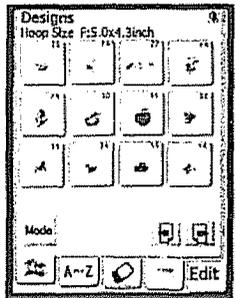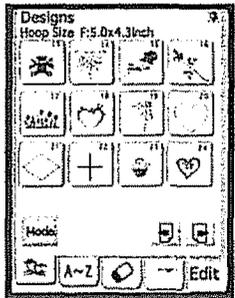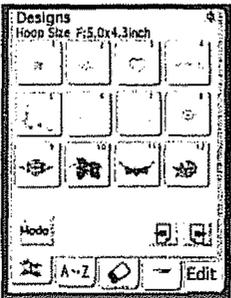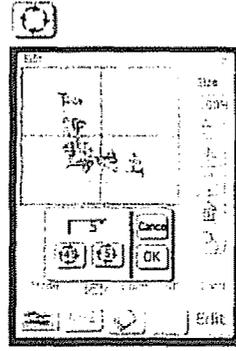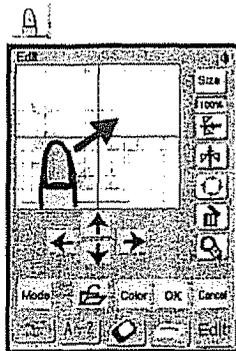

Printed in USA
Impreso en USA
Imprimé au USA