

**REPAIR
PARTS
LIST**

**587.15412100A
587.15413100A**

For Parts or Service:

Call

**1-800-4-MY-HOME®
(1-800-469-4663)**

Or Visit

www.sears.com



24-INCH BUILT-IN DISHWASHER

In all orders or correspondence, avoid delays and misunderstandings by always giving the complete model number shown on the right hand side of the front tub flange, directly behind the door of the dishwasher.


All repair parts listed are available for immediate purchase or special order when you visit your nearest Sears Parts & Repair Center, or the Service Department at most Sears stores. To order parts by phone, call the toll-free number listed to the left or visit sears.com.

When requesting service or ordering parts, always provide the following information:

- Product Type
- Part Number
- Model Number
- Part Description

CONTROL PANEL

CAUTION: Use the Kenmore part number to order part, not the illustration number.

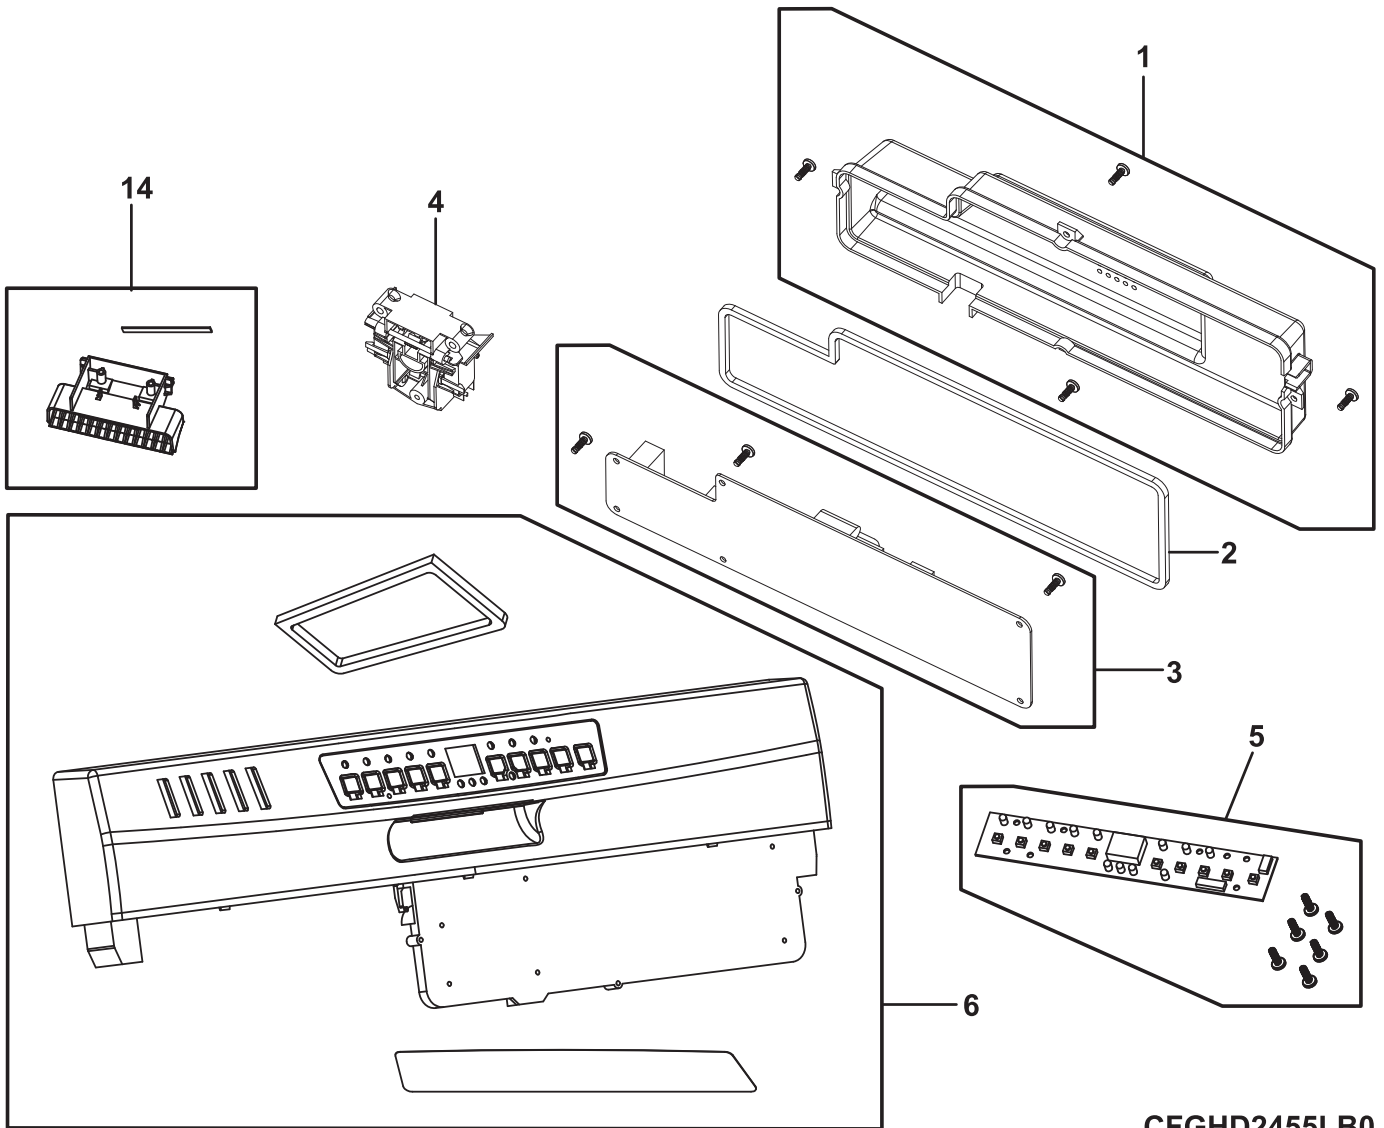

CFGHD2455LB0

CONTROL PANEL


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1541 (587.15412100A)
 B 587.1541 (587.15413100A)

POS. NO	PART NO.		DESCRIPTION
1	5304475567	A B	Cover Assembly, PC board, w/screws
2	5304475568	A B	Gasket, PCB cover
3 #	5304480721	A B	PC Board Assembly, main, w/screws
4 #	5304475570	A B	Latch, door
5 #	5304480722	A B	PC Board Assembly, display, w/screws
6 #	5304484721	A -	Console Assembly, white, w/overlay
6 #	5304484722	- B	Console Assembly, black, w/overlay
14	5304480746	A B	Handle Assembly, latch, white, w/gasket
* #	5304480731	A B	Harness, wiring, main
*	5995598264	A B	Repair Parts List
*	5304484867	A B	Owners Manual
*	5304484868	A B	Installation Instructions
*	5304484869	A B	Service Data Sheet
*	5304484870	A B	Energy Guide

DOOR

CAUTION: Use the Kenmore part number to order part, not the illustration number.

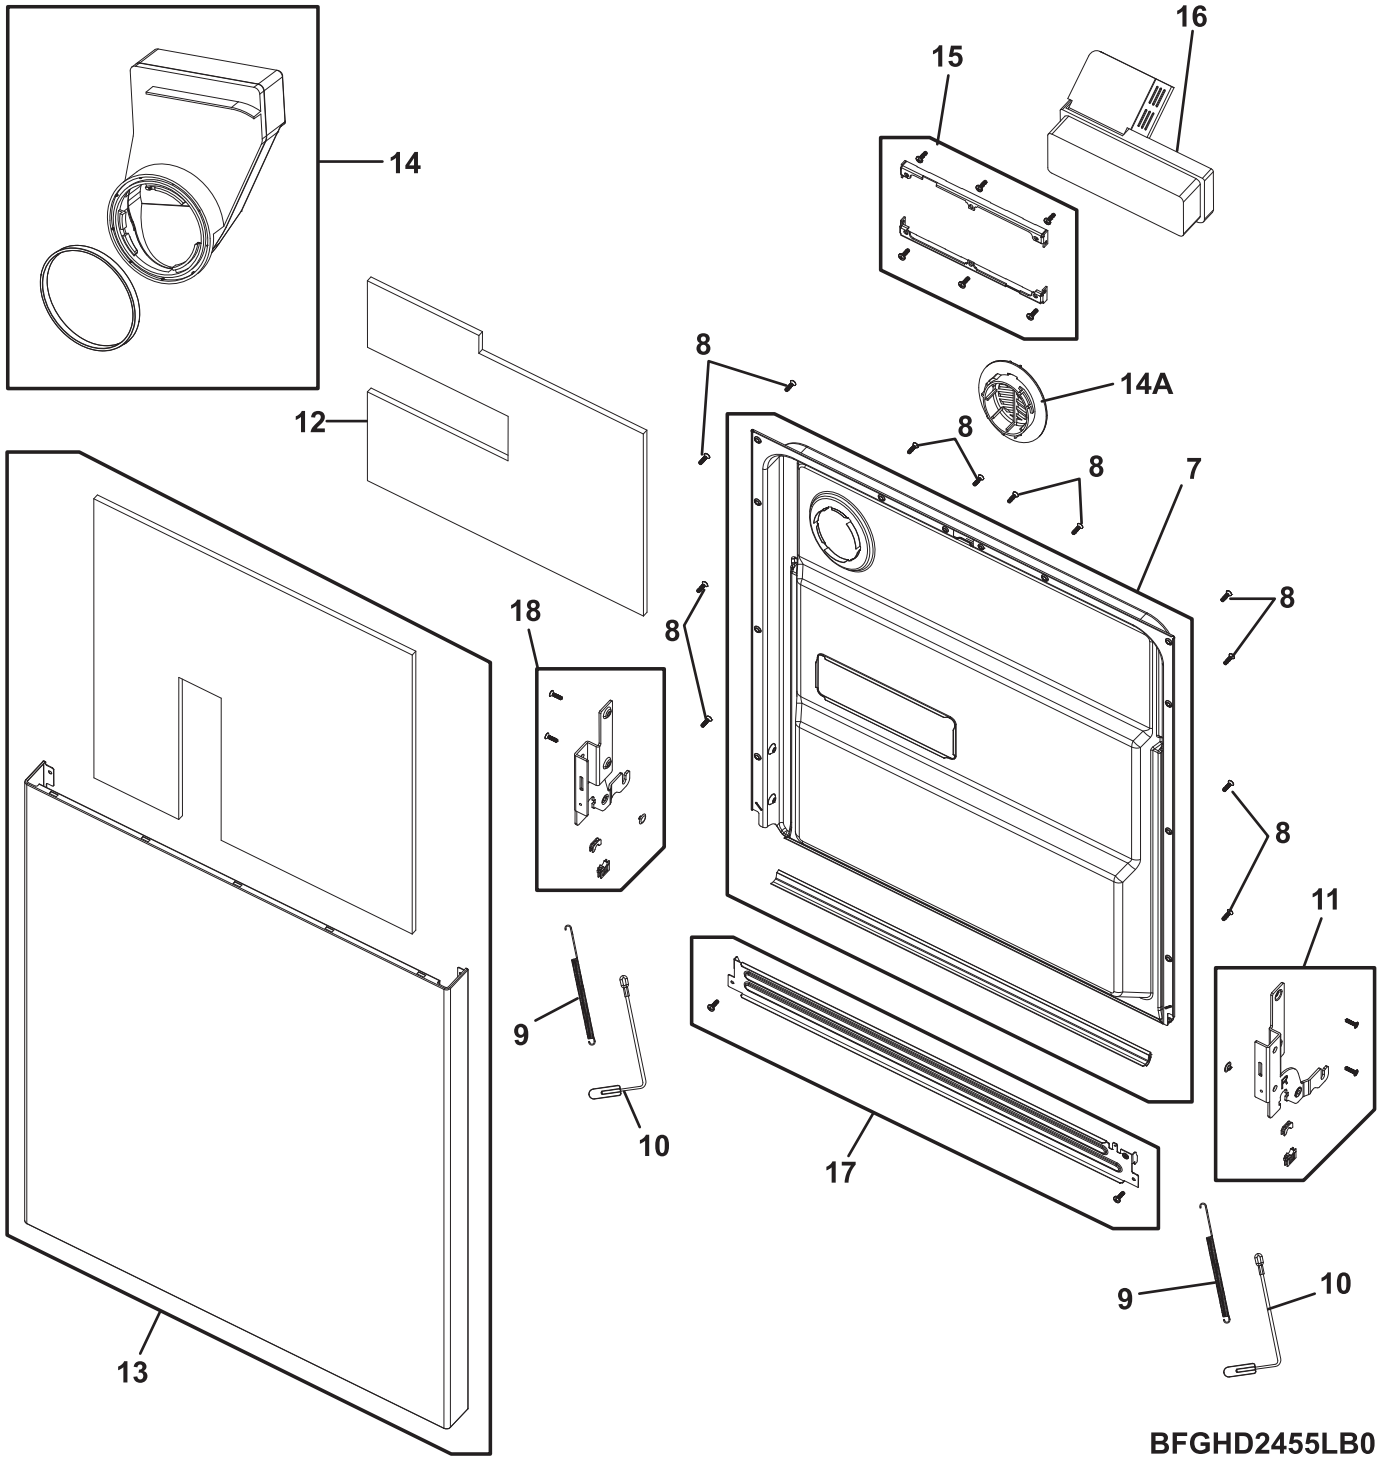

BFGHD2455LB0

DOOR


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1541 (587.15412100A)
 B 587.1541 (587.15413100A)

POS. NO	PART NO.		DESCRIPTION
7	5304480727	A B	Liner Assembly, door, inner, w/mastic
8	5304480728	A B	Screw, door liner, (12)
9	5304475581	A B	Spring, door, (2)
10	5304475582	A B	Cable, door, (2)
11	5304475583	A B	Hinge Assembly, RH, w/screws-spacer
12	5304475584	A B	Insulation, door liner
13	5304480748	A -	Door Assembly, outer, white, w/insulation
13*	5304484724	A -	Nameplate, door, white, Kenmore
13	5304480750	- B	Door Assembly, outer, stainless, w/insulation
13*	5304484725	- B	Nameplate, door, stainless, Kenmore
14	5304480726	A B	Vent Assembly, door
14A	5304480723	A B	Connector, door vent
15	5304475587	A B	Bracket Assembly, dispenser, w/screws
16 #	5304484723	A B	Dispenser Assembly, detergent
16*	5304480730	A B	Cover, dispenser
17	5304475589	A B	Support Assembly, hinge, w/screws
18	5304475590	A B	Hinge Assembly, LH, w/screws-spacer

TUB

CAUTION: Use the Kenmore part number to order part, not the illustration number.

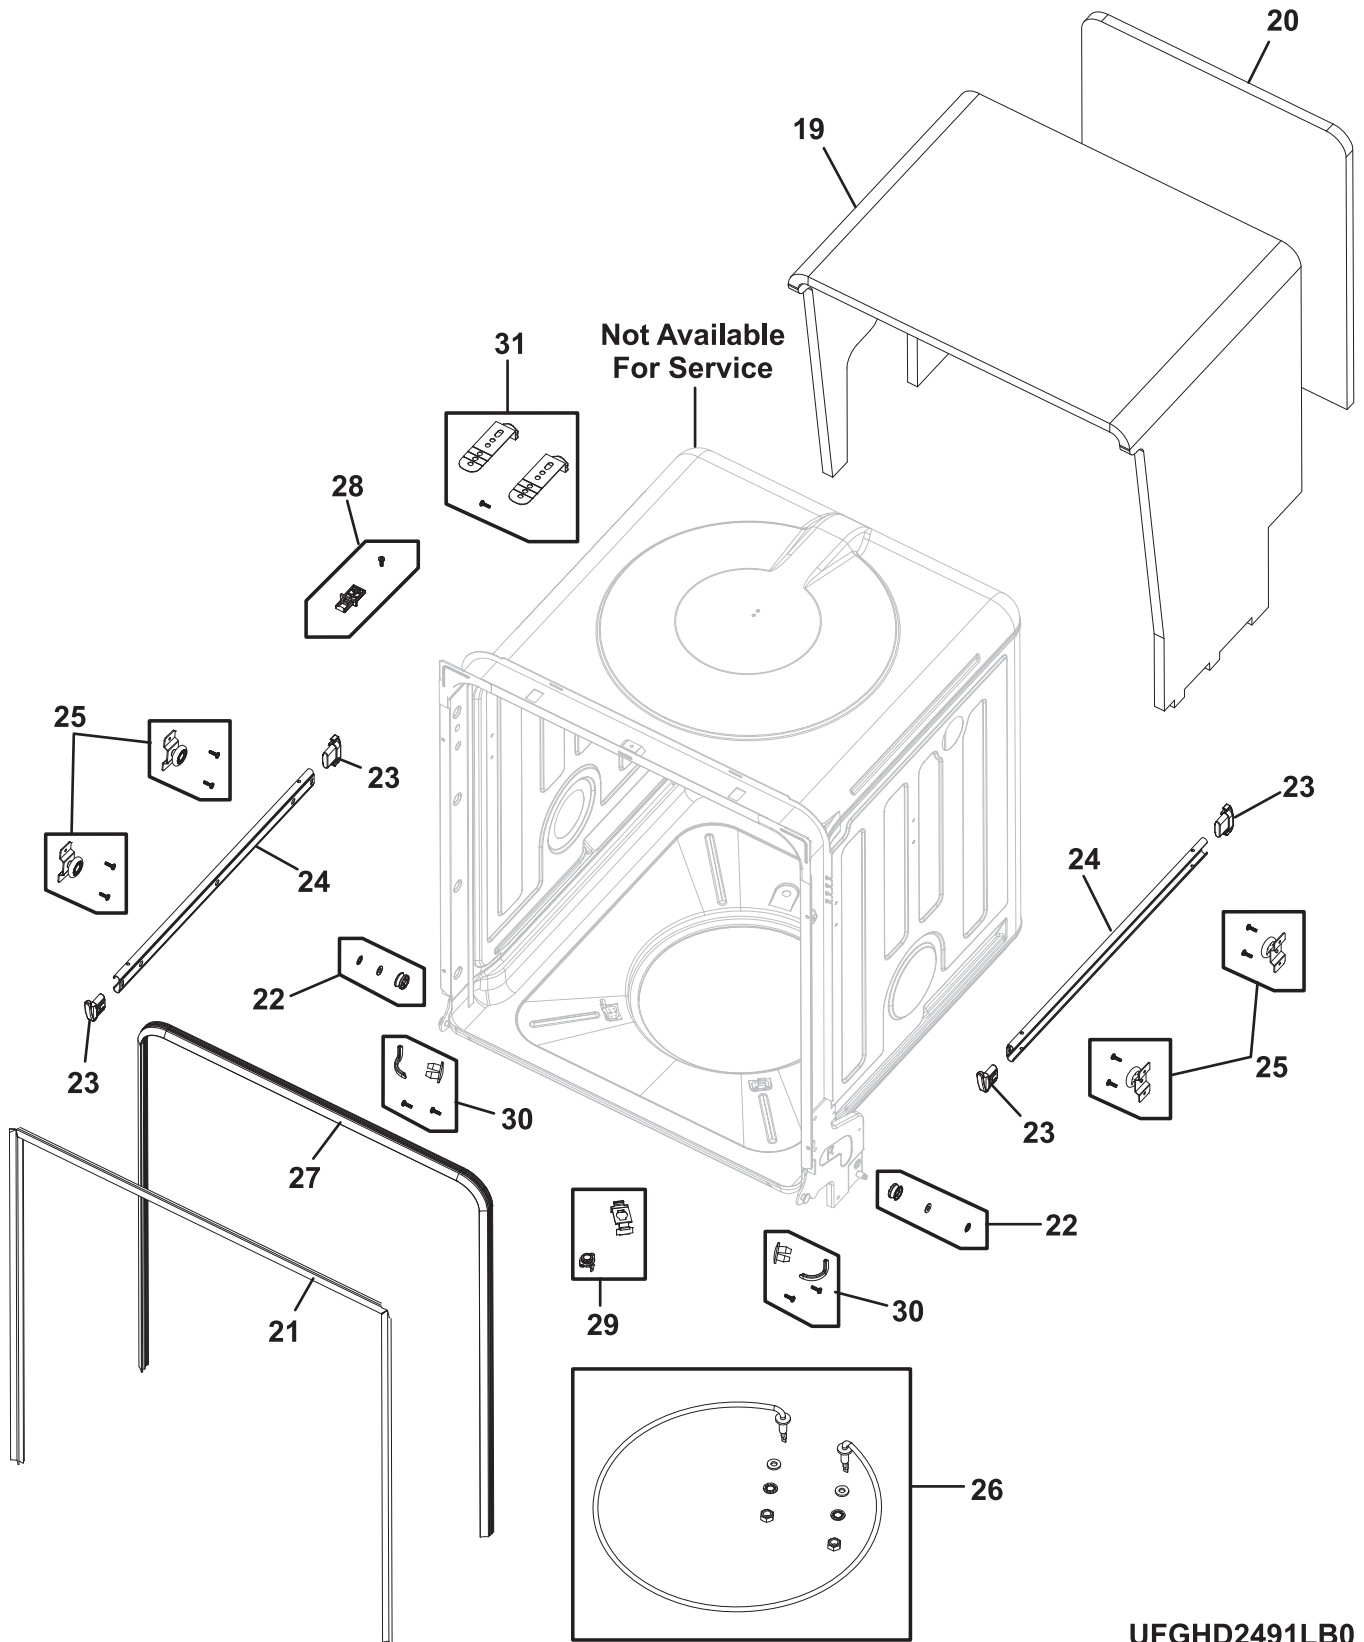

UFGHD2491LB0

TUB


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1541 (587.15412100A)
 B 587.1541 (587.15413100A)

POS. NO	PART NO.		DESCRIPTION
19	5304484726	A B	Insulation, blanket, top & sides
20	5304475592	A B	Insulation, blanket, back
21	5304475593	A B	Seal Kit, cabinet
22	5304475594	A B	Roller Assembly, hinge, (2)
23	5304475595	A B	Cap, rack slide, (4)
24	5304475596	A B	Slide, upper rack, (2)
25	5304475597	A B	Roller Assembly, rack slide, (4), w/screws
26 #	5304475598	A B	Heater Assembly, tub, w/nuts-washers
27	5304475599	A B	Gasket, tub
28	5304475600	A B	Strike Assembly, latch, w/screws
29 #	5304475601	A B	Thermostat Assembly, hi limit, w/bracket
30	5304475602	A B	Mounting Kit, side, w/screws
31	5304475603	A B	Bracket Assembly, top cabinet, w/screws

MOTOR & PUMP

CAUTION: Use the Kenmore part number to order part, not the illustration number.

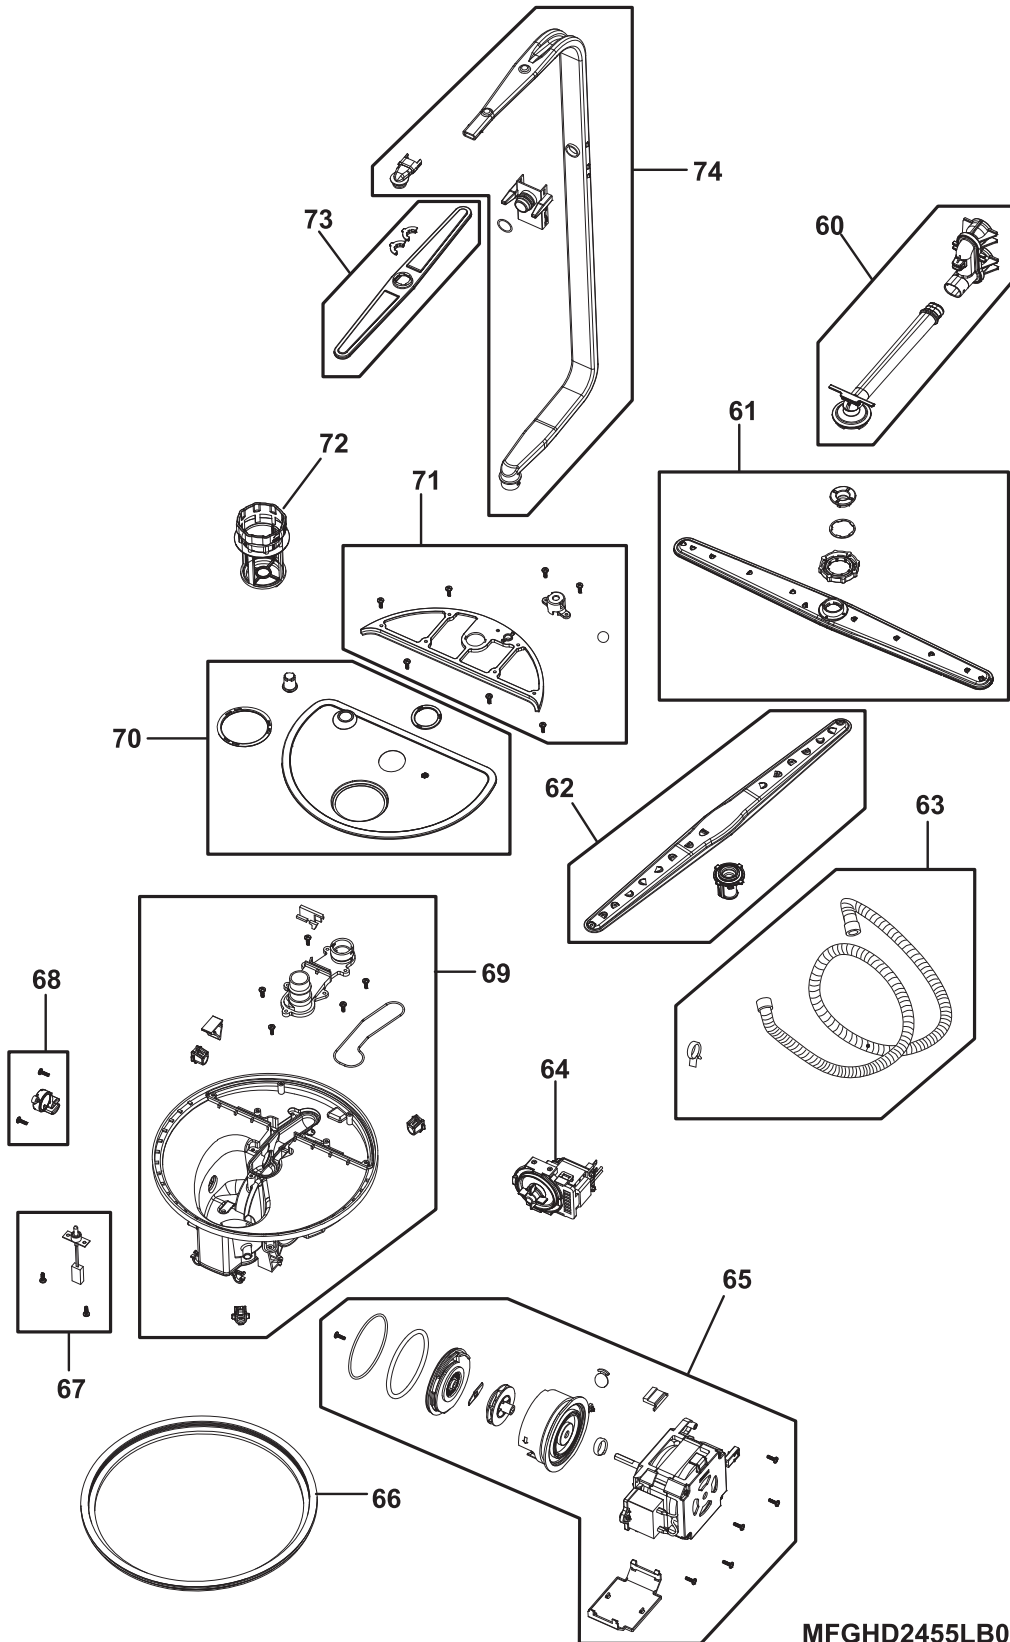

MFGHD2455LB0

MOTOR & PUMP


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: A 587.1541 (587.15412100A)
 B 587.1541 (587.15413100A)

POS. NO	PART NO.		DESCRIPTION
60 #	5304480739	A B	Duct Assembly, spray arm, middle
61 #	5304480740	A B	Spray Arm Assembly, middle
62 #	5304480741	A B	Spray Arm Assembly, lower
63 #	5304475635	A B	Hose Assembly, drain, w/clamp
64 #	5304475636	A B	Pump, drain
65 #	5304475637	A B	Motor Assembly, wash, w/screws-seals
66	5304475638	A B	Gasket, sump
67 #	5304475639	A B	Senser Assembly, thermistor, w/screws
68 #	5304475640	A B	Senser Assembly, turbidity, w/screws
69 #	5304480742	A B	Sump Assembly, w/clips-screws
70	5304480743	A B	Filter Assembly, coarse
71	5304475643	A B	Filter Assembly, fine, w/screws
72	5304475644	A B	Trap, glass
73 #	5304480744	A B	Spray Arm Assembly, upper
74 #	5304480745	A B	Tube Assembly, delivery

FRAME

CAUTION: Use the Kenmore part number to order part, not the illustration number.

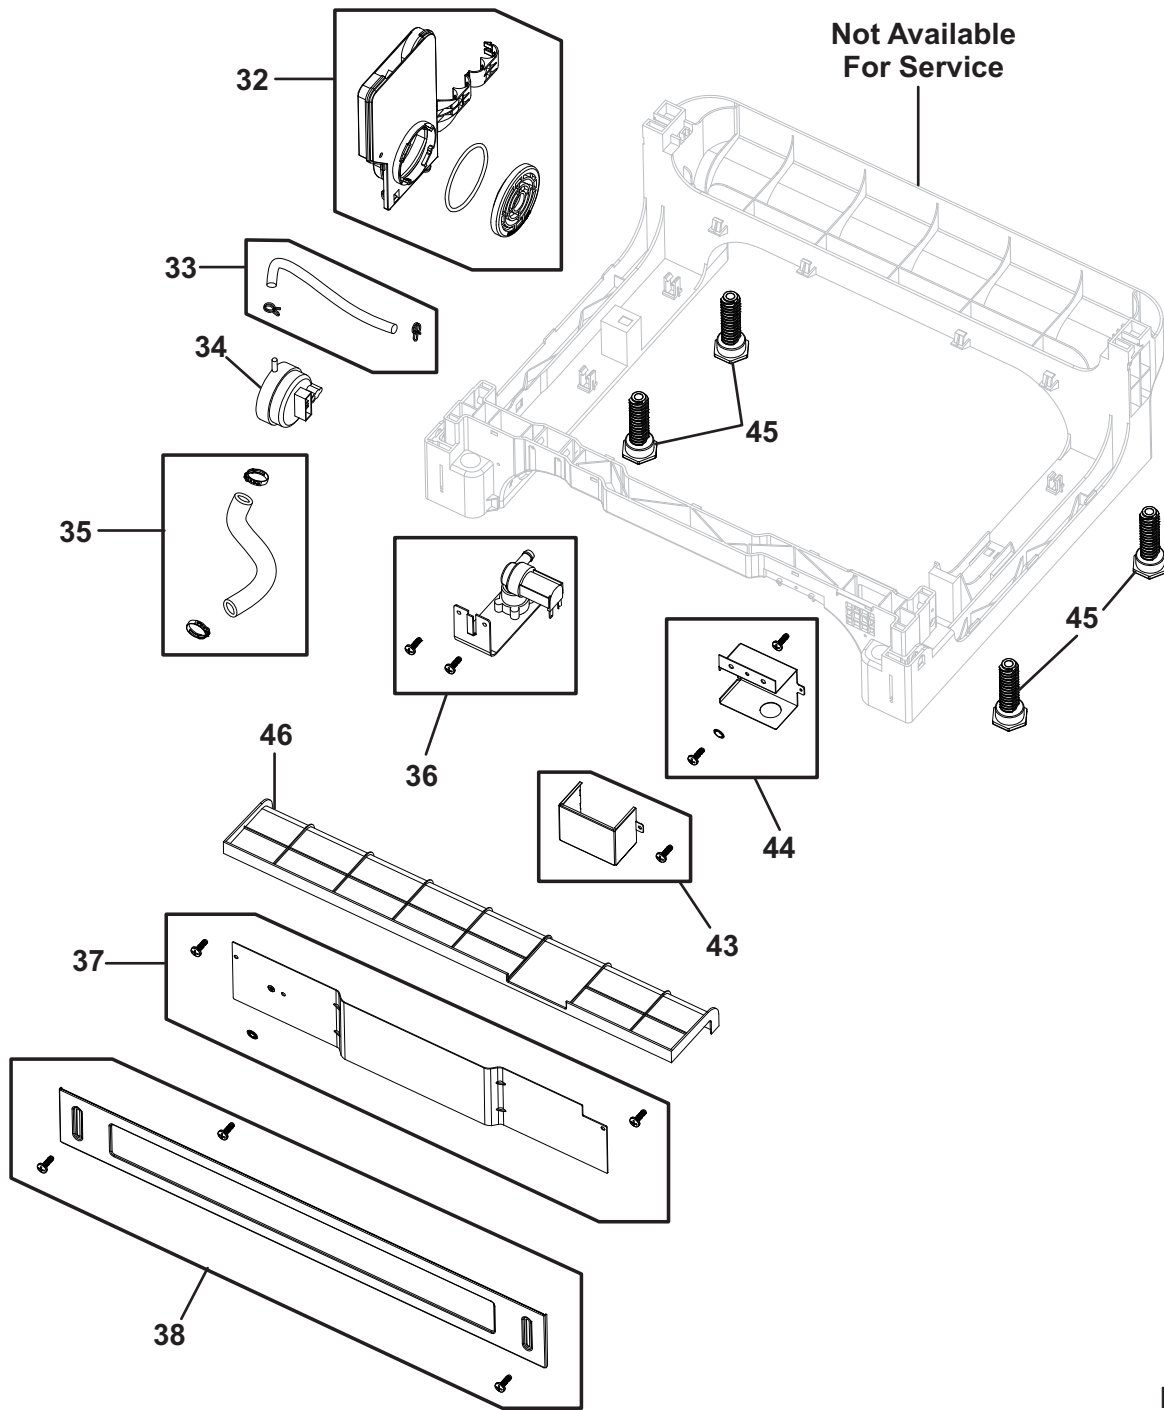

F58715412100A

FRAME


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1541 (587.15412100A)
 B 587.1541 (587.15413100A)

POS. NO	PART NO.		DESCRIPTION
32	5304475604	A B	Brake Assembly, air
33 #	5304475605	A B	Hose Assembly, pressure switch, w/clamps
34 #	5304475606	A B	Switch, pressure
35 #	5304475607	A B	Hose Assembly, water valve, w/clamps
36 #	5304475608	A B	Valve Assembly, water, w/screws
37	5304475609	A B	Support Assembly, kickplate, w/screws
38	5304475610	- B	Kickplate Assembly, black, w/screws
38	5304480749	A -	Kickplate Assembly, white, w/screws
43	5304475615	A B	Cover Assembly, junction box, w/screw
44	5304475616	A B	Box Assembly, junction, w/screws-washer
45	5304475617	A B	Leg, leveling, (4)
46	5304484727	A B	Cover, front, lower

RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.

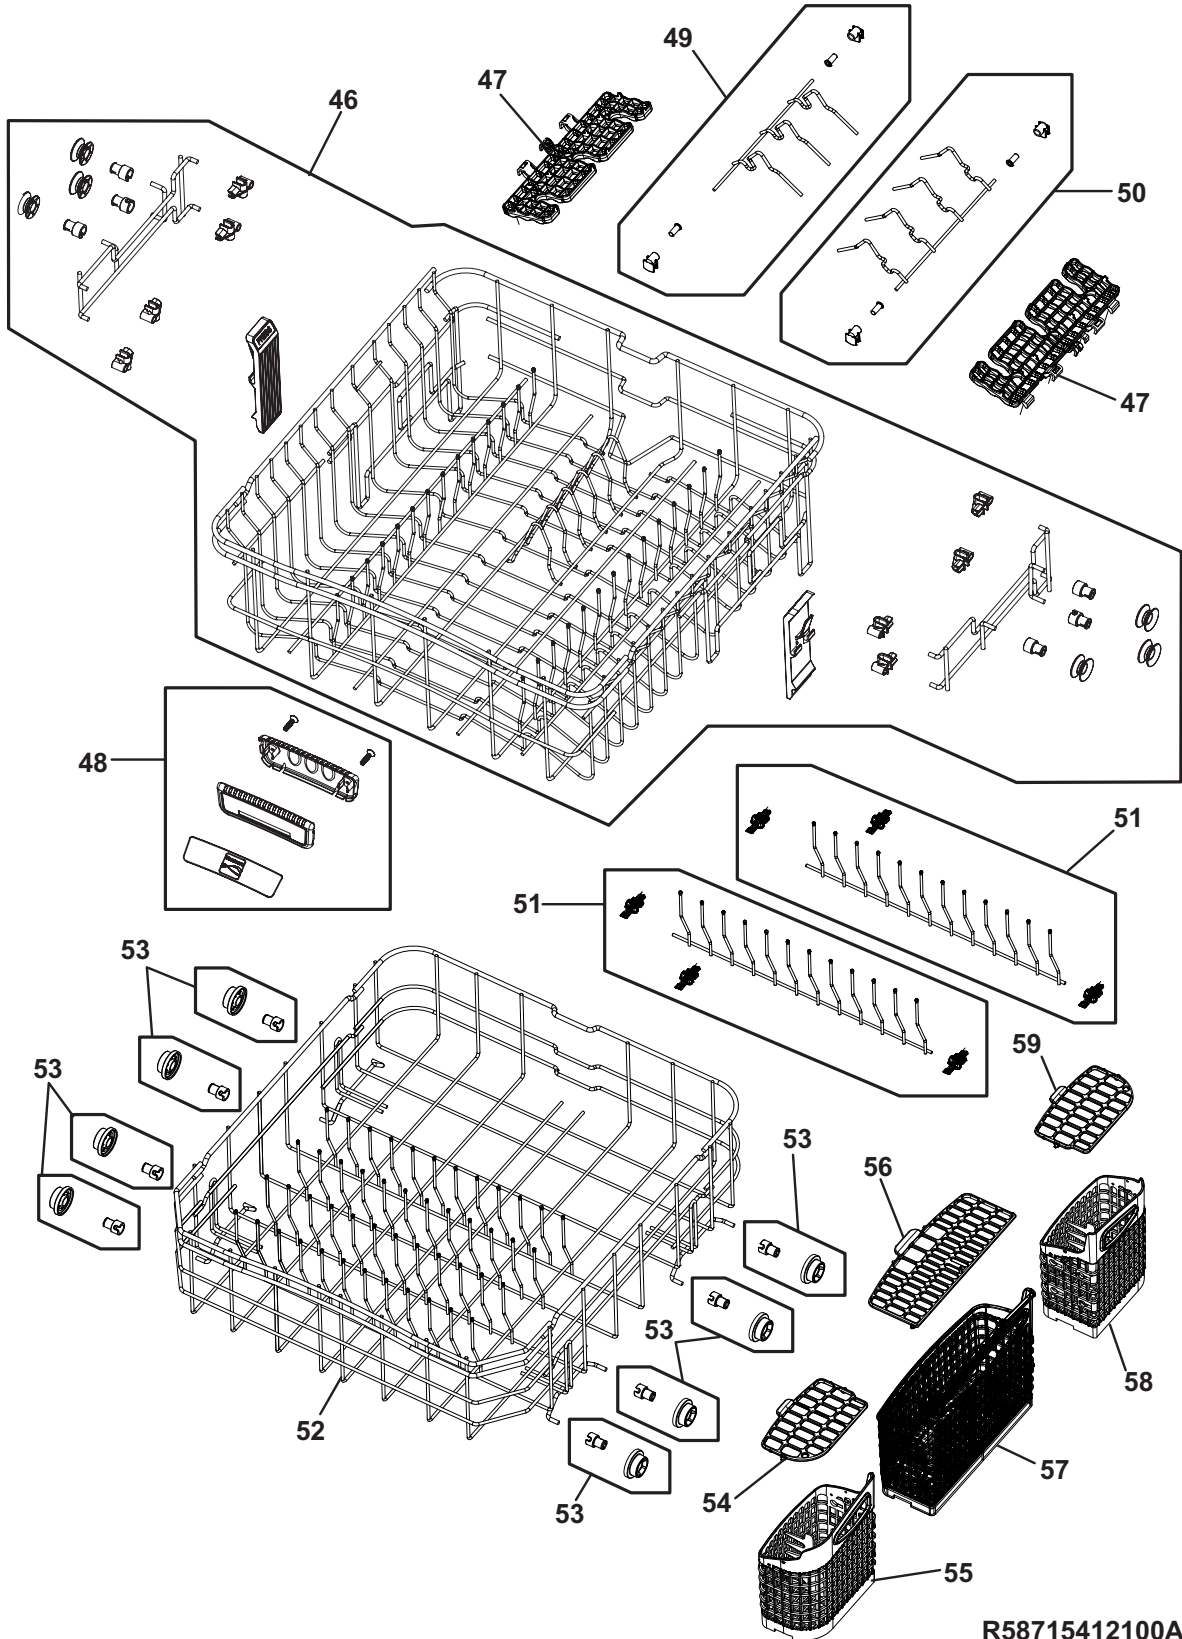

R58715412100A

RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1541 (587.15412100A)
 B 587.1541 (587.15413100A)

POS. NO	PART NO.		DESCRIPTION
46	5304484728	A B	Rack Assembly, upper, w/rollers
47	5304480733	A B	Shelf, cup
48	5304484729	A B	Handle Assembly, upper rack, w/screws
49	5304480734	A B	Fence Assembly, LH, w/bushings
50	5304480735	A B	Fence Assembly, RH, w/bushings
51	5304480736	A B	Fence Assembly, fold down, w/brackets
52	5304484730	A B	Rack Assembly, lower
53	5304480738	A B	Wheel Assembly, lower rack, (4)
54	5304475627	A B	Cover, front basket
55	5304475626	A B	Basket, silverware, front
56	5304475629	A B	Cover, middle basket
57	5304475628	A B	Basket, silverware, middle
58	5304475631	A B	Basket, silverware, rear
59	5304475630	A B	Cover, rear basket

Get it fixed, at your home or ours!

Your Home

For troubleshooting, product manuals and home solutions advice:

manage my home

www.managemyhome.com

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME[®] (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call anytime for the location of your nearest

Sears Parts & Repair Service Center

1-800-488-1222 (U.S.A.)

www.sears.com

1-800-469-4663 (Canada)

www.sears.ca

To purchase a protection agreement on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR[®]

(1-888-784-6427)

www.sears.com

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca

Sears