

## Get it fixed, at your home or ours!

### Your Home

For troubleshooting, product manuals and expert advice:



[www.managemylife.com](http://www.managemylife.com)

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

**1-800-4-MY-HOME®** Call anytime, day or night  
(1-800-469-4663) (U.S.A. and Canada)  
[www.sears.com](http://www.sears.com) [www.sears.ca](http://www.sears.ca)

### Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call anytime for the location of the nearest **Sears Parts & Repair Service Center**

**1-800-488-1222** (U.S.A.) **1-800-469-4663** (Canada)  
[www.sears.com](http://www.sears.com) [www.sears.ca](http://www.sears.ca)

To purchase a protection agreement on a product serviced by Sears:

**1-800-827-6655** (U.S.A.) **1-800-361-6665** (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas: Au Canada pour service en français:

**1-888-SU-HOGAR®** (1-888-784-6427) [www.sears.com](http://www.sears.com)  
**1-800-LE-FOYER<sup>MC</sup>** (1-800-533-6937) [www.sears.ca](http://www.sears.ca)

# Sears

® Registered Trademark / <sup>TM</sup> Trademark of KCD IP, LLC in the United States, or Sears Brands, LLC in other countries  
® Marca Registrada / <sup>TM</sup> Marca de Fábrica de KCD IP, LLC en Estados Unidos, o Sears Brands, LLC in otros países  
<sup>MC</sup> Marque de commerce / <sup>MD</sup> Marque déposée de Sears Brands, LLC

Use & Care Guide  
Manual de Uso y Cuidado  
English / Español

# Kenmore Elite® Infrared Convection Toaster Oven Convección infraroja Horno Tostador

Model/Modelos:  
100.06905 - Brushed Aluminum  
100.06915 - Black

P/N 1347790008 (0807)  
Sears Brands Management Corporation  
Hoffman Estates, IL 60179 U.S.A.  
[www.kenmore.com](http://www.kenmore.com)  
[www.sears.com](http://www.sears.com)



5/25/10

## WARRANTY

### KENMORE ELITE FULL WARRANTY

If this product fails due to a defect in material or workmanship within five years from the date of purchase, return it to any Sears store or other Kenmore outlet in the United States for free replacement.

This warranty is void if this product is ever used for other than private household purposes.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state

Sears Brands Management Corporation, Hoffman Estates, IL 60179

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, **DO NOT** immerse cord, plug, or Toaster Oven in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. **ALWAYS UNPLUG** from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. **DO NOT** use outdoors.
9. **NEVER** let the cord hang over the edge of table or counter, or touch hot surfaces.

## IMPORTANT SAFEGUARDS


10. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. **DO NOT** use this appliance for anything other than its intended use.
13. Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.
14. A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls and the like when in operation. Do not store any item on top of the appliance during operation.
15. **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
16. Extreme caution should be exercised when using containers constructed of materials other than metal or glass.
17. **DO NOT** store any materials, other than manufacturer's recommended accessories, in this toaster oven when not in use.
18. **DO NOT** place the following materials in the toaster oven: cardboard, plastic, paper, or other flammable materials.
19. **DO NOT** cover Crumb Tray or any part of the toaster oven with metal foil. This will cause overheating of the toaster oven.
20. To turn toaster oven power Off, press the STOP button until the unit beeps and shuts off, then unplug.
21. To protect against electrical shock, this appliance is equipped with a cord having a 3-prong grounding-type plug for insertion into a proper grounding-type receptacle. **DO NOT** alter the plug for use in a 2-prong receptacle. If the plug will not fit into a receptacle, have the proper receptacle installed by a qualified electrician.
22. a) A short power-supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.  
b) Extension cords are available and may be used if care is exercised in their use.  
c) If extension cord is used:
  - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and
  - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
  - 3) The extension cord should be a grounding-type 3-wire cord.
23. This appliance is not intended for use by persons (including children) with reduced physical sensory or capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

24. **This product is designed for household use only!**

25. **SAVE THESE INSTRUCTIONS!**

## PARTS AND FEATURES

 Fig. 1

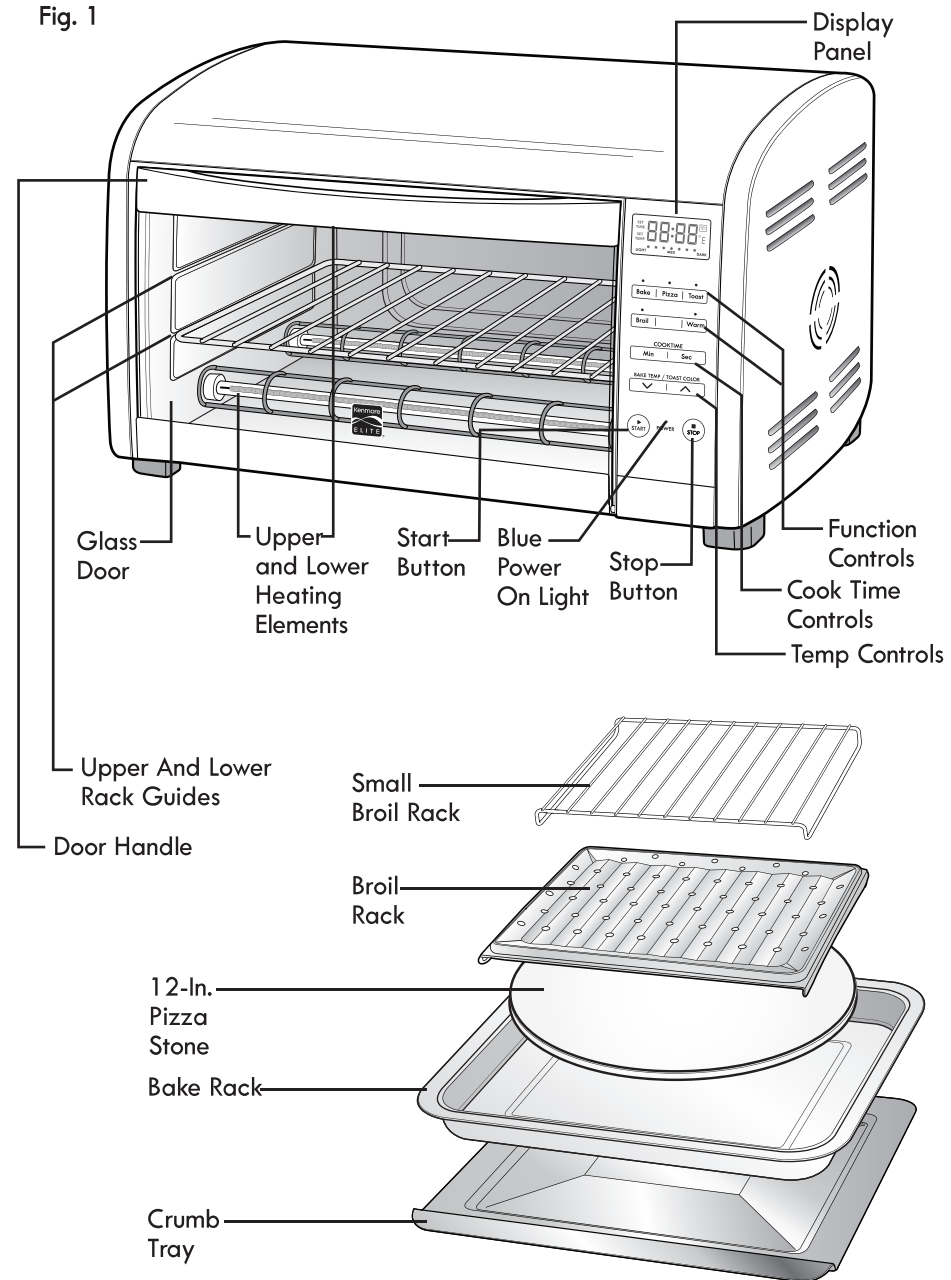

4

## OPERATING YOUR TOASTER OVEN

**⚠ CAUTION:** Appliance surfaces are hot during and after use. Always wear protective, insulated oven mitts when touching hot toaster oven or hot dishes and food, or when inserting or removing Bake Rack, Broil Rack, or other baking dishes.

### BEFORE FIRST USE:

1. Place Toaster Oven on a dry, flat, level surface such as a countertop or table.
2. Be sure the sides, back and top of the oven are at least four inches away from any walls, cabinets or objects on the counter or table.
3. Remove all accessories and wash them in hot sudsy water. Dry thoroughly before placing in the oven.

### BEFORE EACH USE:

1. Remove all items not required for the next cooking procedure.
2. Plug power cord into a standard 120-V, 60 Hz AC-only 3-prong electrical outlet. The Toaster Oven should be the only appliance operating on the circuit.

This Toaster Oven has both Infrared and Convection Technology for better, more efficient use of heat. The infrared feature utilizes halogen and quartz to cook with infrared light waves in less time than conventional ovens. The use of specific wavelengths in the electromagnetic spectrum profiled against your cooking choice results in perfectly cooked food, fast! This oven's interior heater lights cycle on and off during normal operation to cook faster than conventional ovens and more evenly.

Automatic Convection Technology features hot air circulating through the toaster oven to cook food more evenly, at lower temperatures, and often with better and faster results. Food cooks in less time in the convection oven. The Convection Feature is in operation in the Bake, Warm, and Pizza modes.

When the Toaster Oven is in these automatic Convection modes, and a small icon of a fan will be visible in the LCD display screen. The Broil and Toast modes have the infrared feature only and not the convection feature.

As soon as the Toaster Oven is plugged in, the LCD display panel and Power light illuminate blue. These stay illuminated until the Toaster Oven is unplugged.

**⚠ CAUTION:** NEVER leave Toaster Oven unattended while it is in use.

5

## OPERATING YOUR TOASTER OVEN

### BAKING

When baking one item at a time, position the Bake Rack in the Lower Rack Guides. The bakeware that will fit in the oven are: a Bundt pan, 6-cup muffin pan, 9-inch pie pan, 9-inch loaf pan, or an Angel Food cake pan.

**WARNING:** DO NOT use roasting bags, plastic or glass containers in the toaster oven.

1. Place the Bake rack in the lower rack guide.
2. Press Bake on the function controls until the Unit beeps and the blue light above the word Bake illuminates. The icon for the convection fan also illuminates. The default temperature of 350° shows up, along with the words Set Temp. To change the temperature, press the BAKE TEMP/ TOAST COLOR up or down arrows until the desired temperature is shown in the Display Panel. The oven will bake anywhere from 150° to 450°.
3. Press the COOK TIME button. 30 minutes is the default setting and shows up in the Display along with the words Set Time. To change the time, press the COOK TIME buttons, minutes or seconds, to set the desired cooking time. The cook time can be set from 99 minutes and 50 seconds to 1 minute. If you need less than 30 minutes, keep pressing the COOK TIME Minute button until the timer goes to the desired setting.
4. To Preheat the Oven once you have selected Bake, set the COOK TIME to 5 minutes and press the START button. The timer starts to count down to show the Oven is operating. When the 5 minutes are up, the Oven will beep 5 times to let you know the time is up, the blue Bake light will go out, and the Oven turns Off.
5. After Preheating the Oven, press Bake on the function controls and set the Oven to the desired settings using instructions above. If the recipe has a range of time, always start with the shortest time and check the food for doneness at this point. Press the START button to start the baking.

**NOTE:** To change cooking time or temperature during the Baking process, you must start the programming sequence over. Press the STOP button until a short beep is heard. Now press the Bake Button. The default bake temperature of 350° and the default time of 30 minutes will appear in the display. Reset the temperature and time to the desired amounts, and press the START button to resume cooking.

#### Positioning the Bake Rack

Cookies can be baked using either set of rack guides, or both positions at once (with an additional rack sold separately).

Layer cakes are baked on the lower rack guide position. Pies can be baked in either or both positions. Always bake pies on a cookie sheet to catch any spills or drips.

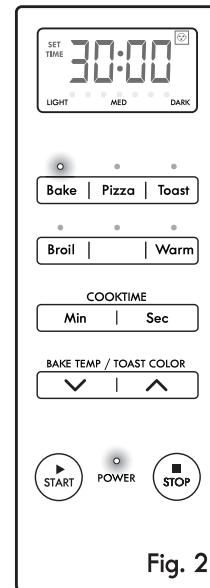 


Fig. 2

## OPERATING YOUR TOASTER OVEN

### PIZZAS

This Toaster Oven will cook up to a 12-inch pizza. A 12-inch pizza stone is included with your oven. This pizza stone has high heat retention and heats evenly for crisp crusts. The firebrick stone duplicates the results of old stone pizza ovens.

1. Place the Pizza Stone on the Oven Rack in the Lower Rack Guides.
2. Press Pizza on the function controls until the unit beeps and the blue light above the word Pizza lights up. The icon for the convection fan also illuminates. The default temperature of 400° shows up, along with the word Temp. This is the temperature setting the Oven always operates on for cooking Pizzas.
3. After about 2 seconds, the display reads Set Time and the default time of 15 minutes. To change the time, press the COOK TIME buttons, minutes or seconds, to set the desired cooking time. The cook time can be set from 99 minutes and 50 seconds to 1 minute. If you need less than 15 minutes, keep pressing the COOK TIME Minute button until the timer goes back to the desired setting.
4. To Preheat the oven once you have selected Pizza, press the Timer button for 5 minutes, then press the START button. The timer starts to count down to show the Oven is operating. When the 5 minutes are up, the Oven will beep 5 times to let you know the time is up, the blue Pizza light will go out, and the Toaster Oven turns Off. The pizza stone may be in the Oven during preheat. Once preheating is over, place pizza on preheated stone and follow directions for cooking.
5. After Preheating the Oven, press the Pizza button and set the Oven to the desired time setting using instructions above. If the recipe has a range of time, always start with the shortest time and check the food for doneness at this point. Press the START button to start the pizza cooking.

**NOTE:** To change cooking time during the pizza cooking process, you must start the programming sequence over. Press the STOP button until a short beep is heard. Now press the Pizza Button. The default bake temperature of 400° and the default time of 15 minutes will appear in the display. Reset the time to the desired amount and press the START button to resume cooking.

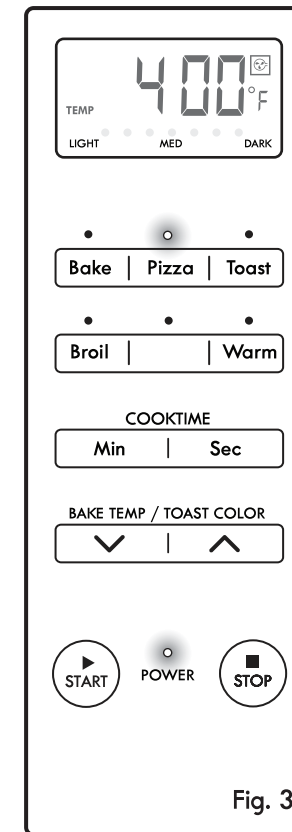 


Fig. 3

## OPERATING YOUR TOASTER OVEN

### TOASTING

The large capacity oven allows for toasting 4 to 6 slices of bread, or 6 English muffin halves, frozen waffles, or frozen pancakes. When toasting only 1 or 2 items, place the food in the center of the Toaster Oven's rack. Toasting should be done with Rack in the Lower Rack Guides.

1. When toasting, place the Bake Rack in the Lower Rack Guides.
2. Press Toast on the function controls until the Unit beeps and the blue light above the word Toast lights up. The default color setting for Medium toast doneness illuminates. Note that the COOK TIME button does not work in the Toast mode. You press the BAKE TEMP/ TOAST COLOR arrows to change the setting. Blue dots illuminate along the bottom of the display window, going from light to medium and dark, totally 7 different color settings for the amount of color or doneness desired.
3. Be sure the crumb tray is in place in the bottom of Toaster Oven.
4. Place the food to be toasted on the Bake Rack and close the Glass Door. Press the START button to begin the Toasting. The timer starts to count down to show the Oven is working. When the time is up the oven will beep 5 times, the blue Toast light goes out, and the Toaster Oven turns Off.
5. To stop toasting before the time is up, press the STOP button. The Oven beeps once and the Toast button lights go out to show Oven is Off.

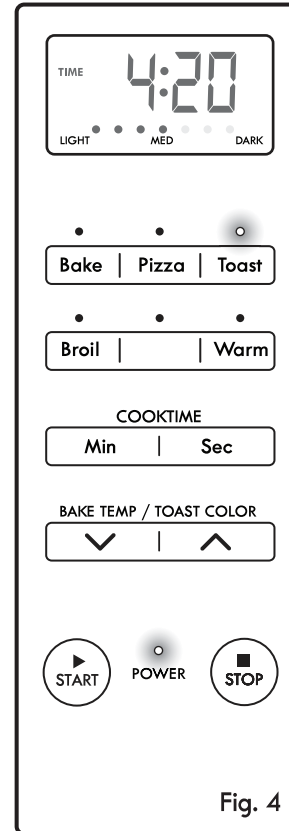 


Fig. 4

**NOTE:** To change cooking time during the toasting process, you must start the programming sequence over. Press the STOP button until a short beep is heard. Now press the Toast Button, then the BAKE TEMP/ TOAST COLOR arrows to change the setting. Press the START button to resume cooking.

## OPERATING YOUR TOASTER OVEN

### BROILING

1. For Broiling, put the Bake Rack in the Upper Rack Guides.
2. Press Broil on the function controls until the Unit beeps and the blue light above the word Broil lights up. The default temperature of 450° shows up, along with the word Temp. This is the temperature setting the Oven always operates on for broiling.
3. After about 2 seconds, the display reads Set Time and the default time of 15 minutes. To change the time, press the COOK TIME buttons, minutes or seconds, to set the desired cooking time. The cook time can be set from 99 minutes and 50 seconds to 1 minute. If you need less than 15 minutes, keep pressing the COOK TIME Minute button until the timer goes back to the desired setting.
4. To Preheat the oven once you have selected Broil, press the COOK TIME until 5 minutes is displayed, then press the START button. The timer starts to count down and the blue Broil light comes on to show that the Oven is operating. When the 5 minutes are up the oven will beep 5 times, the blue Broil light goes out, and the Toaster Oven turns Off.
5. While Oven is preheating, place the Broil Rack onto the Bake Pan, with the Broil Rack sides facing the into Bake pan to allow space in between the pans. Place the food to be broiled onto the Broil Rack. Brush food with sauce or oil as desired.
6. After Preheating the Oven, place the Pans with the food into the Oven. Press the Broil button and set the Oven to the desired time setting using instructions above. If the recipe has a range of time, always start with the shortest time and check the food for doneness at this point. Press the START button to start the broiling process.

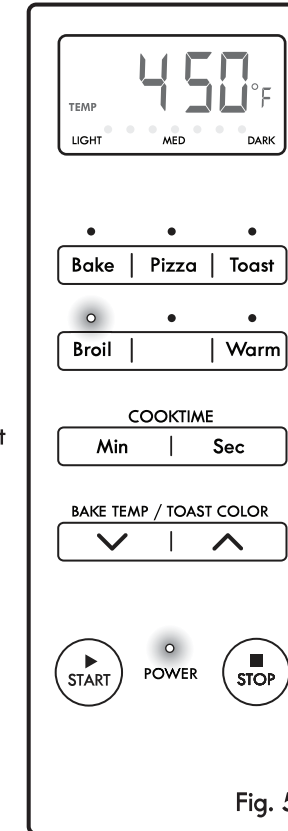 


Fig. 5

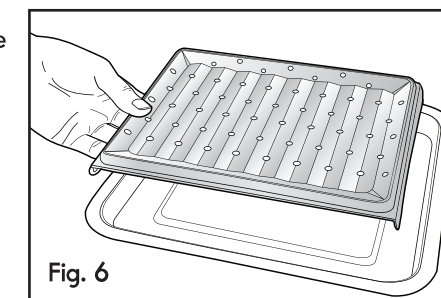 


Fig. 6

## OPERATING YOUR TOASTER OVEN

### BROILING cont.

7. Turn food over halfway through cooking time or as directed in recipe.
8. When broiling time is up, the Oven will beep 5 times, the blue Broil light will go out and the Oven will be Off. To stop the broiling earlier, press and hold the STOP button until a beep is heard and the Broil light goes out.

**NOTE:** To change cooking time during the broiling process, you must start the programming sequence over. Press and hold the STOP button until a short beep is heard. Now press the Broil Button, then the COOK TIME buttons to change the setting. Press the START button to resume cooking.

### WARMING

Cooked foods can be kept warm in the Oven. The default time for the Warm feature is 30 minutes. Longer than 60 minutes is not recommended.

1. Place the Bake Rack in the Lower Rack Guides.
2. Press Warm on the function controls until the Unit beeps and the blue light above the word Warm lights up. The icon for the convection fan also illuminates. The default temperature of 200° shows up, along with the word Temp. This is the temperature setting the Oven always operates on for warming.
3. After about 2 seconds, the display reads Set Time and the default time of 30 minutes. To change the time, press the COOK TIME buttons, minutes or seconds, to set the desired warming time. The time can be set from 99 minutes and 50 seconds to 1 minute. If you need less than 30 minutes, keep pressing the COOK TIME Minute button until the timer goes back to the desired setting.
4. Place the covered food on the Bake Rack and press the START button.
5. When the warming time is up, the Toaster Oven beeps 5 times, the blue Warm light goes out, and the Oven is Off.
6. To stop the warming time earlier, press the STOP button

**NOTE:** To change time during the warming process, you must start the programming sequence over. Press the STOP button until a short beep is heard. Now press the Warm Button. The default warming temperature of 200° and the default time of 30 minutes will appear in the display. Reset the time to the desired amount and press the START button to resume warming.

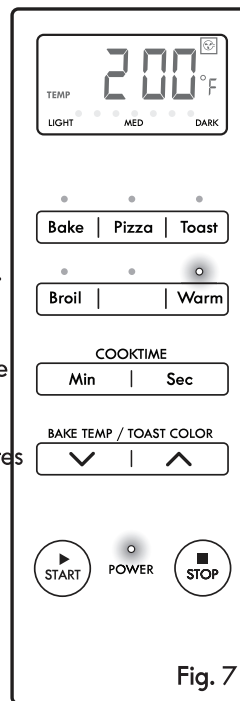 


Fig. 7

## CARE AND CLEANING

### ⚠ WARNING:

- DO NOT immerse Toaster Oven in water or any other liquid.

1. Make sure the STOP button has been pressed and the Oven is unplugged from the electric outlet before cleaning.
2. Allow oven and accessories to cool completely before cleaning.

**NOTE:** Sugar and Salt based foods have a tendency to stick to all surfaces and are very hard to clean. When cooking these types of foods with the Bake Pan and Broil Rack, soak and clean them immediately after each use.

3. All accessories should be washed by hand in hot sudsy water. Rinse and dry all accessories thoroughly. Automatic dishwashing not recommended.
4. The Glass Door can be wiped clean with a damp sponge and wiped dry with a paper or cloth towel.
5. To clean the crumb tray, slide it out of the oven and brush off crumbs. Wipe with a damp cloth and dry thoroughly.
6. Baked on stains can be removed with a paste made from baking soda and water. Rinse and dry thoroughly.
7. Clean the outside with a clean damp sponge or cloth and dry thoroughly. A non-abrasive liquid cleaner may be used for stubborn stains. Rinse and dry thoroughly. NEVER immerse Toaster Oven in water or any liquid.

**⚠ CAUTION:** NEVER use steel wool, scouring pads or abrasive cleaners to clean any parts of Toaster Oven interior, exterior, or Accessories.

8. Allow all parts and surfaces to dry thoroughly before plugging in and using Toaster Oven.
9. Any other servicing should be preformed by an authorized service Representative.