

## KDC-400U

### CD-RECEIVER INSTRUCTION MANUAL

JVC KENWOOD Corporation

Before reading this manual, click the button below to check the latest edition and the modified pages.



**Take the time to read through this instruction manual.**

**Familiarity with installation and operation procedures will help you obtain the best performance from your new CD-receiver.**

#### For your records

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your Kenwood dealer for information or service on the product.

Model KDC-400U Serial number \_\_\_\_\_

**US Residence Only**

**Register Online**

Register your Kenwood product at [www.Kenwoodusa.com](http://www.Kenwoodusa.com)

## How to read this manual

### Function setting procedure

For the procedure for selecting a setting item in the Function setting mode, see the following example:


#### Example: Adjusting the contrast of the display

##### 1 Enter the Function setting mode

Press and hold the Control knob.

"Function" is displayed.

##### 2 Select the Contrast function item

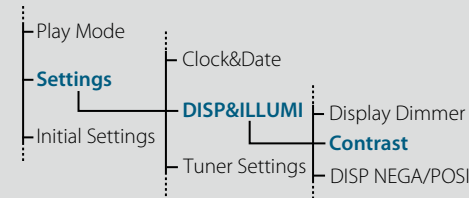

Turn the Control knob to select "Settings", and then press the Control knob.

Next, turn the Control knob to select "DISP&ILLUMI", and then press the Control knob.

Finally, turn the Control knob to select "Contrast", and then press the Control knob.

**In this manual, the above operational procedure is described as follows:**

##### 2 Select the Contrast function item

Select the following items using the Control knob.

"Settings" > "DISP&ILLUMI" > "Contrast"

Press the [↵] button to return to the previous item.



- Clicking near the description of an operational procedure displays this page, allowing you to confirm how to use the Control knob.

##### 3 Set the Contrast function

Turn the Control knob to select a value (1 - 30), and then press the Control knob.

The previous item is displayed.

##### 4 Exit the Function setting mode

Press and hold the [↵] button.

### About the notation "Contents"

Clicking "Contents" shown at the upper left of each page allows you to jump to the contents page.

# Contents

<b>Before use</b>	<b>4</b>	<b>General operation</b>	<b>28</b>	<b>Appendix</b>	<b>48</b>
<b>Component names</b>	<b>6</b>	Adjusting the clock		<b>Troubleshooting guide</b>	<b>50</b>
<b>Audio adjustments</b>	<b>8</b>	Adjusting the date		<b>Specifications</b>	<b>54</b>
Audio control		Dual clock display			
Audio preset memory		Clock & date display type setting			
Audio preset recall		Auxiliary input display setting			
<b>iPod control operation</b>	<b>10</b>	Muting the audio upon reception of a phone call			
Music search		Initial settings			
Alphabet search		Demonstration mode setting			
Related search		<b>SiriusXM Vehicle Connect Tuner Control</b>	<b>34</b>		
Direct search		<b>(optional tuner and service required)</b>			
Skip search		Before use			
Skip search ratio setting		Basic operations			
Playback mode		Category and channel search			
<b>Pandora® internet radio control</b>	<b>14</b>	Channel preset memory			
Listening to the Pandora® internet radio		Preset tuning			
Basic operations		Channel scan			
Station search		Direct access tuning			
Bookmark registration		Seek mode setting			
Search and new station registration		iTunes tagging			
Deletion of station		Parental Lock setting			
Pandora source control		Clearing the Parental Lock setting			
<b>Music disc/Audio file (CD or USB)</b>	<b>18</b>	Setting Parental Lock for Mature content			
Music search		Parental Lock pass code setting			
Skip search		Content alert			
Playback mode		Content alert setting			
Direct music search		Editing a Content alert item			
<b>Tuner operation</b>	<b>20</b>	Delete a Content alert item			
Auto memory		Instant Replay			
Tuner setting		Channel skip setting			
Direct access tuning		Clearing the channel skip setting			
PTY (Program Type)		SiriusXM tuner setting			
Program Type presetting		<b>Basic operation of remote control</b>	<b>46</b>		
<b>Display settings</b>	<b>24</b>	General control			
Selecting a display type		On Tuner source			
Selecting a text display		On CD/Audio file source			
Information display setting		On iPod source			
Illumination color selection		On Pandora internet radio source			
Display & Illumination setting		On SiriusXM tuner source			

## Before use

### Before using this unit for the first time

This unit is factory-set to operate in the Demonstration mode initially. When using this unit for the first time, cancel the Demonstration mode. Refer to <Exiting the Demonstration mode> (page 4) in Quick Start Guide.

### ⚠ WARNING

#### To prevent injuries or a fire, take the following precautions:


- Stop the car before operating the unit.
- To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.

### ⚠ CAUTION

- Adjust the volume so that you can hear the sound outside the car. Driving with the volume too high may cause an accident.
- Wipe off the dirt on the panel with a dry silicon or soft cloth. Failure to observe this precaution may result in damage to the monitor or unit.

### Cleaning the connector

The unit may not function properly if the connectors between the unit and faceplate are dirty. Detach the faceplate and clean the connector with a cotton swab gently, being careful not to damage the connector.

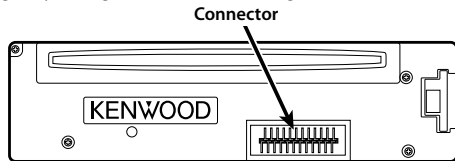

### Condensation

When the car is air-conditioned, moisture may collect on the laser lens. This may cause disc read errors. In this case, remove the disc and wait for the moisture to evaporate.

### Notes

- If you experience problems during installation, consult your Kenwood dealer.
- When you purchase optional accessories, check with your Kenwood dealer to make sure that they can work with your model and in your area.
- Characters that conform to ISO 8859-1 can be displayed.
- The illustrations of the display and panel appearing in this manual are examples used to explain more clearly how the controls are used. Therefore, what appears on the display in the illustrations may differ from what appears on the display on the actual equipment, and some of the images on the display may be inapplicable.

### About the discs used with this unit


- This unit can only play the CDs with .
- The following discs cannot be used:
  - A disc that is not round
  - A disc with coloring on the recording surface or a disc that is dirty
  - A recordable/rewritable disc that has not been finalized (For the finalization process, refer to the instruction manual that came with your disc writing software or your disc recorder.)
  - An 8 cm (3 inch) disc (An attempt to insert using an adapter can cause malfunction.)

### Handling discs


- Do not touch the recording surface of the disc.
- Do not stick tape etc. on the disc, or use a disc with tape stuck on it.
- Do not use any accessories for the disc.
- Do not use any solvents to clean discs. Use a dry silicon or soft cloth.
- Clean the disc by moving the cloth outward from the center of the disc.
- When removing a disc from this unit, pull it out horizontally.
- If the center hole or outside rim of a disc has burrs, remove them before inserting a disc.

### How to reset your unit

If the unit fails to operate properly, press the Reset button. The unit returns to the factory settings when the Reset button is pressed.

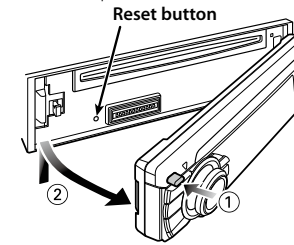

## Component names

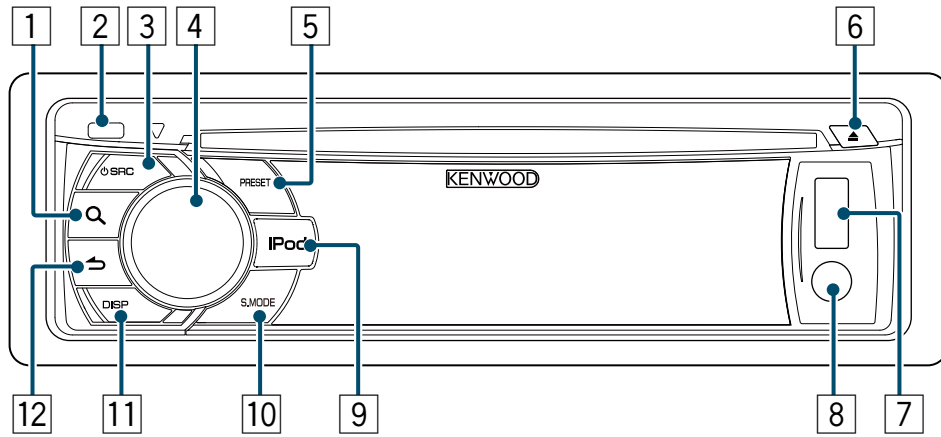

- 1 [Q] button
- 2 Release button
- 3 [SRC] button
- 4 Control knob
- 5 [PRESET] button
- 6 [▲] button
- 7 USB terminal
- 8 Auxiliary input
- 9 [iPod] button
- 10 [S.MODE] button
- 11 [DISP] button
- 12 [➡] button

# Audio adjustments

## Audio control

You can adjust the following audio control items;

Display	Audio setting item	Range
"SubWoofer Level"	Subwoofer level	-15 — +15 (dB)
"Bass Level"	Bass level	-8 — +8 (dB)
"Middle Level"	Middle level	-8 — +8 (dB)
"Treble Level"	Treble level	-8 — +8 (dB)
"Preset Equalizer"	Preset Equalizer curve	"Rock"/"Pops"/"Easy"/ "Top40"/"Jazz"/ "Powerful"/"Natural"/ "User"*
"Bass Boost"	Bass Boost	"Level1"/"Level2"/ "Level3"/"OFF"
"Loudness"	Loudness	"Level1"/"Level2"/ "OFF"
"Balance"	Balance	Left 15 — Right 15
"Fader"	Fader	Rear 15 — Front 15
"SubWoofer"	Subwoofer output	OFF/ ON
<b>"Detailed Settings"</b>		
"HPF"	High Pass Filter	Through/ 100/ 120/ 150 (Hz)
"LPF SubWoofer"	Low Pass Filter	85/ 120/ 160/ Through (Hz)
"SubWoofer Phase"	Subwoofer Phase	Reverse (180°)/ Normal (0°)
"Supreme"	Supreme setting	ON/ OFF
"Audio Preset"	Audio Preset memory*	Recall/ Memory
"Volume Offset"	Volume offset	-8 — ±0 (dB) (AUX: -8 — +8)

\*Refer to <Audio preset memory> (page 9), <Audio preset recall> (page 9).

\*User\*: The customized Bass, Middle, and Treble settings are effective.



- You can set Bass, Middle, and Treble levels for each source. About Supreme Technology to extrapolate and supplement with proprietary algorithm, the high-frequency range that is cut off when encoding at low bit rate (less than 128Kbps, Sampling frequency is 44.1kHz). Supplementing is optimized by a compression format (AAC, MP3 or WMA) and processed according to bit rate. The effect is negligible with music that is encoded at high bit rate or variable bit rate or music that has a minimal high frequency range.

- Select the source to adjust**  
Press the [SRC] button.
- Enter the Audio control mode**  
Press the Control knob.
- Select the audio item subject to adjustment**  
**Turn the Control knob to select the audio item subject to adjustment and then press the Control knob.**  
Press the [↵] button to return to the previous item.
- Adjust the value set for the selected audio item**  
**Turn the Control knob to display the value to adjust, and then press the Control knob.**  
The previous item is displayed.
- Exit the Audio control mode**  
Press and hold the [↵] button.

## Audio preset memory

You can register the values set the Audio control items.

- Set the audio control items**  
Refer to <Audio control> (page 8).
- Enter the Audio control mode**  
Press the Control knob.
- Select the Audio preset memory mode**  
Select the following items using the Control knob.  
"Detailed Settings" > "Audio Preset"
- Select the Audio preset memory**  
Turn the Control knob to select "Memory", and then press the Control knob.
- Determine the selection**  
Turn the Control knob to select "YES", and then press the Control knob.  
"Memory Completed" is displayed.
- Exit the Audio Control mode**  
Press and hold the [↵] button.



- Register a pair of Audio preset memories. You cannot register them by source.
- When you press the [Reset] button, audio control values of all sources will be set to the values registered here.
- The following Audio control items can be registered.  
"Bass Level", "Middle Level", "Treble Level", "SubWoofer Level", "HPF", "LPF SubWoofer", "SubWoofer Phase"

## Audio preset recall

You can recall the Audio control items registered to the <Audio preset memory> (page 9).

- Select a source**  
Press the [SRC] button.
- Enter the Audio control mode**  
Press the Control knob.
- Select the Audio preset memory mode**  
Select the following items using the Control knob.  
"Detailed Settings" > "Audio Preset"
- Select the Audio preset recall**  
Turn the Control knob to select "Recall", and then press the Control knob.
- Determine the selection**  
Turn the Control knob to select "YES", and then press the Control knob.  
"Recall Completed" is displayed.
- Exit the Audio Control mode**  
Press and hold the [↵] button.

## iPod control operation

For the basic operations to play iPod contents, refer to the Quick Start Guide.

### Music search

You can search for the song you want to play.

- 1 Enter the Music search mode**  
Press the [Q] button.  
"MUSICSEARCH" is displayed.

- 2 Search for a song**

Operation type	Operation
Movement between items	Turn the Control knob.
Move to the Alphabet search mode	Press and hold the [Q] button. Refer to <Alphabet search> (page 10).
Selection of item	Press the Control knob.
Return to previous item	Press the [↵] button.
Return to Top menu	Push and hold the Control knob leftward.

#### Canceling the Music search mode

Press and hold the [↵] button.



- If no characters included in a song name can be displayed, the browse item name and digits are displayed.

Items	Display	Items	Display
Playlists	"PLIST****"	Podcasts	"PDC****"
Artists	"ART****"	Genres	"GEN****"
Albums	"ALB****"	Composers	"COM****"
Songs	"PRGM****"		

### Alphabet search

You can select an alphabetic character from the list in the browse item (artist, album, etc.) currently selected.

- 1 Enter the Music search mode**  
Press the [Q] button.  
"MUSICSEARCH" is displayed.
- 2 Enter the Search select mode**  
Press the [S.MODE] button.
- 3 Select the Alphabet search mode**  
Turn the Control knob to select "Alphabet Search", and then press the Control knob.
- 4 Search for characters**

Operation type	Operation
Selection of characters	Turn the Control knob.
Determination of the selected characters.	Press the Control knob.

Return to the Music search mode.

#### Canceling the Alphabet search mode

Press and hold the [↵] button.



- Turning the Control knob fast in the Music search mode allows you to enter the alphabet search mode.
- The time of Alphabet search may become long depending on the number of items (songs) in iPod.
- To search for a character other than A to Z and 1, enter "\*".
- If the first character string begins with an article "a", "an", or "the" in the alphabet search mode, it is searched for in defiance of the article.

### Related search

You can browse for music of the same artist or genre as the one being played.

- 1 Enter the Search select mode**  
Press the [S.MODE] button.
- 2 Select the Related search mode**  
Turn the Control knob to select "Related Search", and then press the Control knob.
- 3 Select a desired brows item**  
Turn the Control knob to select a browse item, and then press the Control knob.

Display	Browse item
"Search Artist"	Displays the album of the same artist.
"Search Album"	Displays music in the album in which the one being played is included.
"Search Genre"	Displays the artist of the same genre.
"Search Composer"	Displays the album including music created by the same composer.

- 4 Search for music**

Operation type	Operation
Movement between items	Turn the Control knob.
Selection of item	Press the Control knob.
Return to previous item	Press the [↵] button.

#### Canceling the Related search mode

Press and hold the [↵] button.



- Related search cannot be performed during Podcast playback.
- When the music being played has no information on the browse item or no music was found, "Not Found" is displayed.

### Direct search

You can search for music by selecting a browse item and an alphabetic character(s).

- 1 Enter the Music search mode**  
Press the [Q] button.  
"MUSICSEARCH" is displayed.
- 2 Enter the Search select mode**  
Press the [S.MODE] button.
- 3 Select Direct search mode**  
Turn the Control knob to select "Direct Search", and then press the Control knob.
- 4 Select a browse item**  
Turn the Control knob to select browse item, and then press the Control knob.

Display	Browse item
"PLAYLISTS"	Playlists
"ARTISTS"	Artists
"ALBUMS"	Albums
"SONGS"	Songs
"PODCASTS"	Podcasts
"GENRES"	Genres
"COMPOSERS"	Composers

- 5 Select the character(s) to be searched for**  
Turn the Control knob to select a character(s), and then press the Control knob.  
You can select up to three characters.
- 6 Search for music**  
Turn the Control knob to select "DONE", and then press the Control knob.  
A search result list is displayed.
- 7 Select the music**  
Turn the Control knob to select music, and then press the Control knob.

#### Canceling the Direct search mode

Press and hold the [↵] button.

## iPod control operation

### Skip search

You can search for a song by skipping songs at the set skip search ratio (the ratio of the number of songs to skip to the total number of songs in the selected list)

**1 Enter the Music search mode**

Press the [Q] button.

"MUSICSEARCH" is displayed.

**2 Enter the Search select mode**

Press the [S.MODE] button.

**3 Select Skip search mode**

Turn the Control knob to select "Skip Search", and then press the Control knob.

**4 Search for music**

Operation type	Operation
Movement between items	Turn the Control knob.
Skip Search	Push the Control knob upward or downward.
Selection of item	Press the Control knob.
Setting of skip search ratio	Push the Control knob rightward or leftward.

**Canceling the Music search mode**

Press and hold the [↵] button.



- The skip search ratio is set to 0.5% as default. Refer to <Skip search ratio setting> (page 12).
- Press and hold the Control knob to skip songs at 10% regardless of the setting.

### Skip search ratio setting

You can change the ratio of skip performed as mentioned in <Skip search> (page 12).

**1 Select the iPod source**

Press the [SRC] button.

Select the "iPod" display.

**2 Enter the Function setting mode**

Press and hold the Control knob.

**3 Select the Skip search ratio item**

Select the following items using the Control knob.

"Settings" > "Skip Search"

**4 Set a Skip search ratio**

Turn the Control knob to select a ratio ("0.5%", "1%", "5%", or "10%"), and then press the Control knob.

**5 Exit the Function setting mode**

Press and hold the [↵] button.

### Playback mode

You can select a playback mode, such as Random play and Repeat play.

**1 Select the iPod source**

Press the [SRC] button.

Select the "iPod" display.

**2 Enter the Function setting mode**

Press and hold the Control knob.

**3 Select the Play mode**

Turn the Control knob to select "Play Mode", and then press the Control knob.

**4 Select a desired playback mode function**

Turn the Control knob to select playback mode function, and then press the Control knob.

Display	Description
"Play Mode"	
"APP & iPod Mode"	When set to "ON", allows you to operate the iPod with the control on the iPod. "ON" / "OFF"
"Folder Random"	When set to "ON", plays the songs in the folder randomly. (Music only) "ON" / "OFF"
"All Random"	When set to "ON", plays all songs in the iPod randomly. (Music only) "ON" / "OFF"
"File Repeat"	When set to "ON", plays the song repeatedly. "ON" / "OFF"

( \_ : Factory setting)

**5 Determine the selection**

Press the Control knob.

The previous item is displayed.

**6 Exit the Function setting mode**

Press and hold the [↵] button.



- When "APP & iPod Mode" is set to "ON", this unit can control only the "Pause and play", "Selecting a song", and "Fast Forward or Fast Backward of the Song" functions.

## Pandora® internet radio control

### Listening to the Pandora® internet radio

You can listen to the Pandora® internet radio on this unit by controlling the application installed in the iPhone.

#### 1 Connect your iPhone device to this unit Use the KCA-iP102 (optional accessory) to connect the iPhone to this unit.

Make sure that the home screen is displayed on the iPhone.

#### 2 Select the Pandora source Press the [SRC] button.

Select the "Pandora"/"📻" display.

On the iPhone, the Pandora internet radio application starts automatically.



- If the version of the OS of the connected iPhone is earlier than 4.0, start the Pandora internet radio application before selecting the Pandora source.

### Basic operations

#### Pause and Play

Press the [⏮] button to interrupt or resume playback.

#### Thumbs up

Press and hold the [PRESET] button.

"👍" is displayed.

#### Thumbs down

Press and hold the [S.MODE] button.

"👎" is displayed.

The current song is skipped

#### Song skip

Push the Control knob rightward.

If the skip count limit specified by Pandora is exceeded, "No skips remaining" is displayed.

### Station search

You can select the station you want to listen to from your station list.

#### 1 Select the Pandora source

Press the [SRC] button.

Select the "Pandora"/"📻" display.

#### 2 Enter the Station List mode

Press the [Q] button.

"Station List" is displayed.

#### 3 Select a sort type

Turn the Control knob to select "A-Z" (stations are displayed in alphabetical order) or "By Date" (stations are displayed in date order), and then press the Control knob.

A station list is displayed.

#### 4 Select a desired station

Turn the Control knob to select your desired station, and then press the Control knob.



- The 🎵 indicator is displayed for the station you are listening to.

### Bookmark registration

You can register the current song information or artist information in Bookmark.

#### 1 Select the Pandora source

Press the [SRC] button.

Select the "Pandora"/"📻" display.

#### 2 Enter the Function setting mode

Press and hold the Control knob.

#### 3 Select the Bookmarks item

Turn the Control knob to select "Bookmarks", and then press the Control knob.

#### 4 Select an information type

Turn the Control knob to select "Bookmark Song" (to register song information) or "Bookmark Artist" (to register artist information), and then press the Control knob.

"Adding bookmark" is displayed. The information about the song you are listening to now is added to the bookmark.



- This unit allows you to bookmark songs and/or artists in your personalized Pandora® account. The bookmarks will not be available for review on the unit but will be available in your Pandora® account.



## Pandora® internet radio control

### Search and new station registration

You can search for a desired station by specifying its character. You can register the displayed station as a new station in your station list.

**1 Select the Pandora source**

Press the [SRC] button.  
Select the "Pandora"/"Ⓟ" display.

**2 Enter the Function setting mode**

Press and hold the Control knob.

**3 Select the New Stations item**

Turn the Control knob to select "New Stations", and then press the Control knob.

**4 Select the character to be searched for**

Operation type	Operation
Selection of characters	Turn the Control knob.
Determination of the selected characters.	Press the Control knob.
Select the column	Push the Control knob rightward or leftward.

Up to 5 characters can be entered.

**5 Start station search**

Turn the Control knob to select "DONE", and then press the Control knob.  
Station search starts.

**6 Select a desired station**

Turn the Control knob to select a station, and then press the Control knob.  
The broadcast from the selected station is received and the station is registered in the station list.

**Canceling the Function setting mode**

Press and hold the [↵] button.

### Deletion of station

You can delete registered station information from your station list.

**1 Select the Pandora source**

Press the [SRC] button.  
Select the "Pandora"/"Ⓟ" display.

**2 Enter the Function setting mode**

Press and hold the Control knob.

**3 Select the Station delete item**

Turn the Control knob to select "Station Delete", and then press the Control knob.

**4 Select a sort type**

Turn the Control knob to select "A-Z" (stations are displayed in alphabetical order) or "By Date" (stations are displayed in date order), and then press the Control knob.  
A station list is displayed.

**5 Select the station to delete**

Turn the Control knob to select a station, and then press the Control knob.

**6 Determine the selection**

Turn the Control knob to select "YES", and then press the Control knob.  
"Completed" is displayed.

**Canceling the Function setting mode**

Press and hold the [↵] button.

### Pandora source control

You can turn on/off the Pandora source.

**1 Select the Standby**

Press the [SRC] button.  
Select the "STANDBY" display.

**2 Enter the Function setting mode**

Press and hold the Control knob.

**3 Select the Pandora source control item**

Select the following items using the Control knob.  
"Initial Settings" > "Pandora Source"

**4 Select a Pandora source control method**

Turn the Control knob to select a control method, and then press the Control knob.

Display	Description
"ON"	Turns on the Pandora source.
"OFF"	Turns off the Pandora source.

**5 Exit the Function setting mode**

Press and hold the [↵] button.

## Music disc/Audio file (CD or USB) operation

For the basic operations to play Music disc/Audio file contents, refer to the Quick Start Guide.

### Music search

You can select the music you want to listen to from the device or media being played now.

#### 1 Enter the Music search mode

Press the [Q] button.

"MUSICSEARCH" is displayed.

#### 2 Search for music

##### Audio file

Operation type	Operation
Movement between folders/files	Turn the Control knob.
Selection of folder/file	Press the Control knob.
Return to previous folder	Press the [↶] button.
Return to root folder	Push and hold the Control knob leftward.
Cancellation of Music search mode	Press and hold the [↷] button.

🎵 indicator: Audio file

📁 indicator: Folder

##### CD source

Operation type	Operation
Movement between track	Turn the Control knob.
Selection of track	Press the Control knob.
Return to first track	Push and hold the Control knob leftward.
Cancellation of Music search mode	Press the [↷] button.

### Music Editor media

#### Skip search

You can search for a song by skipping songs at the set skip search ratio (the ratio of the number of songs to skip to the total number of songs in the selected list).

#### 1 Enter the Music search mode

Press the [Q] button.

"MUSICSEARCH" is displayed.

#### 2 Enter the Search select mode

Press the [Q] button.

#### 3 Select the Skip search mode

Turn the Control knob to select "Skip Search", and then press the Control knob.

#### 4 Search for music

Operation type	Operation
Movement between items	Turn the Control knob.
Skip search	Push the Control knob upward or downward.
Selection of item	Press the Control knob.
Setting of skip search ratio	Push the Control knob rightward or leftward.

#### Canceling the Music search mode

Press and hold the [↷] button.



- The skip search ratio is set to 0.5% as default. Refer to <Skip search ratio setting> (page 12).
- Press and hold the Control knob to skip songs at 10% regardless of the setting.

### Playback mode

You can select a playback mode, such as Random play and Repeat play.

#### 1 Select the CD/ USB source

Press the [SRC] button.

Select the "CD" or "USB" display.

#### 2 Enter the Function setting mode

Press and hold the Control knob.

#### 3 Select the Playback function mode

Turn the Control knob to select "Play Mode", and then press the Control knob.

#### 4 Select a desired playback mode

Turn the Control knob to select a playback mode, and then press the Control knob.

Display	Description
"Play Mode"	
"Track Scan" (CD)/ "File Scan" (Audio file)	When set to "ON", plays the intros of the songs in the CD/folder successively. "ON" / "OFF"
"Disc Random" (CD)/ "Folder Random" (Audio file)	When set to "ON", plays the songs in the CD/folder randomly. "ON" / "OFF"
"All Random" (Audio file)	When set to "ON", plays all songs in the disc/USB randomly. "ON" / "OFF"
"Track Repeat" (CD)/ "File Repeat" (Audio file)	When set to "ON", plays the selected song repeatedly. "ON" / "OFF"
"Folder Repeat" (Audio file)	When set to "ON", plays the songs in the folder repeatedly. "ON" / "OFF"

( \_ : Factory setting)

#### 5 Exit the Function setting mode

Press and hold the [↷] button.

### Function of remote control

#### Direct music search

You can search for music by entering the track number.

#### 1 Enter the Direct Music search mode

Press the [DIRECT] button on the remote control.

"--" is displayed.

#### 2 Enter the music number

Press the number buttons on the remote control.

#### 3 Search for music

Press the [◀◀] or [▶▶] button on the remote control.

#### Canceling the Direct music search mode

Press the [↷] button on the remote control.

## Tuner operation

For the basic operations to listen to the radio, refer to the Quick Start Guide.

### Auto memory

You can register 18 (FM)/ 6 (AM) stations with good reception automatically.

- 1 Select the Tuner source**  
Press the [SRC] button.  
Select the "TUNER" display.
- 2 Enter the Function setting mode**  
Press and hold the Control knob.
- 3 Select the Auto memory function item**  
Select the following items using the Control knob.  
"Settings" > "Auto Memory"
- 4 Start storing stations in the Auto memory mode**  
Turn the Control knob to select "YES", and then press the Control knob.  
When 18 (FM)/ 6 (AM) stations that can be received are stored in the memory, the process in this mode is completed.

### Tuner setting

You can set up the tuner.

- 1 Select the Tuner source**  
Press the [SRC] button.  
Select the "TUNER" display.
- 2 Enter the Function setting mode**  
Press and hold the Control knob.
- 3 Select the Settings item**  
Turn the Control knob to select "Settings", and then press the Control knob.
- 4 Select a desired Tuner setting item**  
Turn the Control knob to select Tuner setting item, and then press the Control knob.

Display	Description
"Settings"	
"Seek Mode"	Sets the tuning mode. <b>Auto1:</b> Automatic search for a station. <b>Auto2:</b> Search in order of the stations in the preset memory. <b>Manual:</b> Normal manual tuning.
"MONO"	You can reduce the noise when stereo broadcasts are received as monaural. "ON" / "OFF"
"TI"	Switches to the traffic information automatically when the traffic bulletin starts. "ON" / "OFF"

( \_ : Factory setting)

- 5 Select a setting and determine it**  
Turn the Control knob to select a desired tuner setting, and then press the Control knob.  
The previous item is displayed.
- 6 Exit the Function setting mode**  
Press and hold the [↵] button.

### Function of remote control

#### Direct access tuning

You can search for a station directly by entering frequency.

- 1 Enter the Direct access tuning mode**  
Press the [DIRECT] button on the remote control.  
"----" is displayed.
- 2 Enter the frequency**  
Press the number buttons on the remote control.  
Example:

Desired frequency	Press the following buttons
92.1 MHz (FM)	[9], [2], [1]
810 kHz (AM)	[8], [1], [0]

- 3 Search for the frequency**  
Press the [◀◀] or [▶▶] button on the remote control.

#### Canceling Direct access tuning mode

Press the [↵] button on the remote control.

## Tuner operation

### PTY (Program Type)

You can search for a station by selecting a Program Type.

Program Type	Display	Program Type	Display
Speech	"Speech"	Classical	"Classicl"
Music	"Music"	R & B	"R & B"
News	"News"	Soft R & B	"Soft R&B "
Information	"Inform"	Language	"Language"
Sports	"Sports"	Religious Music	"Rel Musc"
Talk	"Talk"	Religious Talk	"Rel Talk"
Rock	"Rock"	Personality	"Persnlty"
Classic Rock	"Cls Rock"	Public	"Public"
Adult Hits	"Adlt Hit"	College	"College"
Soft Rock	"Soft Rck"	Spanish Talk	"Habl Esp"
Top 40	"Top 40"	Spanish Music	"Musc Esp"
Country	"Country"	Hip-Hop	"Hip hop"
Oldies	"Oldies"	Weather	"Weather"
Soft	"Soft"		
Nostalgia	"Nostalga"		
Jazz	"Jazz"		

- Speech and music include the following types of programs.  
Speech: Program type indicated by white letters  
Music: Program type indicated by black letters

- 1 Enter the PTY mode**  
Press the [Q] button.
- 2 Select a Program Type**  
Turn the Control knob.
- 3 Search for the station broadcasting the selected Program Type station**  
Push the Control knob rightward or leftward.
- 4 Exit the PTY mode**  
Press the [↵] button.



- This function cannot be used during reception of a traffic bulletin or AM broadcast.
- When the selected Program Type is not found, "No PTY" is displayed. Select another Program Type.

### Program Type presetting

You can store a Program Type in the Preset button memory and recall it quickly.

- 1 Select the Program Type to preset**  
Refer to <PTY (Program Type)> (page 22).
- 2 Enter the Program Type preset mode**  
Press the [PRESET] button.
- 3 Select a number and store it in the memory**  
Turn the Control knob to select a memory number ("1" – "6"), and then press and hold the Control knob.

**Canceling the Preset memory mode**  
Press the [↵] button.

#### Recalling a preset Program Type

- 1 Enter the PTY mode**  
Press the [Q] button.
- 2 Enter the Preset memory mode**  
Press the [PRESET] button.
- 3 Select the number you want to recall from the memory**  
Turn the Control knob to select a recall number ("1" – "6"), and then press the Control knob.

# Display settings

## Selecting a display type

Shown below are examples of display types.

Display type	Display information
Type A	Displays 3 lines of text.
Type B	Displays 2 line of text.
Type C	Displays the clock.
Type D	Displays the Motion graphics.
Type E	Turn off the display and key illumination. (5 seconds after completion of operation)

- 1 Enter the Function setting mode**  
Press and hold the Control knob.
- 2 Select the Display type select item**  
Select the following items using the Control knob.  
"Settings" > "DISP&ILLUMI" > "Display Select" > "Type Select"
- 3 Select the display type**  
Turn the Control knob to select a display type, and then press the Control knob.
- 4 Exit the Function setting mode**  
Press and hold the [↵] button.

## Selecting a text display

You can change the information displayed on each of the following sources:

### On Audio file/ iPod source

Information	Display
Song title*	"Song Title"
Album name*	"Album Name"
Artist name*	"Artist Name"
Title and Artist name**	"Title/Artist"
Album and Artist name**	"Album/Artist"
Folder name	"Folder Name"
File name	"File Name"
Play time	"P-Time"
Clock	"Clock"
Date	"Date"
Blank	"Blank"

### On Pandora source

Information	Display
Song title	"Song Title"
Artist name	"Artist Name"
Album name	"Album name"
Title and Artist name**	"Title/Artist"
Album and Artist name**	"Album/Artist"
Station name	"Station Name"
Play time	"P-Time"
Clock	"Clock"
Date	"Date"
Blank	"Blank"

### On CD source

Information	Display
Disc title	"Disc Title"
Track title	"Track Title"
Play time	"P-Time"
Clock	"Clock"
Date	"Date"
Blank	"Blank"

### On Tuner source

Information	Display
Frequency & Program Service name (FM)	"Frequency/PS"
Song title (FM)*	"Song Title"
Artist name (FM)*	"Artist Name"
Title & Artist name (FM)**	"Title/Artist"
Station name (FM)	"Station Name"
Radio text + (FM)	"Radio Text +"
Radio text (FM)	"Radio Text"
Frequency (AM)	"Frequency"
Clock	"Clock"
Date	"Date"
Blank	"Blank"

### On Standby/ Auxiliary input source

Information	Display
Source name (AUX only)	"Source Name"
Clock	"Clock"
Date	"Date"
Blank	"Blank"

### On SiriusXM (Optional accessory) source

Information	Display
Channel number	"Channel Number"
Channel name	"Channel Name"
Artist name*	"Artist Name"
Song title*	"Song Title"
Content information*	"Content Info"
Artist name/Song title/Content information**	"Art/Song/Info"
Category name	"Category Name"
Clock	"Clock"
Date	"Date"
Blank	"Blank"

\*Display type A only  
\*\*Display type B only

- 1 Enter the Function setting mode**  
Press and hold the Control knob.
- 2 Select the Text select item**  
Select the following items using the Control knob.  
"Settings" > "DISP&ILLUMI" > "Display Select" > "Text Select"
- 3 Select the text display part**  
Push the Control knob upward or downward.  
The selected text display part blinks.
- 4 Determine the selection**  
Turn the Control knob.
- 5 Exit the Function setting mode**  
Press and hold the [↵] button.



- If the selected display item does not have any information, alternative information is displayed.
- Setting is available when the display type is A or B which allows text display. Refer to <Selecting a display type> (page 24).
- Some items cannot be selected depending on the display type and row.
- If you select "Folder name" while playing music on the iPod, names will be displayed depending on the currently selected browsing items.
- If you select the APP & iPod Control mode while playing music on the iPod, "APP & iPod Mode" is displayed.
- If all characters cannot be displayed while music is played on the iPod, the file number in the list is displayed.

Information	Display
Music title	"TITLE****"
Folder name	"FLD****"
File name	"FILE****"

## Display settings

### Information display setting

You can set the side and graphic parts of the display.

- 1 Enter the Function setting mode**  
Press and hold the Control knob.
- 2 Select the Display select item**  
Select the following items using the Control knob.  
"Settings" > "DISP&ILLUMI" > "Display Select"

- 3 Select a desired Information display setting item**  
Turn the Control knob to select a display setting item, and then press the Control knob.

Display	Description
"Display Select"	
"Side Select"	Sets the side part display for Type A, B, and D. 1 / 2 / 3 (Type A, B only)
"Graphic Select"	Sets the Type C clock display. 1 / 2
"Status"	Sets the status display (ON/OFF indicator for each function) for Type A and B. "ON" / "OFF"

( \_ : Factory setting)

- 4 Select a setting and determine it**  
Turn the Control knob to select a desired setting, and then press the Control knob.  
The previous item is displayed.
- 5 Exit the Function setting mode**  
Press and hold the [↵] button.

### Illumination color selection

You can select the illumination color of the panel.

- 1 Enter the Function setting mode**  
Press and hold the Control knob.
- 2 Select the Color select item**  
Select the following items using the Control knob.  
"Settings" > "DISP&ILLUMI" > "Color Select"
- 3 Select the part for which you want to set the illumination color**

Display	Part
"Color Select"	
"Color SEL All"	All
"Color SEL Display"	Display
"Color SEL Key"	Button
"Color SEL USB&AUX"	USB terminal and Auxiliary input

Turn the Control knob to select a part, and then press the Control knob.

- 4 Select an illumination color**  
Turn the Control knob to select a color, and then press the Control knob.  
Select a color from "Variable Scan"/"Color1" — "Color24".

#### Adjusting the RGB values

In this step, you can also create your original color during the selection from "Color1" — "Color24". The color you created can be called by selecting "User".

- 1. Press and hold the Control knob.**  
Enter the Detail color adjustment mode.
- 2. Set the color.**

Operation type	Operation
To select the color to adjust (Red, Green, or Blue)	Push the Control knob rightward or leftward.
To adjust color (Range: 0 – 9)	Turn the Control knob.

- 3. Press the Control knob.**  
Exit the Detail color adjustment mode.
- 5 Exit the Function setting mode**  
Press and hold the [↵] button.

### Display & Illumination setting

You can set the display and illumination.

- 1 Enter the Function setting mode**  
Press and hold the Control knob.
- 2 Select the Display & Illumination setting item**  
Select the following items using the Control knob.  
"Settings" > "DISP&ILLUMI"
- 3 Select a desired Display & Illumination setting item**  
Turn the Control knob to select a Display & Illumination setting item, and then press the Control knob.

Display	Description
"DISP&ILLUMI"	
"DISP ILLUMI OFF"	When "Type E" (Display off) is selected in <Selecting a display type> (page 24), sets whether to turn off the display only or both the display and key illumination. "DISP&ILLUMI" / "DISP"
"Display Dimmer"	Dims the display part in conjunction with the Light switch of the vehicle. "Auto": Dims the display in conjunction with the Light switch of the vehicle. "Manual1": Dims the display constantly. "Manual2": Dims the display darker than that in the Manual1 mode. "OFF": Does not dim the display.
"Contrast"	Sets the display contrast. "1" – "10" – "30"
"DISP NEGA/POSI"	Switches the panel display between positive and negative modes. "NEGA1": Displays the text in the negative mode. "NEGA2": When the interior light is off, the text is displayed in the negative mode; when the interior light is on, the text is displayed in the positive mode. "POSI1": Displays the text in the positive mode. "POSI2": When the interior light is off, the text is displayed in the positive mode; when the interior light is on, the text is displayed in the negative mode.
"Text Scroll"	Sets the method of scrolling to view hidden texts. "Auto": Scrolls. "Once": Scrolls once. "OFF": Does not scroll.

"ILLUMI Dimmer"	Reduces the key illumination brightness. "Auto": Dims the illumination in conjunction with the Light switch of the vehicle. "Manual1": Dims the illumination constantly. "Manual2": Dims the illumination darker than that in the Manual1 mode. "OFF": Does not dim the illumination.
"ILLUMI Effect"	Sets whether the key illumination is changed in conjunction with the key operation. "ON" / "OFF"

( \_ : Factory setting)

- 4 Determine the Display & Illumination setting**  
Turn the Control knob to select a desired setting, and then press the Control knob.  
The previous item is displayed.
- 5 Exit the Function setting mode**  
Press and hold the [↵] button.

## General operation

### Adjusting the clock

- 1 Enter the Function setting mode**  
Press and hold the Control knob.
- 2 Select the Clock Adjust item**  
Select the following items using the Control knob.  
"Settings" > "Clock&Date" > "Clock Adjust"
- 3 Set the hour**  
Turn the Control knob to adjust the hour, and then press the Control knob.
- 4 Set the minute**  
Turn the Control knob to adjust the minute, and then press the Control knob.
- 5 Exit the Function setting mode**  
Press and hold the [**↩**] button.



- For adjustment during summer time, refer to "Summer Time" in <Clock & date display type setting> (page 29).

### Adjusting the date

- 1 Enter the Function setting mode**  
Press and hold the Control knob.
- 2 Select the Date Adjust item**  
Select the following items using the Control knob.  
"Settings" > "Clock&Date" > "Date Adjust"
- 3 Set the year**  
Turn the Control knob to adjust the year, and then press the Control knob.
- 4 Set the month**  
Turn the Control knob to adjust the month, and then press the Control knob.
- 5 Set the day**  
Turn the Control knob to adjust the day, and then press the Control knob.
- 6 Exit the Function setting mode**  
Press and hold the [**↩**] button.

### Dual clock display

You can set the time for two different cities.

- 1 Enter the Function setting mode**  
Press and hold the Control knob.
- 2 Select the City Select item**  
Select the following items using the Control knob.  
"Settings" > "Clock&Date" > "City Select"
- 3 Select the clock display part**  
Push the Control knob upward or downward.
- 4 Select home and sub cities**  
Turn the Control knob.
- 5 Determine the home and sub cities**  
Press the Control knob.
- 6 Exit the Function setting mode**  
Press and hold the [**↩**] button.



- For adjustment of home time, refer to <Adjusting the clock> (page 28).
- The time of the sub city is automatically derived from the home time.  
When the summer time system is are different between home and sub cities, adjustment can be done by referring to the description of "Sub Clock Adjust" in <Clock & date display type setting> (page 29).

### Clock & date display type setting

You can set the display type of the clock and calendar.

- 1 Enter the Function setting mode**  
Press and hold the Control knob.
- 2 Select the Clock & Date setting item**  
Select the following items using the Control knob.  
"Settings" > "Clock&Date"
- 3 Select the desired Clock & Date setting item**  
Turn the Control knob to select Clock & Date display setting item, and then press the Control knob.

Display	Description
"Clock&Date"	
"Time Synchronized"	Synchronizes this unit's clock with the radio data system station's time data. "ON" / "OFF"
"Summer Time"	Advances the clock one hour when set to ON. "ON" / "OFF"
"Sub Clock Adjust"	Adjusts the time difference caused by summer time. "-1h" / "0h" / "+1h"
"Date Mode"	Sets the date display mode. 7 types

( \_\_ : Factory setting)

- 4 Select a setting and determine it**  
Turn the Control knob to select desired setting, and then press the Control knob.  
The previous item is displayed.
- 5 Exit the Function setting mode**  
Press and hold the [**↩**] button.

## General operation

### Auxiliary input display setting

You can set the display when switched the AUX source.

- 1 Select the AUX source**  
Press the [SRC] button.  
Select the "AUX" display.
- 2 Enter the Function setting mode**  
Press and hold the Control knob.
- 3 Select the AUX name set item**  
Select the following items using the Control knob.  
"Settings" > "AUX Name Set"
- 4 Select the display connected as an AUX source and determine it**  
Turn the Control knob to select the Auxiliary input display, and then press the Control knob.  
Select "AUX", "DVD", "PORTABLE", "GAME", "VIDEO", or "TV".
- 5 Exit the Function setting mode**  
Press and hold the [↵] button.

### Muting the audio upon reception of a phone call

The audio system automatically mutes when it receives an incoming call.

**When a call comes in**  
"CALL" is displayed.  
The audio system pauses.

**Listening to the audio during a call**  
Press the [SRC] button.  
The "CALL" display disappears and the audio system comes back ON.

**When the call ends**  
Hang up the phone.  
The "CALL" display disappears and the audio system comes back ON.



- To use the TEL Mute feature, you need to hook up the MUTE wire to your telephone using a commercial telephone accessory. Refer to <Connecting wires to terminals> (page 12) in Quick start guide.

### Initial settings

You can configure initial settings of this unit.

- 1 Select the Standby**  
Press the [SRC] button.  
Select the "STANDBY" display.
- 2 Enter the Function setting mode**  
Press and hold the Control knob.
- 3 Select the Initial settings item**  
Turn the Control knob to select "Initial Settings", and then press the Control knob.
- 4 Select a desired Initial setting item**  
Turn the Control knob to select an Initial setting item, and then press the Control knob.

Display	Description
"Initial Settings"	
"SRC Select"	Select "2" to change the source selection method. Press the [SRC] button, turn the Control knob to select the source, and then press the Control knob to determine it. 1 / 2
"Key Beep"	Setting the operation check sound (beep sound) ON/OFF. "ON" / "OFF"
"Function Language"	Changes the display language of items displayed in the Function setting mode. "English" / "Français" / "Español"
"Built-in AUX"	Sets whether to display AUX during source selection. "ON" / "OFF"
"CD Read"	Sets the method for reading CD. When unable to play a special format CD, set this setting to "2" to force playing. Note that some music CDs may be unplayable even when set to "2". In addition, audio files cannot be played when set to "2". Normally, keep this set to "1". 1: Automatically distinguishes between the audio file disc and music CD when playing a disc. 2: Forces playing as a music CD.
"Built-in AMP"	Selecting "OFF" turns off the built-in amplifier. Turning off the built-in amplifier improves the quality of the sound from Preout. "ON" / "OFF"
"Speaker Select"	Sets the speaker type so that the System Q value is optimal. "OEM": OFF "5/4inch": For 5 & 4 in. speaker "6x9/6inch": For 6 & 6x9 in. speaker "O.E.M.": For the OEM speaker

"F/W Update"	Upgrades the firmware. Selecting "YES" and then pressing the Control knob starts upgrading the firmware. For how to update the firmware, access our web site. <a href="http://www.kenwood.com/cs/ce/">http://www.kenwood.com/cs/ce/</a>
--------------	--

( \_ : Factory setting)

- 5 Select an Initial setting and determine it**  
Turn the Control knob to select desired setting, and then press the Control knob.  
The previous item is displayed.
- 6 Exit the Function setting mode**  
Press and hold the [↵] button.



## General operation

### **Demonstration mode setting**

---

You can turn on/off the demonstration mode.

**1 Enter the Function setting mode**

Press and hold the Control knob.

**2 Select the Demonstration mode item**

Turn the Control knob to select "DEMO Mode", and then press the Control knob.

**3 Select a setting and determine it**

Turn the Control knob to select a desired setting ("ON" or "OFF"), and then press the Control knob.

Exit the Function setting mode.

# SiriusXM Vehicle Connect Tuner Control (optional tuner and service required)

## Before use

- SiriusXM Satellite Radio operation requires the connection of the optional SiriusXM-Connect Vehicle Tuner (sold separately) and service. To activate the SiriusXM Vehicle Connect tuner, you will need the Radio ID.
- **Make a note of your Radio ID**  
For each SiriusXM Vehicle Connect tuner, peculiar Radio ID is assigned. To confirm your Radio ID, tune to channel 0. The letters I, O, S and F are not used in any Radio ID.
- **How to activate your SiriusXM Service**  
Go to [www.siriusxm.com/activatenow](http://www.siriusxm.com/activatenow) or call 1-866-635-2349 to activate your SiriusXM Vehicle Connect Tuner.

## Basic operations

### Selecting SiriusXM Radio source

Press the [SRC] button.

Select the "SiriusXM" display.



- The radio may take a little time to start after you select the SiriusXM Radio source.
- If the signal reception fails, "No Signal" appears.

### Selecting a channel

Push the Control knob rightward or leftward.

## Category and channel search

You can select the channel and category you want to receive.

### 1 Enter the Category and Channel search mode

Press the [Q] button.

"Category Search" is displayed.

### 2 Select a category

Turn the Control knob to select a category, and then press the Control knob.

### 3 Select a channel

Turn the Control knob to select a channel, and then press the Control knob.

### Canceling the Category and Channel search mode

Press and hold the [↵] button.



- You cannot search for a channel until the category information is acquired.

## Channel preset memory

You can store a channel in the memory.

### 1 Select the channel to preset

Push the Control knob rightward or leftward

### 2 Enter the Preset memory mode

Press the [PRESET] button.

### 3 Select a number and store it in the memory

Turn the Control knob to select a memory number ("1" – "24"), and then press and hold the Control knob.

### Canceling the Preset memory mode

Press the [↵] button.



- If you press the [PRESET] button twice in step 2, the Mix Station preset mode is selected with "Mixed Preset List" displayed.

In this mode, different bands and tuner sources (Radio, SiriusXM, HD Radio tuner etc.) can be saved in the same preset layer, which allows you to recall the desired station without switching between bands or tuner sources.

A maximum of six stations can be preset in the Mix Station preset mode.

Once the Mix Station preset mode is set, you can enter the same mode by just pressing the [PRESET] button once in step 2.

Pressing the [PRESET] button twice allows you to return to the normal Station preset mode.

# SiriusXM Vehicle Connect Tuner Control (optional tuner and service required)

## Presets tuning

Recalling a channel from the memory.

- 1 Enter the Preset memory mode**  
Press the [PRESET] button.
- 2 Select the number you want to recall from the memory**  
Turn the Control knob to select a recall number ("1" – "24"), and then press the Control knob.  
The memory number and channel name are displayed.

### Canceling Preset tuning

Press the [↩] button.

## Channel scan

You can scan for receivable channels for 10 seconds.

- 1 Start Channel Scan**  
Press and hold the [Q] button.
- 2 Release it when the channel you want to listen to is received**  
Press and hold the [Q] button.

## Function of remote control

### Direct access tuning

You can search for a channel directly by entering its number.

- 1 Enter the Direct access tuning mode**  
Press the [DIRECT] button on the remote control.
- 2 Enter a channel number**  
Press the number buttons on the remote control.
- 3 Search for the channel**  
Press the [◀◀] or [▶▶] button on the remote control.

### Canceling the Direct access tuning mode

Press the [↩] button on the remote control.



- If you operate no button for 10 seconds, the Direct Access Tuning mode is automatically canceled.

## Seek mode setting

You can select a tuning mode of the radio.

- 1 Select the SiriusXM Radio source**  
Press the [SRC] button.  
Select the "SiriusXM" display.
- 2 Enter the Function setting mode**  
Press and hold the Control knob.
- 3 Select the Seek mode item**  
Select the following items using the Control knob.  
"Settings" > "Seek Mode".
- 4 Select a desired Seek mode**

Display	Operation
"Channel"	Normal manual seeking.
"Preset"	Searches in order of the channels in the preset memory.

- Turn the Control knob to select Seek mode, and then press the Control knob.
- 5 Exit the Function setting mode**  
Press and hold the [↩] button.

# SiriusXM Vehicle Connect Tuner Control (optional tuner and service required)

## iTunes tagging

You can store the tag of the information about the song being received, and send it to the connected iPod. You can easily find the song on the iTunes Store according to the tag sent to the iPod.

### 1 Store the song information tag

Press and hold the [PRESET] button.

"TAG" will be indicated on the display when song information can be registered.

"TAG Storing" is indicated on the display while a tag is being stored in this unit. "TAG Stored" is indicated on the display after a tag is stored.

When your iPod is connected to this unit, "TAG Transferred" is shown on the display and a tag is sent to the iPod.



- The song corresponding to the tag sent to the iPod is indicated in the playlist ("Tagged") of the synchronized iTunes.

By clicking your desired song in the playlist, you can easily find it on the iTunes Store and buy it from the iTunes Store.

- A 50 song information tags can be stored in this unit. When a tag has been sent to the iPod, the tag stored in this unit is cleared.
- Select "ON" for "Tagging" as mentioned in <SiriusXM tuner setting> (page 45) when using this function.
- The memory usage can be checked by selecting the "TAG Memory" setting mentioned in <SiriusXM tuner setting> (page 45).

## Parental Lock setting

You can turn on/off Parental Lock for each channel.

### 1 Select the SiriusXM Radio source Press the [SRC] button.

Select the "SiriusXM" display.

### 2 Enter the Function setting mode Press and hold the Control knob.

### 3 Select the Parental Lock item Select the following items using the Control knob.

"Settings" > "Parental Lock"

### 4 Enter the pass code

Operation type	Operation
Selection of numbers.	Turn the Control knob.
Determination of the selected numbers.	Press the Control knob.
Selection of column	Push the Control knob rightward or leftward.
Deletion of all numbers	Push and hold the Control knob leftward.



- The pass code is set to "0000" as default. For how to change the pass code, refer to <Parental Lock pass code setting> (page 40).

### 5 Select the Lock channel edit item Turn the Control knob to select "Lock CH Edit", and then press the Control knob.

A category list is displayed.

### 6 Select the category of the channel subject to Parent Lock setting Turn the Control knob to select a category, and then press the Control knob.

The list of the channels in the selected category is displayed.

### 7 Set Parental Lock

#### Turn the Control knob to select a channel, and then press the Control knob.

Parental Lock for the selected channel is turned on and off alternately each time you press the Control knob.

"\*" is indicated for the selected channel.

"M" is indicated for the Mature content channel.

### 8 Exit the Function setting mode Press and hold the [↵] button.



- If a channel for which Parental Lock is turned on is selected, a pass code input screen appears. Programs on the selected channel can be received only when the input pass code is correct.

## Clearing the Parental Lock setting

You can clear the Parent Lock setting for each channel.

### 1 Select the SiriusXM Radio source Press the [SRC] button.

Select the "SiriusXM" display.

### 2 Enter the Function setting mode Press and hold the Control knob.

### 3 Select the Parental Lock item Select the following items using the Control knob.

"Settings" > "Parental Lock"

### 4 Enter the pass code

Operation type	Operation
Selection of numbers.	Turn the Control knob.
Determination of the selected numbers.	Press the Control knob.
Selection of column	Push the Control knob rightward or leftward.
Deletion of all numbers	Push and hold the Control knob leftward.



- The pass code is set to "0000" as default.

### 5 Select the Lock channel clear item Turn the Control knob to select "Lock CH All Clear", and then press the Control knob.

### 6 Clear the Parent Lock setting Turn the Control knob to select "Yes", and then press the Control knob.

"Completed" is displayed.

### 7 Exit the Function setting mode Press and hold the [↵] button.

# SiriusXM Vehicle Connect Tuner Control (optional tuner and service required)

## Setting Parental Lock for Mature content

You can turn on/off Parental Lock for the adult channel.

### 1 Select the SiriusXM Radio source

Press the [SRC] button.

Select the "SiriusXM" display.

### 2 Enter the Function setting mode

Press and hold the Control knob.

### 3 Select the Parental Lock item

Select the following items using the Control knob.

"Settings" > "Parental Lock"

### 4 Enter the pass code

Operation type	Operation
Selection of numbers.	Turn the Control knob.
Determination of the selected numbers.	Press the Control knob.
Selection of column	Push the Control knob rightward or leftward.
Deletion of all numbers	Push and hold the Control knob leftward.



- The pass code is set to "0000" as default.

### 5 Select the Mature channel setting item

Turn the Control knob to select "Mature Set, and then press the Control knob.

### 6 Turn on the Mature setting

Turn the Control knob to select "ON" and then press the Control knob.

Selecting "OFF" and pressing the Control knob will turn off the Mature setting.

### 7 Exit the Function setting mode

Press and hold the [↵] button.



- If a Mature channel is selected with the Mature setting turned on, the pass code input screen appears. Programs on the selected channel can be received only when the pass code is correct.

## Parental Lock pass code setting

You can set a new pass code for Parental Lock setting.

### 1 Select the SiriusXM Radio source

Press the [SRC] button.

Select the "SiriusXM" display.

### 2 Enter the Function setting mode

Press and hold the Control knob.

### 3 Select the Parental Lock item

Select the following items using the Control knob.

"Settings" > "Parental Lock"

### 4 Enter the pass code

Operation type	Operation
Selection of numbers.	Turn the Control knob.
Determination of the selected numbers.	Press the Control knob.
Selection of column	Push the Control knob rightward or leftward.
Deletion of all numbers	Push and hold the Control knob leftward.



- The pass code is set to "0000" as default.

### 5 Select the Pass code set item

Turn the Control knob to select "Passcode Set", and then press the Control knob.

"Enter new code" is displayed.

### 6 Enter a new pass code (first time)

Enter a new pass code in the same manner as in step 4.

### 7 Enter the new pass code again (second time)

Enter the same pass code as that entered in step 6.

The old pass code is changed to the new one and "Completed" is displayed.

### 8 Exit the Function setting mode

Press and hold the [↵] button.

## Content alert

When the broadcast of the song by the registered artist or the broadcast of the registered song starts, a message appears to allow you to switch the current source to the desired channel, even though the receiving source is other than SiriusXM Radio.

### Registering content

#### 1 Receive the content you wish to register

#### 2 Select the Content registration mode

Push the Control knob upward.

#### 3 Register the content

Turn the Control knob to select a content type ("Store Artist?" or "Store Song?"), and then press the Control knob.

"Artist Stored" or "Song Stored" is displayed.



- You can register a total of 50 types of content including both artists and songs.

### When a Content alert occurs

#### 1 A content alert message is displayed

When multiple content alerts occur, a content name is displayed one after another. The previous content name can be displayed and selected by the operation in step 3.

A content alert message is displayed for five seconds from the last content alert.

The following switching operation to your desired content can be performed while the message is being displayed.

#### 2 Start selecting a content

Press the Control knob.

#### 3 Select your desired content of which content alerts are occurring

Turn the Control knob to select the content, and then press the Control knob.

The current source switches to the channel that is broadcasting the selected content.



- The Content alert message is not displayed, when operating in various modes: Audio Control mode (<Audio control> (page 8)), Function setting mode (<Function setting procedure> (page 1)), etc.
- A Content alert occurred can be selected from "My Music" category <Category and channel search> (page 35).

### Canceling Content alert mode

Press the [↵] button.

# SiriusXM Vehicle Connect Tuner Control (optional tuner and service required)

## Content alert setting

You can turn on/off the content alert function.

- 1 Select the SiriusXM Radio source**  
Press the [SRC] button.  
Select the "SiriusXM" display.
- 2 Enter the Function setting mode**  
Press and hold the Control knob.
- 3 Select the Content alert set item**  
Select the following items using the Control knob.  
"Settings" > "Content alert" > "Alert Set"
- 4 Turn on or off the Content alert function**  
Turn the Control knob to select "ON" or "OFF", and then press the Control knob.
- 5 Exit the Function setting mode**  
Press and hold the [↵] button.

## Editing a Content alert item

You can enable or disable the registered content alert item individually.

- 1 Select the SiriusXM Radio source**  
Press the [SRC] button.  
Select the "SiriusXM" display.
- 2 Enter the Function setting mode**  
Press and hold the Control knob.
- 3 Select the Content alert edit item**  
Select the following items using the Control knob.  
"Settings" > "Content alert" > "Alert Item Edit"
- 4 Select a content type**  
Turn the Control knob to select "Song" or "Artist", and then press the Control knob.
- 5 Select or deselect the selected Content alert item**  
Turn the Control knob to select a Content alert item, and then press the Control knob.  
The selected Content alert item is selected and deselected alternately each time you press the Control knob.  
"\*" is indicated for the selected item name.
- 6 Exit the Function setting mode**  
Press and hold the [↵] button.

## Delete a Content alert item

You can delete the registered Content alert item.

- 1 Select the SiriusXM Radio source**  
Press the [SRC] button.  
Select the "SiriusXM" display.
- 2 Enter the Function setting mode**  
Press and hold the Control knob.
- 3 Select the Content alert delete item**  
Select the following items using the Control knob.  
"Settings" > "Content alert" > "Alert Item Delete"
- 4 Select a content type**  
Turn the Control knob to select "Song Delete", "Artist Delete" or "All Delete", and then press the Control knob.  
Selecting "All Delete" allows you to delete all Content alert items together. Proceed to step 6.
- 5 Select the Content alert item you wish to delete**  
Turn the Control knob to select Content alert item, and then press the Control knob.
- 6 Determine the selection**  
Turn the Control knob to select "YES", and then press the Control knob.  
"Completed" is displayed.
- 7 Exit the Function setting mode**  
Press and hold the [↵] button.

## Instant Replay

You can replay last 30 minutes of current channel.

- 1 Enter Instant Replay mode**  
Push the Control knob downward.  
"Instant Replay" is displayed and play pauses.  
The "IR" indicator stays lit during instant replay.

- 2 Start Instant Replay**  
Press the [↵] button.  
The songs are replayed starting with the song played 30 minutes ago.  
During instant replay, you can perform the following operations:

Operation type	Operation
Pause and play	Press the [↵] button.
Music search	Push the Control knob rightward or leftward.
Fast forward or Fast backward	Push and hold the Control knob rightward or leftward

- 3 Exit Instant Replay mode**  
Push the Control knob downward.  
"Live" is displayed, and then the on-air song is received.



- Recorded data of the previously received channel is cleared immediately when a different channel is received.

## SiriusXM Vehicle Connect Tuner Control (optional tuner and service required)

### Channel skip setting

You can register the channel you wish to skip.

- 1 Select the SiriusXM Radio source**  
Press the [SRC] button.  
Select the "SiriusXM" display.
- 2 Enter the Function setting mode**  
Press and hold the Control knob.
- 3 Select the Channel skip setting item**  
Select the following items using the Control knob.  
"Settings" > "Channel Skip" > "Skip CH Edit"
- 4 Select the category of the channel you wish to skip**  
Turn the Control knob to select a category, and then press the Control knob.
- 5 Select the channel you wish to skip**  
Turn the Control knob to select a channel, and then press the Control knob.  
The selected channel skip setting is turned on and off alternately each time you press the Control knob.  
"\*" is indicated for the selected item name.
- 6 Exit the Function setting mode**  
Press and hold the [↵] button.

### Clearing the channel skip setting

You can clear the skip setting for all the selected channels together.

- 1 Select the SiriusXM Radio source**  
Press the [SRC] button.  
Select the "SiriusXM" display.
- 2 Enter the Function setting mode**  
Press and hold the Control knob.
- 3 Select the Channel skip delete item**  
Select the following items using the Control knob.  
"Settings" > "Channel Skip" > "CH All Clear"
- 4 Clear the channel skip setting**  
Turn the Control knob to select "YES", and then press the Control knob.  
"Completed" is displayed.
- 5 Exit the Function setting mode**  
Press and hold the [↵] button.

### SiriusXM tuner setting

You can set the SiriusXM tuner related items.


- 1 Enter the Function setting mode**  
Press and hold the Control knob.
- 2 Select the Setting mode**  
Turn the Control knob to select "Settings", and then press the Control knob.
- 3 Select a desired SiriusXM tuner setting item**  
Turn the Control knob to select a SiriusXM tuner setting item, and then press the Control knob.

Display	Description
"Settings"	
"TAG Memory"	Displays the tag memory usage of the SiriusXM tuner. Up to 50 tags can be registered in this unit.
"Tagging"	Turns on/off the iTunes tag memory function of SiriusXM tuner. "ON" / "OFF"
"Signal Level"	Displays the received signal strength of the SiriusXM tuner.
"IR Buffer Usage"	Displays the memory usage for the function mentioned in <a href="#">Instant Replay</a> (page 43). "0%" – "100%"

( \_ : Factory setting)

- 4 Select a setting and determine it**  
Turn the Control knob to select a desired setting, and then press the Control knob.  
The previous item is displayed.
- 5 Exit the Function setting mode**  
Press and hold the [↵] button.

## Basic operation of remote control

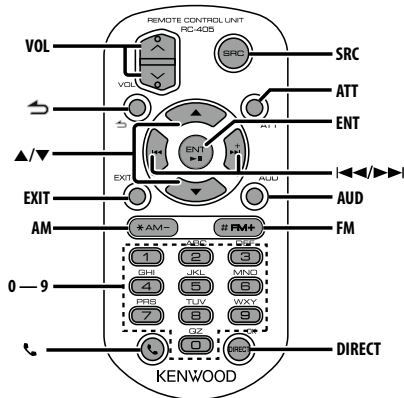

### General control

- **Volume control:** [VOL]
- **Source selection:** [SRC]
- **Volume reduction:** [ATT]
  - When the button is pressed again, the volume returns to the previous level.
- **Return to previous item:** [↶]
- **Exit from mode:** [EXIT]
- **Selection of item:** [▲]/[▼]
- **Determination:** [ENT]
- **Enter Audio Control mode:** [AUD]

### On Tuner source

- **Band selection:** [FM]/[AM]
- **Station selection:** [◀◀]/[▶▶]
- **Recall preset stations:** [0] – [9] → [ENT]

### On CD/Audio file source

- **Music selection:** [◀◀]/[▶▶]
- **Folder selection:** [FM]/[AM]
- **Pause/Play:** [ENT]
- **Enter the Music search mode:** [▲]/[▼]
- **Movement between folders/files during Music search mode:** [▲]/[▼]
- **Return to previous folder:** [↶]

### On iPod source

- **Enter Music search mode:** [▲]/[▼]
- **Movement between items during Music search mode:** [▲]/[▼]
- **Return to previous item:** [↶]
- **Pause/Play:** [ENT]

### On Pandora internet radio source

- **Music selection:** [▶▶]
- **Pause/Play:** [ENT]
- **Enter the station list mode:** [▲]/[▼]
  - Select item: [▲]/[▼]
  - Exit the station list mode: [↶]


### On SiriusXM tuner source

- **Channel selection:** [◀◀]/[▶▶]
- **Recall preset stations:** [0] – [9] → [ENT]


### ⚠ CAUTION

- Keep battery out of reach of children and in original package until ready to use. Dispose of used batteries promptly. If swallowed, contact a physician immediately.
- Do not leave the battery near fire or under direct sunlight. A fire, explosion or excessive heat generation may result.
- Do not set the remote control in hot places such as on the dashboard.
- The Lithium battery is in danger of explosion if replaced incorrectly. Replace only with the same or equivalent type.

### Preparing the remote control unit

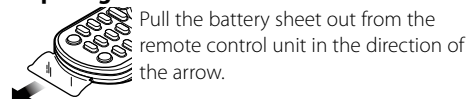

### Changing the battery of the remote control unit

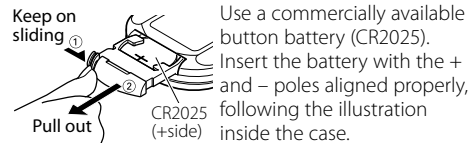



## Appendix


### About the Audio file

- **Playable Audio files**  
AAC-LC (.m4a), MP3 (.mp3), WMA (.wma)
- **Playable disc media**  
CD-R/RW/ROM
- **Playable disc file formats**  
ISO 9660 Level 1/2, Joliet, Romeo, Long file name.
- **Playable USB devices**  
USB mass storage class
- **Playable USB device file systems**  
FAT16, FAT32

Even if the audio files comply with the standards listed above, playback may be impossible depending on the type or condition of the medium or device.

- **Playback order of the Audio files**

In the example of folder/file tree shown below, files are played in the order of number from ① to ⑩.

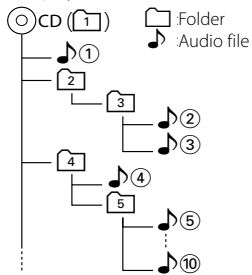

For the online manual describing audio files, visit [www.kenwood.com/cs/ce/audiofile/](http://www.kenwood.com/cs/ce/audiofile/). In this online manual, detailed information and notes which are not provided in this manual are provided. Make sure to read through the online manual as well.



- In this manual, the term "USB device" indicates a flash memory or digital audio player which has a USB terminal.

### About the USB device

- When the USB device is connected to this unit, it is charged when this unit is powered.
- Install the USB device in the place where it will not prevent you from driving your vehicle properly.
- You cannot connect a USB device via a USB hub or multi card reader.
- Save backups of the audio files used with this unit. The files can be erased depending on the operating condition of the USB device. We shall not be liable for any damage arising out of erasure of the stored data.
- No USB device comes with this unit. You need to purchase a commercially available USB device.
- When connecting the USB device, use of the CA-U1EX (option) is recommended.
- Normal playback is not guaranteed when a cable other than the USB compatible cable is used. Connecting a cable whose total length is longer than 4 m can result in abnormal playback.

### About "KENWOOD Music Editor"

- This unit supports the PC application "KENWOOD Music Editor Light ver1.1" or later.
- When you use the audio file with database information added by the "KENWOOD Music Editor Light ver1.1", you can search for a file by title, album or artist name using the function mentioned in <Music search> (page 18).
- In the Instruction manual, the term "Music Editor media" indicates the device that contains audio files with database information added with KENWOOD Music Editor.
- "KENWOOD Music Editor Light ver1.1" is available from the following web site: [www.kenwood.com/cs/ce/](http://www.kenwood.com/cs/ce/)
- For further information on "KENWOOD Music Editor Light ver1.1", refer to the site above or the application help.

### Models of iPods/iPhones that can be connected to this unit

Made for

- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPod with video
- iPod classic
- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

- For information on the compatibility with iPod/iPhone software, visit [www.kenwood.com/cs/ce/ipod/](http://www.kenwood.com/cs/ce/ipod/).
- Types of available control vary depending on the type of connected iPod. Visit [www.kenwood.com/cs/ce/ipod/](http://www.kenwood.com/cs/ce/ipod/) for further details.
- The word "iPod" appearing in this manual indicates the iPod or the iPhone connected with the iPod connection cable (optional accessory).
- Refer to the web site for connectable iPods and iPod connection cables. [www.kenwood.com/cs/ce/ipod/](http://www.kenwood.com/cs/ce/ipod/)



- If you start playback after connecting the iPod, the music that was playing on the iPod is played first. In this case, "RESUMING" is displayed without displaying a folder name, etc. Changing the browse item will display a correct title, etc.
- You cannot operate the iPod if "KENWOOD" or "✓" is displayed on the iPod.

### Requirements Pandora® internet radio

Requirements for listening to the Pandora® internet radio are as follows:

#### iPhone or iPod touch

- Use an Apple iPhone or iPod touch running under iOS3 or later.
- Search for "Pandora" in the Apple iTunes App Store to find and install the most current version of the Pandora® application on your device.
- iPhone/ iPod touch connected to this unit with a KCA-iP102.



- In the application on your device, log in and create an account with Pandora. (If you are not already a registered user, an account can also be created at [www.pandora.com](http://www.pandora.com).)
- Internet connection by 3G, EDGE, or WiFi.
- Pandora® is available only in the U.S.
- Because Pandora® is a third-party service, the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired or some or all of the services may become unavailable.
- Some functions of Pandora® cannot be operated from this unit.
- For issues using the application, please contact Pandora® at [pandora-support@pandora.com](mailto:pandora-support@pandora.com)

### About the SiriusXM tuner (Optional accessory)

This unit supports SXM Ready Vehicle Connect Tuners. Refer to the instruction manual for the SiriusXM tuner.

## Troubleshooting guide

Some functions of this unit may be disabled by some settings made on this unit.

- !** • **Cannot set up display.**
  - ▶ The demonstration mode is not turned off as mentioned in [<Demonstration mode setting> \(page 32\)](#).

---

- !** • **Cannot set the “Text Select”, “Side Select”, or “Status” setting for the “Display Select” item.**
  - ▶ A display type is not selected as mentioned in [<Selecting a display type> \(page 24\)](#).

---

- !** • **Cannot set up the subwoofer.**
  - **Cannot set up the low pass filter.**
  - **No output from the subwoofer.**
    - ▶ “SubWoofers” is not set to ON as mentioned in [<Audio control> \(page 8\)](#).

---

- !** **Cannot set up the subwoofer phase.**
  - ▶ “LPF SubWoofers” is set to “Through” as mentioned in [<Audio control> \(page 8\)](#).

---

What might seem to be a malfunction in your unit may just be the result of a slight operation error or a wiring error. Before calling for service, first check the following table for possible problems.

### General

- ?** **The key beep does not sound**
  - ✓ The Preout jack is in use.
    - ☞ The key beep cannot be output from the Preout jack.

---

- ?** • **Sound cannot be heard.**
  - **The unit does not turn on.**
  - **Information shown on the display is incorrect.**
    - ✓ The connectors are dirty.
      - ☞ Clean the connectors. Refer to [<Cleaning the connector> \(page 4\)](#).

### Tuner source

- ?** **Radio reception is poor.**
  - ✓ The car antenna is not extended.
    - ☞ Pull the antenna out all the way.

### Disc source

- ?** **The specified disc does not play, but another one plays instead.**
  - ✓ The specified CD is quite dirty.
    - ☞ Clean the CD with reference to [<Handling discs> \(page 4\)](#).
  - ✓ The disc is severely scratched.
    - ☞ Try another disc instead.

### Audio file source

- ?** **The sound skips when an Audio file is being played.**
  - ✓ The media is scratched or dirty.
    - ☞ Clean the media with reference to [<Handling discs> \(page 4\)](#).
  - ✓ The recording condition is bad.
    - ☞ Play the media again or use another media.

## Troubleshooting guide

### The messages shown below indicates your system condition.

#### “TOC Error”

- The CD is quite dirty. The CD is upside-down. The CD is scratched a lot.
- The disc is unreadable.

#### “IN” (blink)

- The CD player section is not operating properly.
  - ⇨ Reinsert the CD. If the CD cannot be ejected or the display continues to blink even when the CD has been properly reinserted, please switch off the power and consult your nearest service center.

#### “Protect” (blink)

- The speaker wire has short-circuited or touched the chassis of the vehicle, and then the protection function has been activated.
  - ⇨ Lay or insulate the speaker cable properly and press the Reset button. If “Protect” does not disappear, consult your nearest service center.

#### “NA File”

- An Audio file is played in a format that is not supported by this unit.

#### “Copy PRO”

- A copy-protected file is played.

#### “Read Error”

- The file system of the connected USB device is broken.
  - ⇨ Copy the files and folders for the USB device again. If “Read Error” is still displayed, initialize the USB device or use another USB device.

#### “No Device”

- A USB device is selected as a source although no USB device is connected.
  - ⇨ Change the source to any source other than the USB device. Connect an USB device, and change the source to the USB device again.

#### “N/A Device”

- An unsupported USB device is connected.
- Connection to the iPod has failed.
  - ⇨ Check that the connected iPod is supported. See [<About the Audio file> \(page 48\)](#) for information on supported iPods.

#### “No Music Data”

- The connected USB device contains no playable audio file.
- A medium that does not have playable data has been played.

#### “iPod Error”

- Connection to the iPod has failed.
  - ⇨ Remove the USB device and then reconnect it.
  - ⇨ Reset iPod/ iPhone.

#### “Memory Full”

- The tag memory of SiriusXM tuner is FULL.

#### “iPod Full”

- The iPod memory is FULL.

#### “No TAG Function”

- An iPod which does not support the tag memory has been connected.

#### “Pandora Error 01”

- Registration in Bookmark has failed.

#### “Pandora Error 02”

- Deletion of the station has failed.

#### “Pandora Error 03”

- Registration of the station has failed.

#### “Pandora Error 04”

- The number of registered stations has reached the upper limit.
  - ⇨ Retry after deleting an unnecessary station.

#### “Pandora Error 05”

- Registration of Thumbs Up/Down has failed.

#### “Pandora Error 06”

- Keyword search has failed.

#### “No Station”

- There is no receivable station.

#### “No skips remaining”

- No more skips are allowed now.
  - ⇨ Retry after a while.

#### “Check Device”

- Any device ready for Pandora internet radio reception is not connected to this unit.

### SiriusXM Advisory Messages

#### “Check Tuner”

- A SiriusXM tuner is not connected to this unit.
  - ⇨ Check that the connected SiriusXM tuner is connected.

#### “Subscription Updated - Press Enter to Continue”

- The SiriusXM subscription has been renewed.
  - ⇨ Pressing the Control knob will clear the error message.

#### “Ch Unavailable”

- The currently selected channel is unavailable.

#### “Chan Unsub”

- The currently selected channel is not subscribed to.

#### “Incorrect Code”

- The entered pass code is incorrect.

#### “Check Antenna”

- No antenna is connected to the SiriusXM tuner.
  - ⇨ Check that an antenna is connected to the SiriusXM tuner.

#### “No Signal”

- No SiriusXM radio signal is received.
  - ⇨ Check that an antenna is connected to the SiriusXM tuner.

#### “Alert Memory Full”

- The number of Alert content has reached the upper limit.
  - ⇨ Retry after deleting unnecessary Alert content.

#### “Song Stored”

- The song you attempted to register as Alert content has already been registered.

#### “Artist Stored”

- The artist you attempted to register as Alert content has already been registered.

#### “Art/Sng Unavail”

- The content currently being received cannot be registered as a content alert item regardless of whether its artist or song name is stored.

## Specifications

### FM tuner section

Frequency range (200 kHz step)  
: 87.9 MHz – 107.9 MHz  
Usable sensitivity (S/N = 30dB)  
: 9.3dBf (0.8 μV/75 Ω)  
Quieting Sensitivity (S/N = 46dB)  
: 15.2 dBf (1.6 μV/75 Ω)  
Frequency response (±3 dB)  
: 30 Hz – 15 kHz  
Signal to Noise ratio (MONO)  
: 70 dB (±400 kHz)  
Stereo separation  
: 40 dB (1 kHz)

### AM tuner section

Frequency range (10 kHz step)  
: 530 kHz – 1700 kHz  
Usable sensitivity (S/N = 20dB)  
: 28 dBμ (25 μV)

### CD player section

Laser diode  
: GaAlAs  
Digital filter (D/A)  
: 8 Times Over Sampling  
D/A Converter  
: 24 Bit  
Spindle speed (Audio files)  
: 500 – 200 rpm (CLV)  
Wow & Flutter  
: Below Measurable Limit  
Frequency response (±1 dB)  
: 10 Hz – 20 kHz  
Total harmonic distortion (1 kHz)  
: 0.010 %  
Signal to Noise ratio (1 kHz)  
: 105 dB  
Dynamic range  
: 93 dB  
MP3 decode  
: Compliant with MPEG-1/2 Audio Layer-3  
WMA decode  
: Compliant with Windows Media Audio  
AAC decode  
: AAC-LC “m4a” files

### USB interface

USB Standard  
: USB1.1/ 2.0 (Full speed)  
File System  
: FAT16/ 32  
Maximum Supply current  
: DC 5 V  $\pm$  1 A  
MP3 decode  
: Compliant with MPEG-1/2 Audio Layer-3  
WMA decode  
: Compliant with Windows Media Audio  
AAC decode  
: AAC-LC “m4a” files

### Audio section

Maximum output power  
: 50 W x 4  
Full Bandwidth Power (at less than 1% THD)  
: 22 W x 4  
Speaker Impedance  
: 4 – 8 Ω  
Tone action  
Bass : 100 Hz ±8 dB  
Middle : 1 kHz ±8 dB  
Treble : 12.5 kHz ±8 dB  
Preout level/ Load (CD)  
: 2500 mV/10 kΩ  
Preout impedance  
: ≤ 600 Ω

### Auxiliary input

Frequency response (±3 dB)  
: 20 Hz – 20 kHz  
Input Maximum Voltage  
: 1200 mV  
Input Impedance  
: 10 kΩ

### General

Operating voltage  
: 14.4 V (11 – 16V allowable)  
Maximum Current consumption  
: 10 A  
Installation Size (W x H x D)  
: 182 x 53 x 160 mm  
7-3/16 x 2-1/16 x 6-5/16 inch  
Weight  
: 2.9 lbs (1.3 kg)

### ▲ CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

JVC KENWOOD Corporation  
2967-3, ISHIKAWA-MACHI,  
HACHIOJI-SHI, TOKYO, JAPAN

THIS PRODUCT COMPLIES WITH DHHS RULES  
21 CFR SUBCHAPTER J IN EFFECT AT DATE OF  
MANUFACTURE.

Location : Top plate

### FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

### FCC NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### CALIFORNIA, USA

This product contains a CR Coin Cell Lithium Battery which contains

Perchlorate Material – special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)

- The “AAC” logo is a trademark of Dolby Laboratories.
- iTunes is a trademark of Apple Inc.
- “Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved.
- PANDORA, the PANDORA logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc., used with permission.

---

**KENWOOD**