

KENWOOD

PORTABLE COMPACT DISC PLAYER

DPC-961
DPC-761

INSTRUCTION MANUAL

KENWOOD CORPORATION

Note:

This instruction manual is for common use with the two models above.

Model DPC-961 is not available in the U.K.
Model DPC-761 is not available in Australia.

For your records

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your dealer for information or service on the product.

Model _____ Serial Number _____

Unpacking

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your dealer for information or service on the product.

Unpack the unit carefully and make sure that all accessories are put aside so they will not be lost. Examine the unit for any possibility of shipping damage. If your unit is damaged or fails to operate, notify your dealer immediately. If your unit was shipped to you directly, notify the shipping company without delay. Only the consignee (the person or company receiving the unit) can file a claim against the carrier for shipping damage.

We recommend that you retain the original carton and packing materials for use should you transport or ship the unit in the future.

Before using the rechargeable battery pack

The rechargeable battery pack comes non-charged condition. Read "Battery powered operation" carefully and charge the battery before use.


COMPACT
disc
DIGITAL AUDIO

B60-2285-00 (S)(T,M,X) (MC)

96/12 11 10 98 7 6 5 4 3 2 1 95/12 11 10 98 7 6 5 4

The letter written on the hand in each illustration accompanying the text indicates the position of the pressed key on the unit.

 Illustration shows model DPC-961

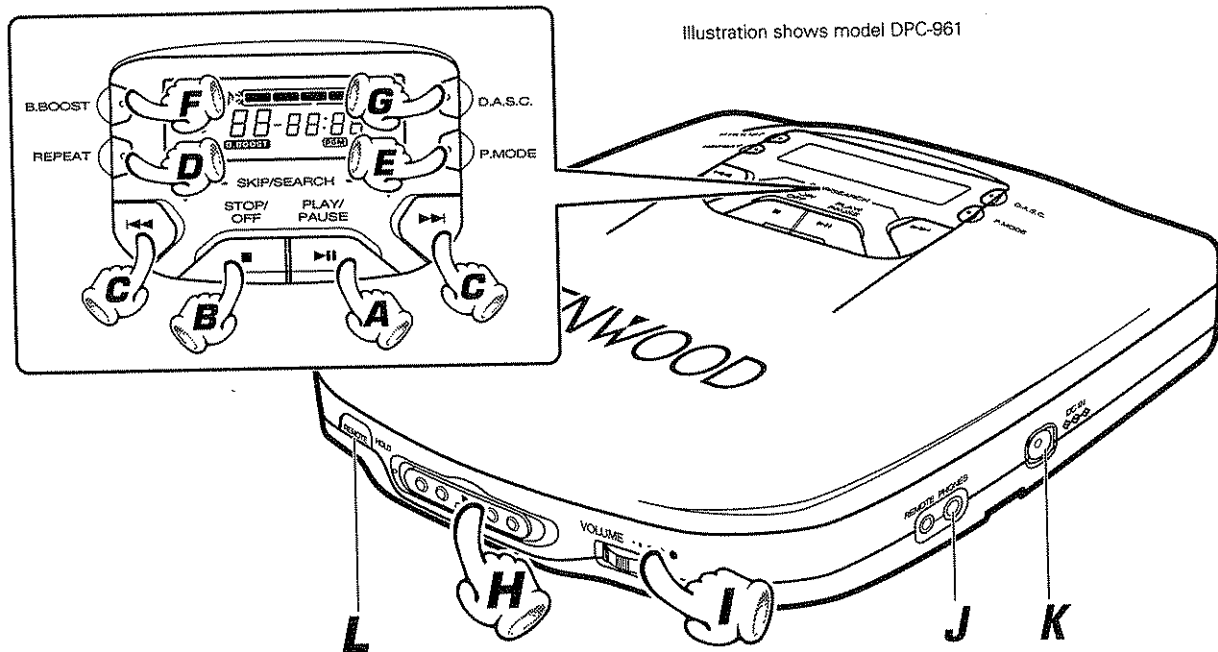

A ▶/|| key

Press to play a disc, pause playback or switch power ON.

B ■ key

Press to stop the disc, turn power OFF or recharge the unit.

C SKIP/SEARCH (◀◀, ▶▶) keys

Press to skip tracks or search disc in the forward or backward direction.

D REPEAT key

Press for using various playback features.

E P.MODE key

Use with program playback, AI edit playback, user repeat.

F B.BOOST key

Press to activate low-frequency compensation.

G D.A.S.C. key

Press to switch the Digital Anti-Shock Circuit which prevents sound skipping.

H OPEN/HOLD switch

Use to open the top lid and turn the hold function on/off.

I VOLUME control

Turn to adjust the listening level.

J PHONES (Headphones) jack

K DC IN jack

L Remote receptor

Only for models supplied with card remote control unit (see "Accessories").

Various playback features

Pressing the REPEAT key in the play or stop mode allows you to enjoy various playback features.

 
Press the REPEAT key.



Each press switches the repeat modes as follows.


1 Canceled position

Returns to the normal play mode.



2 One-track repeat

 The track being played or selected track will be played repeatedly.




3 All-track repeat

All tracks on the disc will be played repeatedly.




4 Shuffle play

 All tracks on the disc or all of the programmed tracks will be played in a random order.



5 Scan play

 A part of every track on the disc will be played for 20 seconds. (Fast forward or fast reverse operation is not possible.)



- In case shuffle play or scan play is selected during playback, the playback of the selected mode starts after the current track being played has completed.
- The REPEAT key is invalid during AI edit playback.

Using User Repeat

 
If you designate the point you want to start listening from beforehand, you can return and start playback from that point while playing a different section. This is convenient when you want to listen starting from the same section repeatedly.

1 Designating the start position.


1 Start playing a CD.

- Be sure to cancel the program, AI edit, and repeat modes.

2 Hold down the P.MODE key for 2 seconds or longer at the point you want to designate.



Hold down for 2 seconds or more.

 


- If you want to change the start position, start over from step 2.
- Stopping playback cancels the designation.
- Selecting repeat mode cancels the designation.

2 Returning to the start position.

While continuing playback from step 1, press the P.MODE key when you want to return to the designated position.



 
Press once



- Playback starts from the designated position.
- Stopping playback cancels the designation.
- Selecting repeat mode cancels the designation.

Playback from the first track

 1 Connect headphones.

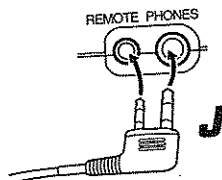


- Accepts the supplied headphones, or other optional headphones with a mini plug.
- The REMOTE terminal can be used only when the unit has headphones with remote controller.

2 Open the top cover.




3 Place a disc.

 Place with labeled side up.

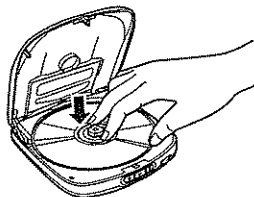


- Secure the disc by pushing a position near the center hole until it clicks.

 4 Close the top cover.

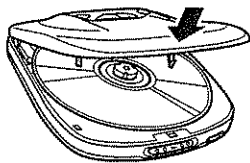



- Press down on the central front portion of the lid until it clicks shut.

 5 Make sure the HOLD switch has been released.



- Release the HOLD switch when performing an operation.

  6 Start playback.





Track number Elapsed time of the track

- The power comes ON and playback begins.

7 Adjust the volume.

To decrease volume

  To increase volume

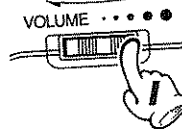


Volume display (0 to 62)

- When listening through headphones with remote controller, set the volume of the player to around 40 and adjust with the volume control of the remote controller.

 
Programming tracks in desired order

Desired tracks can be played in the desired order.

Preparations

- Enter the stop mode by pressing the  key while playback.



1 Press the P.MODE key.



Lights.


2 Select the desired track numbers in the order you want to play them.

  1 Select a track...

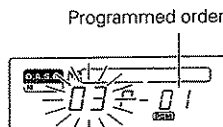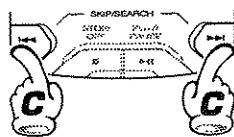


Track number blinks during selection.

 2 And enter it.





- Select other tracks in the desired order by repeating 1 and 2 above.
- Up to 20 tracks can be programmed at a time.

 3 Start playback.



To change a programmed content

  
- 1 Enter the stop mode.
- 2 Display the content to be changed.

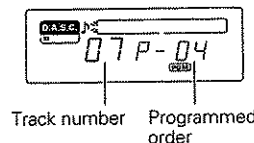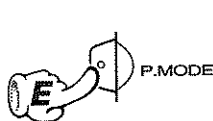

- Press the key repeatedly until the programmed order containing the track number to be changed is displayed.

3 Change the track number.

 (1) Select a track...

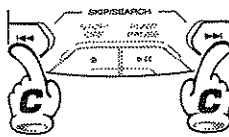


(2) And enter it.




To check the programmed contents


 
- 1 Enter the stop mode.
- 2 Press the P.MODE key.

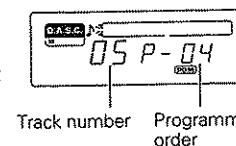


- Each press displays the next track number in the programmed order.

To clear the program

  - 1 Enter the stop mode.
- 2 Press the  key.

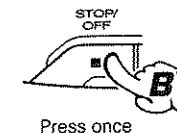

Press once

 


- Opening the lid cancels the program.

 
AI edit playback

AI edit playback plays all of the tracks on a disc within the set time period by fading out (reducing volume gradually at the end of) every track. (Fast forward and fast reverse operations are not possible.)


Preparation

- Enter the stop mode by pressing the  key while playback.
- The program mode and repeat mode should be deactivated.

1 Press the P.MODE key twice.




 
2 Select the time period available for playback.

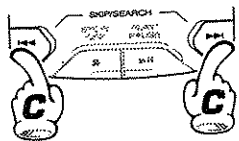


Each press of the key switches the time periods as follows.

- 1 15 (min.)
- 2 30
- 3 45
- 4 60

  3 Start playback.

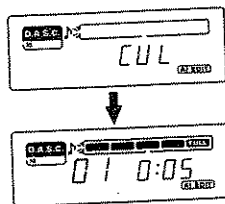

- AI edit playback may not be available if the disc contains a large number of tracks and the set period is too short for it.
- The AI edit mode can be canceled by pressing the  key in stop mode.

Various playback features

Pressing the REPEAT key in the play or stop mode allows you to enjoy various playback features.

 
Press the REPEAT key.



Each press switches the repeat modes as follows.


1 Canceled position

Returns to the normal play mode.




2 One-track repeat

 The track being played or selected track will be played repeatedly.




3 All-track repeat

 All tracks on the disc will be played repeatedly.




4 Shuffle play

 All tracks on the disc or all of the programmed tracks will be played in a random order.



5 Scan play

 A part of every track on the disc will be played for 20 seconds. (Fast forward or fast reverse operation is not possible.)



- In case shuffle play or scan play is selected during playback, the playback of the selected mode starts after the current track being played has completed.
- The REPEAT key is invalid during AI edit playback.

Using User Repeat

If you designate the point you want to start listening from beforehand, you can return and start playback from that point while playing a different section. This is convenient when you want to listen starting from the same section repeatedly.

1 Designating the start position.

1 Start playing a CD.

- Be sure to cancel the program, AI edit, and repeat modes.

2 Hold down the P.MODE key for 2 seconds or longer at the point you want to designate.

 


Hold down for 2 seconds or more.

- If you want to change the start position, start over from step 2.
- Stopping playback cancels the designation.
- Selecting repeat mode cancels the designation.

2 Returning to the start position.

While continuing playback from step 1, press the P.MODE key when you want to return to the designated position.

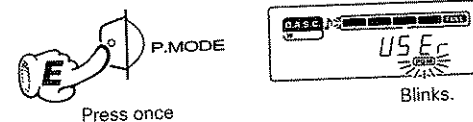

Press once

- Playback starts from the designated position.
- Stopping playback cancels the designation.
- Selecting repeat mode cancels the designation.

In case of difficulty

What seems to be a serious trouble may sometimes be due to a simple mistake. Before calling for service, check the items shown in the following table again. (If you request servicing due to the reasons shown in the table, the service may be charged in some cases.)

HOLD switch

The operation keys of the main unit except for the OPEN key and volume control are defeated. This position prevents undesired operation when the unit is put in a bag, etc.



Set to the left side.



- Be sure to release the switch (set to the center position) before performing any operations. Operations cannot be performed if it is in the HOLD position.

 
Sound skip guard function (D.A.S.C.)

* D.A.S.C. (Digital Anti Shock Circuit)

It prevents skipping by storing the CD's digital data in memory, and then playing back from the memory.

Mechanism of D.A.S.C.

Display

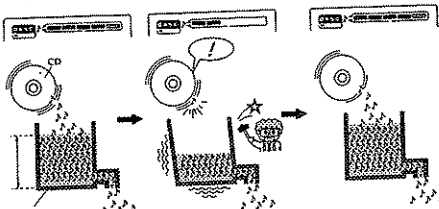

Digital memory Reproduced sound

- In case of vibration above a certain degree, the memory data may be exhausted and the guard from sound skip may become temporarily ineffective.

Setting the D.A.S.C.

Each press changes between the following.



D.A.S.C.

The reproduced sound is interrupted during switching.

- 1 **D.A.S.C. HI**
Memorizes about 11 seconds of digital data.
- 2 **D.A.S.C. LOW**
Memorizes about 5 seconds of digital data. Provides playback of higher sound quality than D.A.S.C. HI.
- 3 **D.A.S.C. OFF (cancel)**
We recommend turning off the skip guard to extend battery life when listening in a place with no vibrations.



Symptom	Cause	Remedy
No operation occurs when operation keys are pressed.	<ul style="list-style-type: none"> • The OPEN/HOLD switch is set to HOLD. • The batteries are exhausted. • The disc is placed upside down. • Condensation has occurred inside the unit. • The AC adapter or car battery adapter is disconnected. 	<ul style="list-style-type: none"> • Set the switch to center. • Replace both of the two dry cell batteries, or recharge the rechargeable batteries. • Place the disc with the labeled side up. • Leave the unit for about 1 hour before re-use. • Connect it properly.
No sound is heard from the headphones.	<ul style="list-style-type: none"> • The headphones are connected incompletely. • The volume on the main unit or remote control is set turned down. 	<ul style="list-style-type: none"> • Insert the plug securely into the PHONES jack. • Adjust the volume on the main unit or remote control.
Sound skips, or is interrupted.	<ul style="list-style-type: none"> • The D.A.S.C. is set to "OFF". • A strong vibration that exceeds the capacity of the D.A.S.C. has occurred. • The disc is dirty. • The lens is dirty. • The headphone plug is dirty. • The batteries are weak. 	<ul style="list-style-type: none"> • Set the D.A.S.C. to "ON". • Place the unit in a place not subject to vibration. • Clean it. • Clean it. • Clean it. • Replace or recharge the batteries.
Noise interferes.	<ul style="list-style-type: none"> • The headphone plug is dirty. • The batteries are weak. • The headphones are connected incompletely. 	<ul style="list-style-type: none"> • Clean it. • Replace or recharge the batteries. • Insert the plug securely into the PHONES jack.
Rechargeable batteries cannot be recharged.	<ul style="list-style-type: none"> • Commercially-available rechargeable batteries are used. 	<ul style="list-style-type: none"> • Use the exclusive rechargeable batteries (NB-77/NB-88).

 
Notes

1. This system uses a microcomputer so it may malfunction due to external noise or interference. In such a case, unplug the power cord and remove the batteries, then plug the power cord again and insert the batteries again.
2. Erroneous operation may occur when the headphone plug is plugged or unplugged; but this is not a malfunction.

Controls and indicators

DPC-961/761 (En)


Display

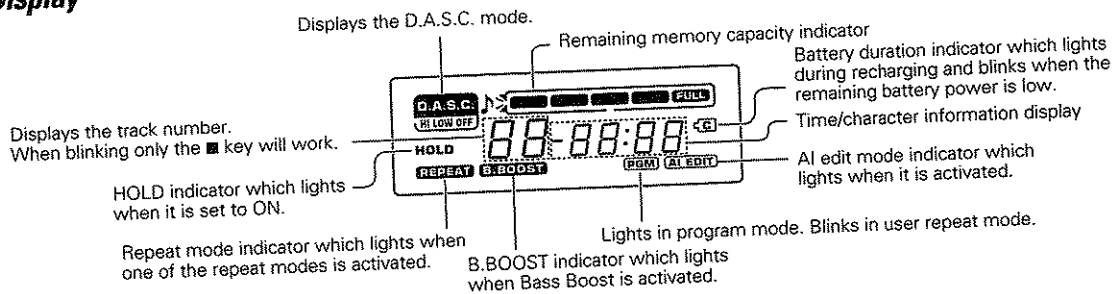

Card remote control unit

Only the type supplied can be used (see "Accessories").

 When the card remote control unit is used, connect the AC adapter or car battery adapter to the main unit. The card remote control unit cannot be used if the main unit is powered from batteries.

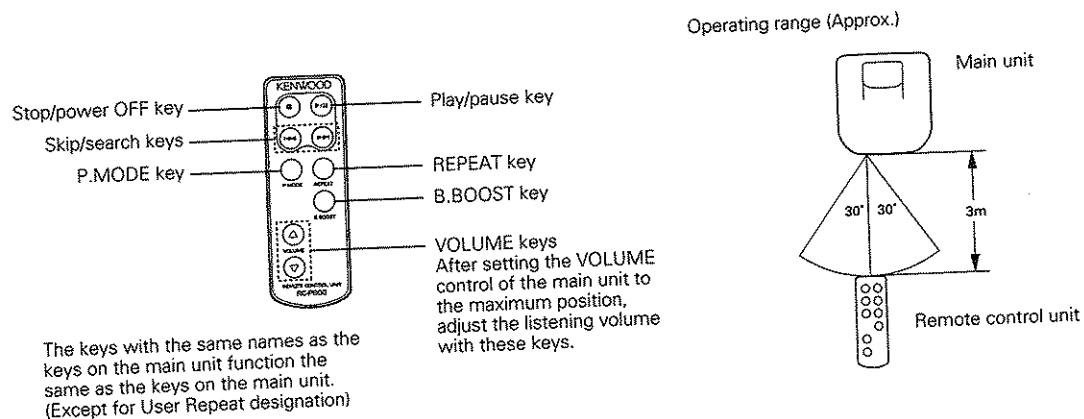


- When pressing several operation keys on the remote control unit, leave an interval of more than 1 second between keys.
- Erroneous operation may occur when the main unit is illuminated by direct sunlight or the light of a high-frequency lighting (inverter) fluorescent lamp. In such a case, change the unit position to prevent erroneous operation.
- For battery replacement, use a commercially-available lithium battery (CR2025).

Headphones with remote controller


Only the type supplied can be used (see "Accessories").

 The keys with the same names as the keys on the main unit function the same as the keys on the main unit.

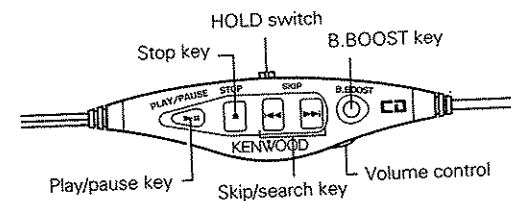


How to use the bag clip

 - 1 Fit the clip onto the headphone cord.

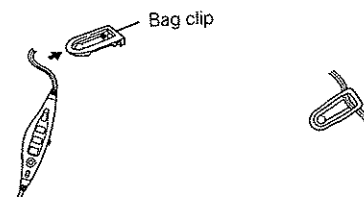

- 2 Attach the clip to a pocket or bag.

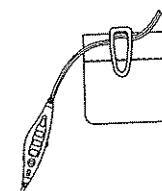 

Battery powered operation

 
This unit can be powered from three kinds of power supplies; batteries, mains power or car battery. (The car battery adapter is needed for car battery operation.) When using batteries, use alkaline batteries or rechargeable batteries. If the unit is not to be used for a long period (for more than one week), remove the batteries out of the unit.

Rechargeable battery operation

(Only the rechargeable battery packs specified by KENWOOD can be used.)


Be always sure to use the provided rechargeable battery pack or optional NB-88 or NB-77. Never use other than specified battery packs. Recharging completes in about 2 hours.

- ① Insert rechargeable batteries paying attention to the \oplus and \ominus polarity.

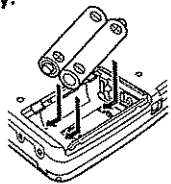


- Recharging is not possible during playback. Be sure to set the power OFF before starting recharging.
- The rechargeable batteries can be recharged and re-used for around 500 times. When the possible playback period decreases, purchase the optional NB-88/NB-77 rechargeable batteries.
- Be sure to close the top cover of the unit before proceeding to recharging.

 - ② Start recharging.
(1) Set the power OFF.
(2) Plug in the AC adapter.

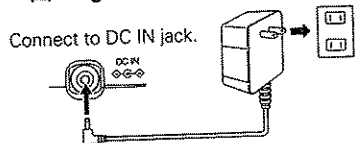


 - (3) Wait for 5 seconds, then press the **STOP/OFF** key twice quickly.




- ③ After recharging, unplug the AC adapter from this unit.

 - When using a rechargeable battery pack which is new or which has not been used for more than 2 months, the operating period may be shorter than normal. This is due to the properties of the battery and not a malfunction. After recharging, use the battery pack on the unit until it is exhausted. The original performance of the battery performance can be recovered by repeating this cycle a few times.

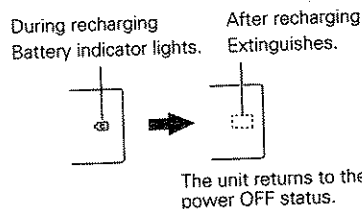


Alkaline battery operation

 - ① Open the cover.

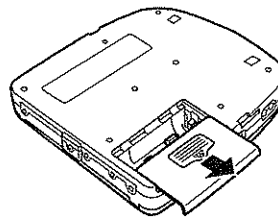

 - ② Insert two LR6 alkaline batteries paying attention to the \oplus and \ominus polarity.

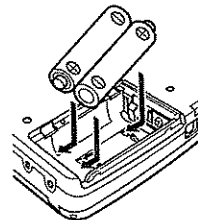

- Use commercially-available LR6 alkaline dry cell batteries.
- Always replace both batteries at a time.

- ③ Close the cover.

Battery duration indicator

The duration at which the battery indicator starts to blink is variable depending on the type of battery used. Refer to the table on the right.

Battery duration indicator




Battery Type	Blinking Timing	Treatment
Rechargeable battery	When the battery is nearly exhausted	In a while, the power will be turned off automatically. Then recharge the battery pack.
Dry cell batteries	When the batteries are half exhausted	Playback is possible while the indicator is blinking.


External battery case operation

You can enjoy longer continuous playback by using the battery case together with the supplied rechargeable batteries (or separate alkaline batteries).

 - ① Remove the cover of the battery case.

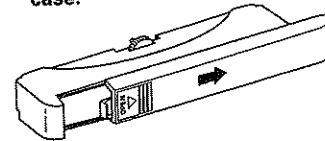


 - ② Insert two LR6 alkaline batteries paying attention to the \oplus and \ominus polarity.

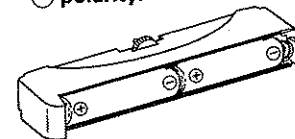

- ③ Close the cover.

 - ④ Attach to the main unit.

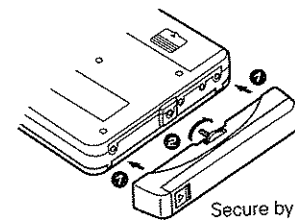

Secure by turning the screw in the direction of the arrow.

 
Note:
If the battery case is not to be used for a long period, detach it from the main unit. Otherwise, the power of the LR6-size dry cell batteries will be exhausted quickly. Also remove the dry cell batteries from the battery case.

Connections

Ensure that the power of the all of the components is off before connecting the cords.


DPC-961/761 (En)

Listening through speakers



Speakers with built-in amplifier

 Listening through car audio

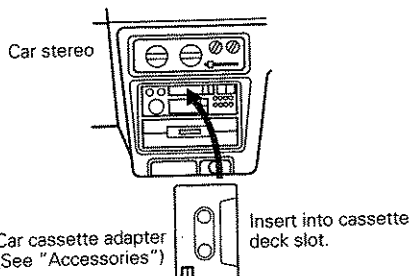

Car stereo

Car cassette adapter
(See "Accessories")

Insert into cassette deck slot.

- If sound is not produced, change the tape playing direction of the car stereo. (Sound is not produced if the car stereo is set to play tape side B.)
- The sound reproduction may not be possible with some car stereo models.


 
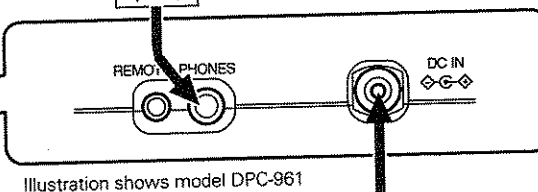 


Illustration shows model DPC-961

Note:
The REMOTE terminal can be used only when the unit has headphones with remote controller.

Car battery powered operation

 
- When the unit is not used, unplug the car battery adapter. (Otherwise, the car battery may run out, with some car models.)
- The plug may not match the cigar lighter socket of some car models.
- If the unit cannot be operated with the car battery adapter connected, suspect the possibility of a blown fuse. The fuse can be replaced by turning the electrode on the tip of the adapter plug. When replacing the fuse, be sure to use a fuse with a rating of 1 A.

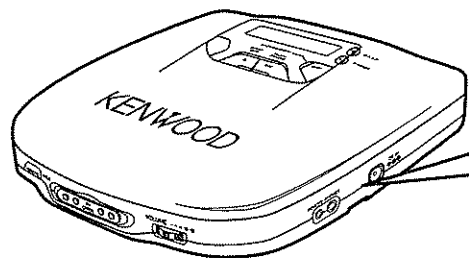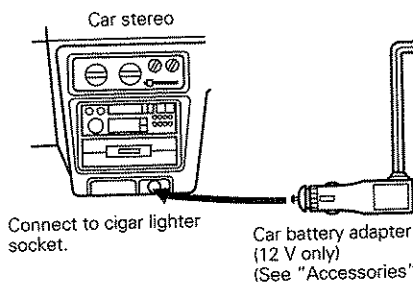

Connect to cigar lighter socket.

Car battery adapter
(12 V only)
(See "Accessories")

 Mains power operation

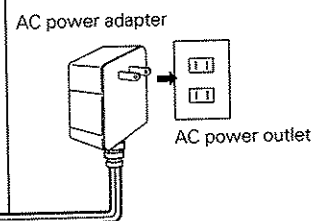

AC power adapter

AC power outlet

For rechargeable battery: Type NB-88, NB-77



ATTENTION

Nickel-Cadmium battery must be recycled or disposed of properly.
State laws may vary regarding the handling and disposal of Nickel-Cadmium batteries.
Please contact your Authorized KENWOOD Dealer for more information.

The marking of products using lasers (Except for some areas).

**CLASS 1
LASER PRODUCT**

This label is attached to the bottom panel and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

Safety precautions

⚠ Caution: Read this page carefully to en

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE TH

IMPORTANT SAFEGUARDS

Please read all of the safety and operating instructions before operating this unit. For best result These safety and operating instructions should be retained for future reference.

- 1. Power sources** — The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 2. Power-cord protection** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit.
- 3. Enclosure removal** — Never remove the enclosure. If the internal parts are touched accidentally, a serious electric shock might occur.
- 4. Drop** — Do not drop the unit or apply strong shock to it. (Damage due to dropping the unit is not covered by the warranty.)
- 5. Ventilation** — Avoid hindering the ventilation of the unit by covering it with a cloth, etc.
- 6. Abnormal smell** — If an abnormal smell or smoke is detected, immediately turn the power OFF and pull out the power cord. Contact your dealer or nearest service center.
- 7. Heat** — Avoid placing the unit under direct sunlight or near a source of heat such as heating equipment. Particularly, never leave it in an automobile or on the dashboard.
- 8. Temperature** — The unit may not function properly if used at extremely low, or freezing temperatures. The ideal ambient temperature is above +5°C (41°F).
- 9. Water and moisture** — The unit should not be used near water — for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
- 10. Dust and moisture** — Avoid places where is dusty or where the humidity is high.
- 11. Vibrations** — Avoid placing the unit on an unstable place such as a shelf or in a place subject to vibrations.
- 12. Magnetic fields** — Keep the unit away from sources of magnetic fields such as TV sets, speaker systems, radios, motorized toys or magnetized objects.

safe operation.

DPC-961/761 (En)

APPLIANCE TO RAIN OR MOISTURE.

Follow all warnings placed on the unit and adhere to the operating and use instructions.

Cleaning — Do not use volatile solvents such as alcohol, paint thinner, gasoline, or benzine, etc. to clean the cabinet. Use a clean dry cloth.

Nonuse periods — The power cord of the unit should be unplugged from the outlet when left unused for a long period of time.

Damage requiring service — The unit should be serviced by qualified service personnel when:

- A. The power-supply cord or the plug has been damaged; or
- B. Objects have fallen, or liquid has been spilled into the unit; or
- C. The unit has been exposed to rain; or
- D. The unit does not appear to operate normally or exhibits a marked change in performance; or
- E. The unit has been dropped, or the enclosure damaged.

Servicing — The user should not attempt to service the unit beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

Notes on using through car stereo

In case of abnormality such as smoke production, immediately unplug the car battery adapter from the cigar lighter socket.

Do not leave the products or batteries in the car, particularly above the dashboard, for this may lead to malfunction or damage due to solar heat.

If the unit is connected to a car stereo using an audio cord, noise may sometimes interfere.

In case of abnormality, immediately press the open key to turn the power OFF, and unplug the adapter from the power outlet. Then please contact your nearest KENWOOD service center.

Before applying power

Caution: Read this section carefully to ensure safe operation

Units are designed for operation as follows.

U.S.A. and Canada	AC 120 V only
Australia	AC 240 V only
Europe and U.K.	AC 230 V only
*Other countries	AC 110-120 / 220 -240 V switchable

*AC voltage selection

 
AC adaptor shipped to other countries are equipped with an AC voltage selector switch. Refer to the following paragraph for the proper setting of this switch.

AC adaptor operates on 110-120 volts or 220-240 volts AC. Before connecting the power cord to your AC outlet, make sure that the setting position of this switch matches your line voltage. If not, it must be set to your voltage in accordance with the following direction.

Note:

Our warranty does not cover damage caused by excessive line voltage due to improper setting of the AC voltage selector switch.

AC voltage selector switch

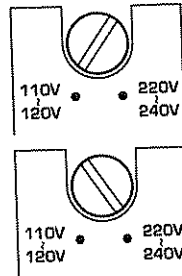

The AC adaptor is provided with a voltage selector switch which has been preset for 220-240 V. If using it with 110-120V power, switch to the 110-120V position.

 
Maintenance

DPC-961/761 (En)

Simple care

Care of lens

When the lens in the pick-up gets dirty, malfunctions including the impossibility of playback may occur. The lens should be cleaned using a commercially-available camera lens blower, etc. Do not touch the lens to prevent damaging the mechanism. Also do not use a lens cleaner or disc cleaner product.

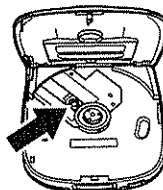

Care of main unit

When the unit gets dirty, clean with a soft, dry cloth. If the unit is stained seriously, a moistened cloth can be used. Do not use benzine or thinner for these will damage the unit.

Cleaning the plug

Wipe the headphone plug with a soft cloth to keep clean. A dirty plug may cause noise or malfunction.

Caution on disc used

Usable discs

This unit is capable of playing discs marked with . Other discs cannot be played. 8 cm single CDs can be played as they are; do not use a commercially-available single CD adapter.

Handling

Hold compact discs so that you do not touch the playing surface.

Do not attach paper or tape to either the playing side or the label side of compact discs.

Never play a cracked or warped disc.

During playback, the disc rotates at high speed in the player. Therefore, to avoid danger, never use a cracked or deformed disc or a disc repaired with tape or adhesive agent.

Cleaning

If fingerprints or foreign matter become attached to the disc, lightly wipe the disc with a soft cotton cloth (or similar) from the center of the disc outwards in a radial manner.



Storage

When a disc is not to be played for a long period of time, remove it from the CD player and store it in its case.

Precaution against condensation

Immediately after a room is heated or in a room with high humidity (or vapor), the unit may malfunction due to the condensation of dew or mist on the pick-up lens. In such a case, leave the unit for about an hour before trying to use it again.

Specifications

Format
System Compact disc digital audio system
Laser Semiconductor laser

Audio
Frequency response 20 Hz ~ 20 kHz, ± 3 dB
PHONES output level/impedance max. 900 mV/22 k Ω
(Headphone output: 16 Ω , 1 kHz 10 mW + 10 mW)

Power supply
External DC supply DC 12 V
Rechargeable battery DC 2.4 V
Commercially-available alkaline batteries (LR6, AA) $\times 2$ DC 3 V

Battery life (continuous repeat playback)
(Figures inside parentheses are the values when D.A.S.C. is ON.)
Commercially-available alkaline batteries (LR6, AA) $\times 2$ Approx. 9 (5.5) hours
Rechargeable battery (NB-88) Approx. 4 (3.5) hours
With 2 commercially-available alkaline batteries and
rechargeable battery Approx. 12.5 (9.5) hours
With 4 commercially-available alkaline batteries Approx. 22 (12) hours

Dimensions (W \times H \times D) 130 mm \times 32 mm \times 137 mm

Weight (net) 275 g

Note:
 KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

Accessories	DPC-961	DPC-761	
		For the U.K.	For other countries
Headphones with remote controller	1	1	1
Rechargeable battery	NB-88 $\times 2$	NB-88 $\times 2$	NB-88 $\times 2$
AC adaptor	1	1	1
Battery case	1	1	1
Car cassette adaptor	1	1	_____
Car battery adaptor	1	1	_____
Card remote control unit	1	_____	1
Carrying case	1	_____	1

The standard accessories vary depending on the model of the unit.
 The accessories which are not equipped as standard are optionally available. For details, please consult your dealer.