

STEREO POWER AMPLIFIER

KAC-721

## INSTRUCTION MANUAL

KENWOOD CORPORATION

Take the time to read through this instruction manual. Familiarity with installation and operation procedures will help you obtain the best performance from your new power amplifier.

#### For your records

Record the serial number found on the bottom of the unit in the spaces designated on the warranty card and in the space provided below. Refer to the model and serial numbers whenever you call upon your KENWOOD dealer for information or service on this product.

©PRINTED IN JAPAN B50-7906-00(K)(T) 90/12 11 10 9 8 7 6 5 4 3 2 1 89/12 11 10 9

### TROUBLESHOOTING GUIDE

What often appears to be a malfunction is often due to user error in operation or connection. When trouble occurs with your unit, please check the following before calling for service.

Symptom	Cause	Remedy	
The sound level is low. (No sound from one side.)	A speaker cord has become uncon- nected.	Check the speaker cord con- nections.	
The sound quality is bad. (The sound is distorted.)	The speakers are connected to the same wires.     A speaker cord is pinched by a screw in the car body.	Connect each speaker terminal to its respective speaker output.     Check the speaker wiring.	

### **SPECIFICATIONS**

Specifications subject to change without notice.

### Audio section

Max Power Output (1 kHz, 4 Ω)	70 W + 70 W
Rated output power (less than 0.5% THD, 20 Hz - 20 kHz, 4 Ω)	37 W+37 W
Frequency Response (-3 dB)	2 Hz - 70 kHz
Sensitivity (rated output) MAX.	0.1 V
MIN	5.0 V
Signal to Noice Retio	105 dB
Input Impedance	10 kΩ
Damping Factor (100 Hz)	more than 100


#### General

Operating Voltage	14.4 V (11 - 16 V allowable)
Current Consumption (MAX)	9.5 A
Dimensions (W×H×D)	220 × 45 × 150 mm
Dillieuziona (AA × 11 × D)	$(8-11/16 \times 1-3/4 \times 5-7/8 \text{ in.})$
Weight	1.6 kg (3.5 lb)

No.	Part name	External View	Number of units
1	Power connection cord		1
2	RCA pin cord		1
3	Tapping screws (φ4×45)	(8) <u> </u>	. 4

### **INSTALLATION**

### 1. Installation

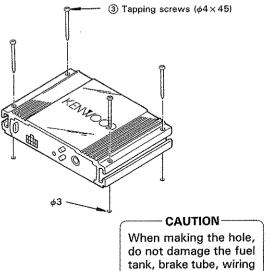


other side.

harnesses, etc. on the



- ·When installing to the car, install the unit securely for safety driving.
- Use screws supplied as accessories when installing the unit.
- Install the unit in a wellventilated place and do not place the (heavy) object on it.

#### 2. Installation location

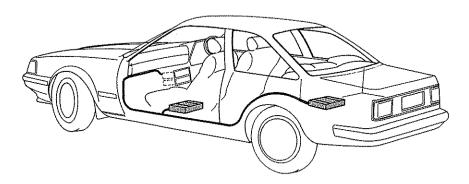


- · Since the power amplifier has no parts which require operation, it can be installed at a position away from the driver's seat without any hinderances. As generally accepted positions for its installation, places such as under the front seat
  - or inside the trunk, etc. can be considered.
- Use the extension cables. CA-8L (0.5 m), CA-18L (1 m), CA-28L (2 m), CA-48L (4 m), and CA-68L (6 m) (optional) when the connected models are to be installed away from the power amplifier.




# TO PREVENT ELECTRIC SHOCK, FIRE AND OTHER INJURY. PLEASE NOTE THE FOLLOWINGS:


 To keep good ventilation, do not anything on top of the unit.

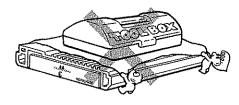


 The unit is designed to be connected 12 V DC and negative grounding.

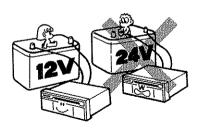


 Do not open enclosure, such as front panel, top or bottom cover.

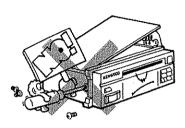


 Do not drop pieces of metal, needles, coins and other electrically conductive materials into the unit.

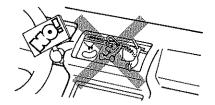

Do not place the unit, where it will be exposed to direct sunlight or close to heating device.

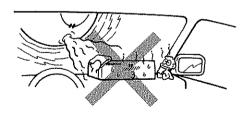

. Do not dash water on the unit.

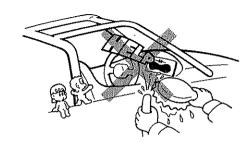


Do not place the unit in areas of excessive dust, high humidity or on unstable surfaces.



### **CLEANING**

- Turn the power off, before cleaning the unit.
- Do not use any type of abrasive pad, thinner, benzine and any such kind of objects.
- Wipe the front panel and other exterior surfaces of the unit with a soft dry cloth or a soft cloth lightly moistened with a neutral detergent.

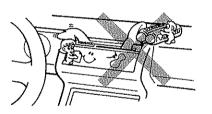

If an abnormal smell or smoke is detected, immediately turn the power off.



If you have difficulty in installing the set in your car, please contact your KENWOOD dealer.

### **CONNECTIONS**

#### **WINSTALL MANNER**

- Before installation and wiring, remove the ( – ) terminal of the battery to prevent short-circuiting.
- 2. Connect the input and output cords of the system.
- 3. Connect the ground to the metal chassis of the car.
- 4. Connect the back-up power supply lead (vellow).
- Install the set and after confirming the installation and wirings are correct, connect the (-) terminal of the battery.



 If a fuse is blown, first check that the associated wires are not shortcircuited then replace the fuse with a new one having the same capacity.

