

# ActiveLot OBd Module User's Guide

---

## Overview

The ActiveLot OBd Module gathers information from the vehicle along with the GPS location and transmits it back to the ActiveLot system. While the vehicle is running, it will transmit once every five seconds. While the vehicle is off, it will initiate a transmission cycle once every hour.

For help with installation procedures, or if you have any questions, contact:

**KeyTrak Support**

**1-800-541-5033**

## FCC Warnings

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


## Procedure

**WARNING!** Do not insert or remove the OBD module from the vehicle's OBD-II port while the vehicle is running.

1. Locate your vehicle's 16-pin OBD-II port.

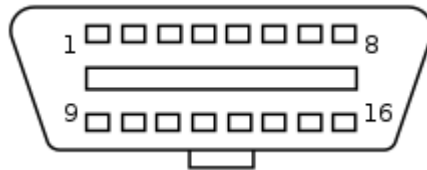

2. Insert the OBD module into the OBD-II port on your vehicle.

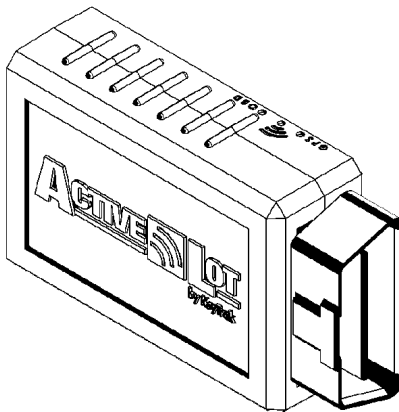

3. Start the vehicle. This is required to pull the VIN (vehicle identification number) from the vehicle's computer system.
4. You can verify the unit is transmitting using the ActiveLot iOS app, the Web app, or the KeyTrak application.

**NOTE:** A couple of minutes after installation, the OBD module will acquire the necessary GPS satellite information to provide an accurate location.