


When both levers are pushed upward simultaneously, the boat will go forward. When the right lever is pushed upward and the left lever is pushed down, the boat will turn left. When the left lever is pushed forward and the right lever is pushed down the boat will turn right.

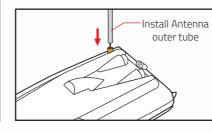

WARNING: CHOKING HAZARD-Small Parts. Not for children under 3yrs.

- Battery installation should be performed by an adult. Use only batteries
- recommended on this package and on the instruction sheet • non-rechargeable batteries are not to be recharged
- rechargeable batteries are only to be charged under adult supervision • rechargeable batteries are to be removed from the toy before being charged
- different types of batteries or new and used batteries are not to be mixed
- batteries are to be inserted with the correct polarity
- exhausted batteries are to be removed from the toy • the supply terminals are not to be short-circuited.

Wave Breakers is a registered trademark.

All Rights Reserved.

Conforms to the safety requirements of ASTM F963 and FCC regulations.

Conforms to the safety requirements of EN71. Please keep information for future reference.



MADE IN CHINA ©2015 Kid Galaxy, Ir All Rights Reserved Kid Galaxy, Inc. 150 Dow Street Manchester, NH 03101 United States 1-800-816-1135 www.kidgalaxy.com





