OPERATING INSTRUCTIONS

BATTERY INSTALLATION FOR CONTROLLER

- 1. Unscrew the battery compartment cover of remote controller with a screwdriver. (Diagram A)
- 2.Install 4 x"AA" (1.5V) alkaline batteries with polarity as shown inside battery compartment.
- 3.Screw on battery compartment cover.

TO PLAY

- 1. Press and screw antenna onto the remote controller. (Diagram B)
- 2. Push the power switch of remote controller to "ON" POSITION.
- 3.Red LED on the remote controller will turn on to indicate that the unit is
- 4.Pull the extension plug of remote controller to plug in the contact point as indicated direction which is located at the bottom of the vehicle for charging battery. (Diagram C)
- Green LED on remote controller will turn on when unit is in-charging status.
- 6. Charge for approximate 60 seconds with 2 minutes running.
- 7. Press both button 1 and 3 simultaneously for forward movement. Press both button 2 and 4 simultaneously for backward movement. Press button 1 for right turn.
 - Press button 3 for left turn. (Diagram D)
- 8. Press the button A or B to lift the shovel up or down. (Diagram E)
- 9. Operate your vehicle in a dry, clean, flat open area. Avoid sand and water.
- 10.If vehicle does not respond to remote controller. Try to operate the vehicle at a closer range (The normal operating range is around 2m-5m).
- 11. A slot is provided to fasten vehicle on the controller, and a belt clip is provided that player can carry it around.
- 12. Turn the power switch to "OFF" position when unit is not in use.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

BATTERY PRECAUTIONS

- -Do not use rechargeable batteries.
- -Do not attempt to recharge the batteries.
- -Do not mix old and new batteries.
- -Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- -Do not short circuit battery contacts. When not in use, remove batteries to prevent possible leakage.
- -Exhausted batteries are to be removed from the game unit.
- -Do not dispose of batteries in fire, batteries may explode or leak.
- -Only batteries of the same of equivalent type as recommended are to be used.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into and outlet on a circuit different from that to which the receiver is needed.
- -Consult the dealer or and experienced radio/TV technician and for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1. This device may not cause interference, and
- 2. This device must accept any interference, including interference that may cause undesired operation.

Hereby, Kid-Riffic Toys Ltd., declares that this Micro R/C Racer is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

© 2002 Kid-Riffic Toys Ltd. All Right Reserved. 8348C Olive Blvd., St, Louis, Mo. 63132, USA Toll Free No.: 1-888-565-1777

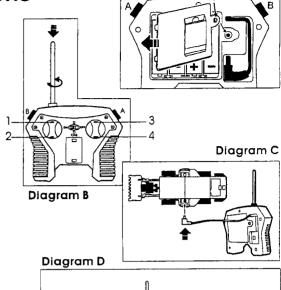


Diagram A

