



**AGES
5+**

OPERATING INSTRUCTIONS

BATTERY INSTALLATION FOR CONTROLLER

1. Unscrew the battery compartment cover of remote controller and charger with a screwdriver. (Diagram 1)
2. Install 9-VOLT (6LR61) alkaline batteries with polarity as shown inside battery compartment.
3. Screw on battery compartment cover.

TO PLAY

1. Press and screw antenna onto the remote controller. (Diagram 2)
3. Put the car into the charger and push the power switch of the charger to "ON" position. (Diagram 3)
4. The red LED on the charger will light up when the vehicle is in charging status. When it goes out, the vehicle has completed charging.
5. Turn the power switch to "OFF" position when the vehicle has completed charging. (Diagram 4)
6. Adjust the direction of driving as per Diagram 5.
7. Operate your vehicle in a dry, clean, flat open area. Avoid sand and water.
8. If vehicle does not respond to remote controller, try to operate the vehicle at a closer range. (The normal operating range is around 2m-5m).
9. Belt clip is provided that player can carry around.
10. Turn the power switch to "OFF" position when unit is not in use.

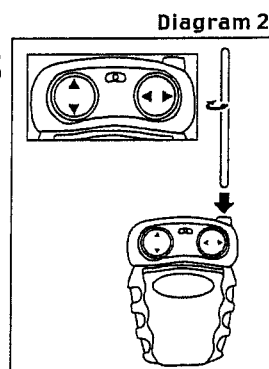


Diagram 2

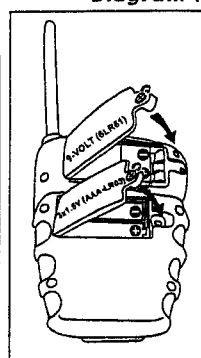


Diagram 1

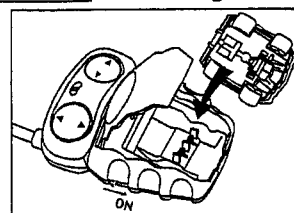


Diagram 3

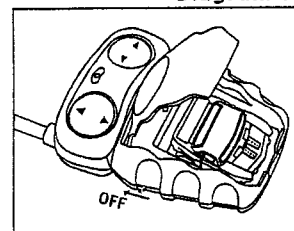


Diagram 4

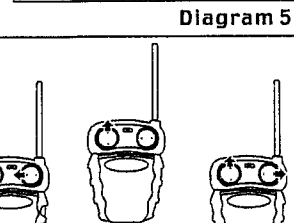


Diagram 5

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

BATTERY PRECAUTIONS:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Check and replace batteries periodically to prevent corrosion.
- Keep unit away from extreme heat.
- Do not dispose of batteries in fire, batteries may explode or leak.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation.

Hereby, Kid-Riffic Toys Ltd., declares that this 2" Phat Boyz™ is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

© 2003 Kid-Riffic Toys Ltd.
All Rights Reserved.
8348C Olive Blvd.,
St. Louis, MO 63132, USA
www.KID-RIFFIC.com
Toll Free No.: 1-888-565-1777

MADE IN CHINA

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

KID-RIFFIC TOYS 1847
Tested To Comply
With FCC Standards
FOR HOME OR OFFICE USE

Item # 1847



(V01/03)