

## #4874 WAVE BABY

### Setup and Play Instructions

For ages 19 months to 36 months

#### Battery Installation:

Remote Unit: Unscrew the two screws on the battery compartment door. Install 1x9V (6LR61) size battery.

Motor Unit: Unscrew the four screws on the battery compartment door. Install 6x1.5V(LR14/UM2) Alkaline battery

#### Assembly:

1. Insert the motor unit into the rear of the Wave Baby before inflation.
2. Inflate all three air chambers. After inflated, push all safety valves down gently.
3. Insert the remote control unit into the front of the Wave Baby.

#### Operation & Driving:

Place the Wave Baby in a swimming pool, the parent should lift up the baby and put the baby into the Wave Baby. Ensure baby's legs pass through the leg openings of the inflatable and the baby sits properly.

Press the power switches to switch on the units. The power indicators will light up to indicate the circuits are activated. Press the power switches again to switch off the units after play.

Operated by adult: Remove the remote control unit and operated by adult.

Operated by baby: Insert the remote control unit into the front of the Wave Baby & operated by baby.

#### WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference, including interference that may cause undesired operation.

#### PRECAUTION:

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the toy before being charged (if removable).

Rechargeable batteries are only to be charged under adult supervision (if removable).

Different types of batteries or new and used batteries are not to be mixed.

Only batteries of the same or equivalent type as recommended are to be used.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the toy.

The supply terminals are not to be short-circuited.

Check and replace batteries periodically to prevent corrosion.

Keep unit away from extreme heat.

Do not dispose of batteries in fire, batteries may explode or leak.

Remove all plastic pieces & ties before giving the product to a child.

**MADE IN CHINA**