

**IMPORTANT:** Digital Camera will not work properly or provide the results you expect unless you take a few moments to read and understand our operating instructions.

### SPECIFICATIONS

3 in 1 Digital camera:	Digital Still Camera Video Capturing Conferencing(Web cam)
Image Sensor:	CMOS Sensor
Resolution:	VGA 640 x 480 Pixels QVGA 320 x 240 Pixels
Color:	24 bits
Lens:	Fixed Focus=6.2mm F/2.5
Capture Range:	0.5m-infinity
Memory:	Built-in 8MB SDRAM
Capacity:	76 photo (Hd VGA) 25 photo (VGA 640x480) 332 photo ( Hd QVGA) 100 photo (QVGA 320x240)
POWER:	1 AAA Alkaline battery
Computer Interface:	USB 1.1

### IMPORTANT NOTES:

- When the battery power is Low, the LCD display will keep blinking. Please download all photos from the camera onto your computer as soon as possible as the photos will be lost when battery is low or removed.
- If you do not use the camera for a long time, please take out the battery.
- Please follow local regulations when disposing of used batteries.
- For safety reason, the battery chamber is secured with a screw. Please use a screwdriver to open and close the battery door when changing the battery.
- When the camera is connected to a computer via the USB cable, it will draw its power from the computer, and not from the battery.
- Before using the PC - Cam function, please download all photos in the camera onto your computer to avoid losing any photos.

### System Requirements

OS: Microsoft windows 98SE / 2000 / ME / XP / Vista / Mac V9.x /10.x  
Hard Disk Space: 200MB or above (need to review for G.I. Joe Artwork.)  
Memory: 32 MB RAM or above (need to review for G.I. Joe Artwork.)  
Monitor (at least 800x600 24 bits or above)

 
\*Driver can be found from the CD or downloaded at

<http://www.kids-camera.com/support.htm>

For Windows98, Microsoft® DirectX 8.0 or a higher version is required to be installed before driver installation. If there is no DirectX 8.0 in your PC, please install it first. The DirectX 9.0 is included in the CD supplied under the " DirectX " folder, you can run the dxsetup.exe to install it.

### Getting Start!


- Load battery to the correct polarity marked on the battery door.
- Turn the camera on by pressing MODE button.

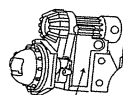

Battery door  
At the back of the camera

### Selecting Camera Functions

 Press the Mode button to cycle through these functions on the LCD display:

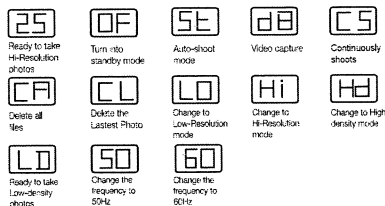

Press shutter button to take photo or select mode.

\*For best results in rooms with fluorescent lighting, use the 60Hz setting in the U.S., Canada, Mexico, and West of Japan; and 50Hz in Europe, Australia, Africa, China, and East of Japan.


### Taking Photos

 - Press "Mode" button to turn on the camera. The camera is set to take high resolution photo. The number of images that have been taken will also be shown on the LCD screen.
- Frame your subject by using the camera viewfinder.
- Hold camera steady.
- Press the "Shutter" button. A beeping sound will tell you photo has been taken, and the number on the LCD screen will go up by one.
- When you choose the "CS" mode, you will take three photos continuously.

**G.I. JOE**  
THE RISE OF COBRA™

Model GJ-820

### Headset Camera with Walkie Talkie

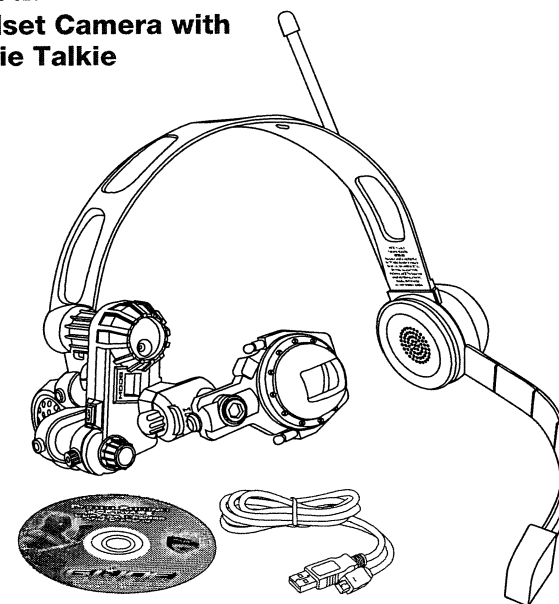

### Important Message to Customers

Thank you for purchasing one of our many top-quality G.I. JOE™ electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you explain to the child the safe and proper way to use this toy, and to help give it the long-lasting life that our products are designed for.

## Getting Started

### Installing the Batteries

Note: Batteries should always be installed by an adult.

- 1 Use a Phillips screwdriver to open the battery compartment door located on the back of the unit.
- 2 Insert 4 new LR44 batteries into Walkie Talkie and 1 AAA (R3) battery into digital Camera with + and - terminals as indicated in the compartment.
- 3 Replace the compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten the screw.

### For the Best Possible Performance

- We recommend the use of alkaline batteries for longer life.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove the rechargeable batteries from the unit before charging.
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item will not be used for an extended period of time, such as a month or longer, to prevent battery leakage or damage.
- Rechargeable batteries should only be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.

### Power On/Off to Walkie Talkie

- Slide **Talk/Off/SFX Switch** to the left to activate the Walkie Talkies.
- Both Walkie Talkies must be turned on in order to send and receive messages.
- Slide **Talk/Off/SFX Switch** to the middle to shut off the Walkie Talkies.

### Sending Voice Messages

Press and hold the **Talk Button** while speaking into the Microphone.

#### You Should Know

For clear transmission, keep the Microphone approximately two inches from your mouth.

### Receiving Messages

- Walkie Talkies must be turned on in order to send and receive messages.
- Messages cannot be received while your **Talk Button** is being pressed.
- Messages can be heard through the Speaker.

## G.I.Joe SFX

Slide **Talk/Off/SFX Switch** to SFX. Please **Talk Button** to listen advices from G.I. Joe.

### Playing Walkie Talkie Games

Walkie Talkies can be used for all kinds of fun games and activities. Here are two suggestions:

#### Hide and Seek

Just like regular Hide and Seek, but with a twist: the "Hider" can send clues to the "Seeker" using the Walkie Talkies.

#### Mystery Sounds

Can you recognize the mystery sound? One kid sends a sound over the Walkie Talkies, while another tries to guess what the sound is. Examples can include an animal, song, TV show, or anything else!

## Maintenance

It is important to keep the Walkie Talkies as dry and clean as possible. You may clean the cabinet with a cloth or sponge moistened with mild soap and water. Do not attempt to use strong cleansers or solvents, as they may cause damage.

## Questions or Comments

- For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: **1-888-TOP-TOYS**.

Also visit our website: [www.toptoysonline.com](http://www.toptoysonline.com)

**If problems persist, please do not attempt to repair unit; see warranty for factory service.**

 
 
## Troubleshooting

If one or both of the Walkie Talkies do not work, this may indicate that the batteries are weak. Insert 4 new LR44 batteries into each unit.


If the signal range of the Walkie Talkies decreases notably, this may again be an indication that the batteries are weak. Insert 4 new LR44 batteries into each unit. Please keep in mind that this product does not transmit well through obstacles such as trees, buildings, and metal structures.

If there is a sizable increase in static, it may be due to the proximity of electric motors, fluorescent lights, power lines, or other signal-disrupting objects. You may have to change your location.

**If problems persist, DO NOT ATTEMPT TO REPAIR THE UNIT. See the Warranty for factory services.**

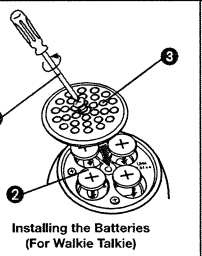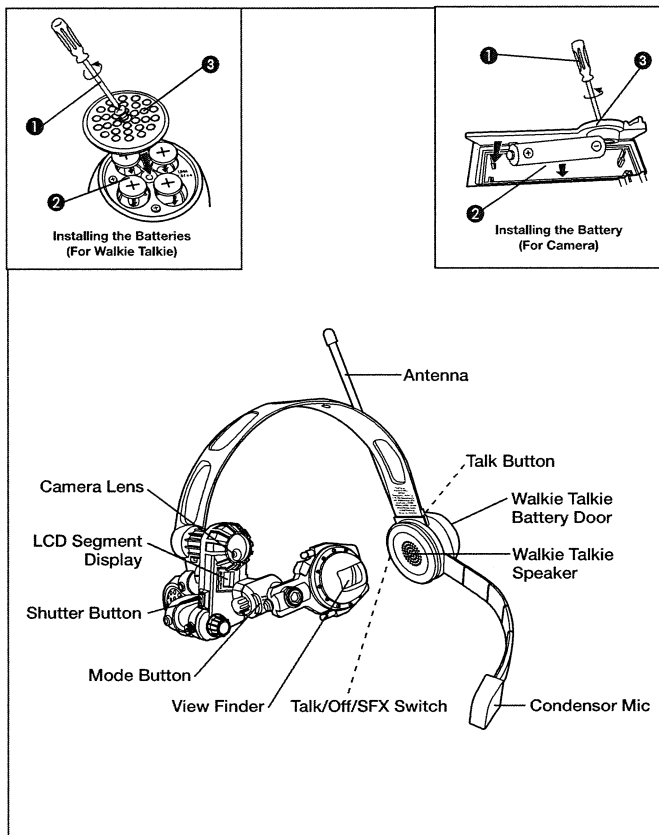

 Installing the Batteries (For Walkie Talkie)

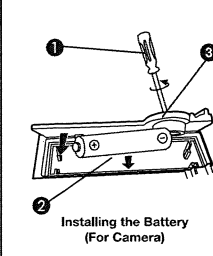

Installing the Battery (For Camera)

## FCC Warning

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This Class B digital apparatus complies with Canadian ICES-003.

KIDdesigns, Inc.  
1299 Main Street, Rahway, NJ 07065  
Tel No.: (732) 5749000

## CAUTION:

- 1) As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. In other countries, have the doctor call your local poison control center.
- 2) Make sure the batteries are inserted correctly and always follow the toy and battery manufacturer's instructions.
- 3) Do not mix old and new batteries, alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

## Limited One-Year Warranty

KIDdesigns warrants this product to be free from defects in workmanship and materials under normal use and conditions, for a period of one year from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts thereof to the store where it was originally purchased. If you need to send the product for service during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge (except for a \$6.00 charge for handling, packing, return UPS/postage and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

1. Remove batteries (if applicable) and pack unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of KIDdesigns, for the sum of \$6.00.
4. Send the unit prepaid to the Factory Service Center listed below.

**NOTE:** This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to one year, and KIDdesigns will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Send unit to:  
**Consumer Repair Department**  
**KIDdesigns, Inc.**  
**1330 Goodyear Dr.**  
**El Paso, TX 79936-6420**  
HASBRO and its logo, G.I. JOE™ and all related characters are trademarks of Hasbro and are used with permission. ©2009 Hasbro. All Rights Reserved.  
©2009 Paramount Pictures Corporation. All Rights Reserved.  
Manufactured and Distributed by KIDdesigns, Inc. Rahway, NJ 07065-5024