

DRAFT INSTRUCTION BOOKLET

Hot Wheel

Model HW245

Walkie Talkie With Headset

Getting Started

Installing Batteries

1. Open Battery Compartment
2. Insert one 9 volt Battery for each unit

We recommend

- Using Alkaline or rechargeable batteries.
- Removing batteries if unit is not used for more than 30 days.

Sending and Receiving Messages

3. Turn unit on by rotating knob upward until a click is heard.
4. Adjust Volume
5. Depress push button to talk. After speaking say "Over and Out" so your partner knows you're finished, and let go of the push button.
3. To turn unit off, rotate knob downward until a click is heard.

Using the Headset

6. Use the headphone plug and plug into the jack of the unit, which will auto cut-off and replace the speaker and microphone of the unit.
7. Depress push button to talk. After speaking say "Over and Out" so your partner knows you're finished, and let go of the push button.

You should know

- Speak into Microphone / Speaker with the unit a few inches away from your mouth
- Your Walkie – Talkie cannot simultaneously send and receive messages.

FCC Warning

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Trouble Shooting

Problem	Probable Cause	Remedy
Does not Send or Receive	Weak batteries	Replace with new Alkaline or rechargeable batteries.
Distorted, fuzzy, or poor sound level	Weak batteries	Replace with new Alkaline or rechargeable batteries.
	Transmission / reception Blocked by building, tower, etc.	Move to a new location

DRAFT INSTRUCTION BOOKLET

Barbie

Model BE225

Walkie Talkie

Getting Started

Installing Batteries

1. Open Battery Compartment
2. Insert one 9 volt Battery for each unit

We recommend

- Using Alkaline or rechargeable batteries.
- Removing batteries if unit is not used for more than 30 days.

Sending and Receiving Messages

3. Turn unit on by rotating knob upward until a click is heard.
4. Adjust Volume
5. Depress push button to talk. After speaking say "Over and Out" so your partner knows you're finished, and let go of the push button.
6. To turn unit off, rotate knob downward until a click is heard.

You should know

- Speak into Microphone / Speaker with the unit a few inches away from your mouth
- Your Walkie – Talkie cannot simultaneously send and receive messages.

FCC Warning

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Trouble Shooting

Problem	Probable Cause	Remedy
Does not Send or Receive	Weak batteries	Replace with new Alkaline or rechargeable batteries.
Distorted, fuzzy, or poor sound level	Weak batteries	Replace with new Alkaline or rechargeable batteries.
	Transmission / reception Blocked by building, tower, etc.	Move to a new location

DRAFT INSTRUCTION BOOKLET

Hot Wheel

Model HW225

Walkie Talkie

Getting Started

Installing Batteries

1. Open Battery Compartment
2. Insert one 9 volt Battery for each unit

We recommend

- Using Alkaline or rechargeable batteries.
- Removing batteries if unit is not used for more than 30 days.

Sending and Receiving Messages

3. Turn unit on by rotating knob upward until a click is heard.
4. Adjust Volume
5. Depress push button to talk. After speaking say "Over and Out" so your partner knows you're finished, and let go of the push button.
6. To turn unit off, rotate knob downward until a click is heard.

You should know

- Speak into Microphone / Speaker with the unit a few inches away from your mouth
- Your Walkie – Talkie cannot simultaneously send and receive messages.

FCC Warning

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Trouble Shooting

Problem	Probable Cause	Remedy
Does not Send or Receive	Weak batteries	Replace with new Alkaline or rechargeable batteries.
Distorted, fuzzy, or poor sound level	Weak batteries	Replace with new Alkaline or rechargeable batteries.
	Transmission / reception Blocked by building, tower, etc.	Move to a new location