




MODEL HW-288

X'Treme Cam Wireless Video Camera

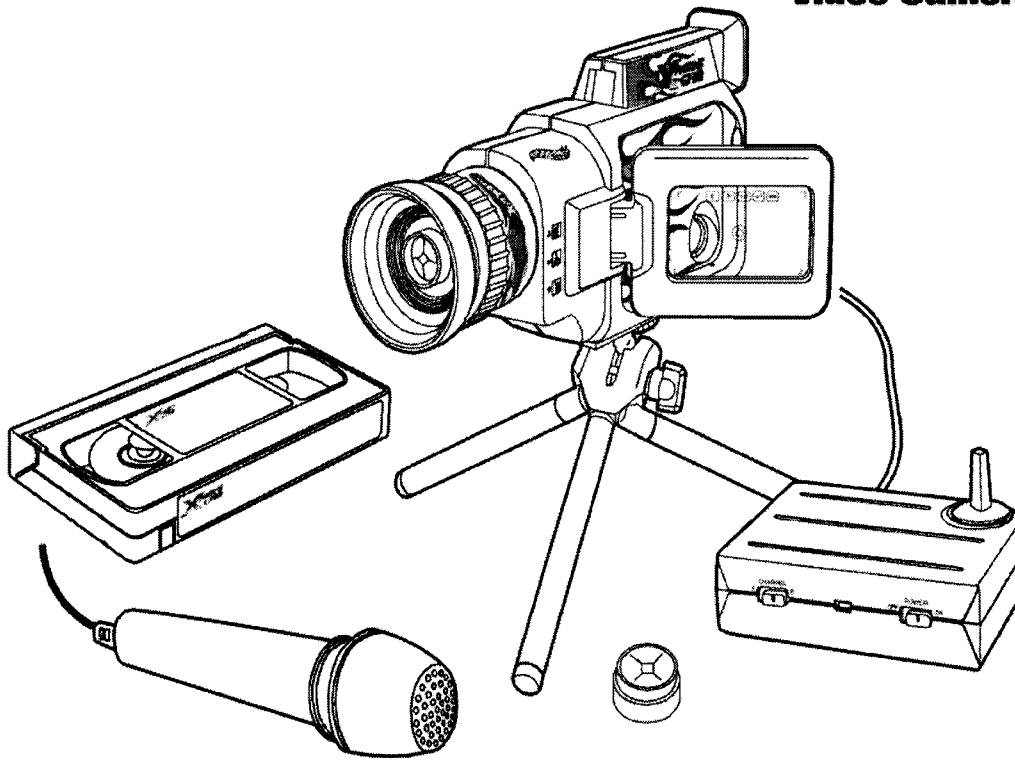

CAUTION-ELECTRICALLY OPERATED PRODUCT

NOT RECOMMENDED FOR CHILDREN UNDER 3 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK. AC 120V, 60Hz 8 WATTS UL LISTED.

Important Message to Consumers

Thank you for purchasing one of the Hot Wheels™ brand's many top-quality electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you explain the safe and proper way to use this toy, and to help give it the long-lasting life that Hot Wheels™ branded products are designed for. We strongly recommend that parents regularly examine this product, all included accessories, and the adapter cord for excessive wear, fraying, cracks, or other damage that may result in the risk of fire, electric shock, or injury. In the event of such conditions, please cease using the product and refer to the Limited Warranty included in this booklet. Please keep these instructions for future reference as they contain important information.

*Adult needed to connect camera base to TV or VCR. VCR required in order to record. The video camera alone does not record.

HW-288 is a high quality's 2.4GHz cordless video camera system, got the most life like's image and clarity sounds. The transmission range is up to 10 meter (depend on environment) so you can take image all around your house freely.

FCC Warning

This device complies with Part 15 of the FCC Rules. operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for the compliance could void the user's authority to operate the equipment.

Getting Started

Camera

Battery Installation

1. Unscrew the battery door by screwdriver.
2. Remove the battery door and insert 6 "AA" batteries, checking the + and – ends of the batteries.
3. Close the battery door and screw it back.

We recommend

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Removing batteries if unit is not used for more than 30 days.

Base Unit

Backup Battery Installation

The backup battery is to keep the universal remote control setting during AC power failure occurs or the AC adaptor is accidentally disconnected.

1. Unscrew the battery door by screwdriver.
2. Remove the battery door and insert 2 "AAA" batteries, checking the + and – ends of the batteries.
3. Close the battery door and screw it back.

We recommend

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Removing batteries if unit is not used for more than 30 days.

Power Connection

Important: Please use the power adaptor (DC 6V 500mA) came with the unit only.

1. Plug in the power adaptor came with the unit to the wall outlet and the base unit.
2. Turn on the base unit by switching the POWER ON/OFF switch to ON. The green LED on the base unit will be turned on.

Hooking to TV

NOTE: *If you want to record image to videotape, you must connect HW-288 to VCR. But if you just want transmit image to TV, you can just connect HW-288 to TV only.*

1. Turn off both your TV and the HW-288 base unit.
2. Connect the yellow plug to your TV's VIDEO IN jack and the white plug to AUDIO IN.
3. To check the connection, please turn on your TV and both BE-278 base and camera. Switch TV to LINE IN mode than you should see picture capturing by the camera.

Hooking to VCR

NOTE: Please make sure the connection between your TV and VCR is working properly before install the HW-288.

1. Turn off your TV, VCR and the HW-288 base unit.
2. Connect the yellow plug to your VCR's VIDEO IN jack and the white plug to AUDIO IN.
3. To check the connection, please turn on your TV, VCR and both HW-288 base and camera. Switch both TV and VCR to LINE IN mode and than you should see picture capturing by the camera.

Recording your own video

1. Turn on the VCR, HW-288 base unit and the camera. The green LEDs on the base and camera will be turned on. Put in a blank videotape into your VCR.
2. To start recording, press the REC button on the camera. The red LEDs both in the front and back on the camera will be turned on to indicate it is recording.
3. To pause it, just press the PAUSE button which locate in the center of POWER ON/OFF Switch. The red LEDs will become flashing.
4. To continue the recording, just press the PAUSE button again.
5. After complete recording, just presses the STOP button on the camera then turn it off.

NOTE: Depending on the brand of VCR you are using, it may have difference operation for pause and re-recoding operation. Please read your VCR operation manual carefully and follow steps base on it.

Play your Video

1. You can also access your VCR by using VCR keys on the camera so you don't need to walk back and forth.

Accessories

Tri port – For you to fix the camera so you can take your picture by yourself.

Maintenance

Cleaning the Cabinet

Take cares to keep the unit clean and dry. You may clean the cabinet with mild soap and water.