

MB-134 I/B Draft

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

Getting Started

1. Open Battery Compartment by screw driver.
2. Plug a 9V batteries into the battery snap, checking the + and – ends of the batteries.
3. Close the battery compartment.

We recommend

- Removing batteries if unit is not used for more than 30 days.

Button Functions

Demo/Off

4. Press the Demo/Off button to play demo sound. Or if the unit is working/sound than to turn off the unit.

Test

5. Press the Test button to play test sound.

Scan

6. Press the SCAN button to start the metal detector scanning.
7. You need to adjust the sensitivity before scanning. First rotate the SENS wheel fully anti-clockwise then hold it on the air. Slowly turn the SENS wheel clockwise until no "Be-be" sound.
8. You can play the scanner now. Be remember that you need to adjust the sensitivity if the scanner always sounding.

Auto Power Off

9. If no key pressed and no metal detected, unit will automatically power off after around 90 seconds.

Maintenace**Cleaning the Cabinet**


Take cares to keep the unit clean and dry. You may clean the cabinet with mild soap and water.

Trouble Shooting

Problem	Probable Cause	Remedy
Distorted of fuzzy sound	Weak Batteries	Replace with new Alkaline or rechargeable Batteries

If problems persist, please do not attempt to repair unit; see warranty for factory service.

Questions or Comments

-  For questions or comments regarding this or other products, please call our toll free number:
1-800-777-5206