

**Barbie of Swan Lake**  
**Model No SL-235**  
**Remote Control Vehicle**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) This device must accept any interference received, including interference that may cause undesired operation. FCC Rules also prohibit unauthorized changes or modifications to the transmitter by user.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Car contains rechargeable Nickel-Cadmium Battery. Battery must be recycled or disposed properly.

**Getting Started**

1. Use a Phillip head screwdriver to open Battery Door on the controller.
2. Insert 3 "AA" batteries, checking the + and – ends of the batteries.
3. Close the battery door properly.
4. Place antenna into the hole at the top of controller. Turn clockwise to secure antenna to controller. DO NOT OVER-TIGHTEN. Pull tip of antenna to extend.

**We recommend**

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Removing batteries if unit is not used for more than 30 days.

**Operation**

**Charging the Car**

1. To charge the car, open cover at the bottom of the controller.
2. Align metal nodes on controller with the nodes on the car and place it onto controller.

3. The CHARGING INDICATOR will light up when the car is charging. After fully charged (approx 30 seconds) the light will turn off.
4. Take the car off of controller carefully.

#### **Controlling the Car**

1. To make the car go, push the FORWARD or REVERSE button. The car will go forward or backward.
2. To car will only turn left or right when it is moving. So to turn left or right, push the LEFT or RIGHT button together with FORWARD or REVERSE button.
3. The OPERATION INDICATOR will light up when operating the car. When the indicator become faint, it is time to replace batteries.

Note: While operating controller, make sure antenna is fully extended.

Remarks: Occasionally the car will sway left or right while moving in forward or backward direction. To correct this, adjust the directional guild on the bottom of the car. This may need to be done a few times while operating the care.

#### **Maintenance**

For best results operate on a smooth dry surface. Radio waves control this toy and can easily be interrupted. Avoid using near phones, electrical line or CB's. The manufacture is not responsible for radio or TV interference caused by unauthorized modifications could void the users authority to operate the equipment. If played outdoors, there might be malfunctions dust and rubbish. Dust and clean it.

#### **Cleaning the Cabinet**

Take cares to keep the unit clean and dry. You may clean the cabinet with mild soap and water.