

- FCC Statement -

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

© Baby Einstein Company, LLC. All rights reserved.
BABY EINSTEIN and The Boy's Head logo are trademarks of the Baby Einstein Company, LLC. All Rights Reserved.
EINSTEIN and ALBERT EINSTEIN are trademarks of The Hebrew University of Jerusalem. All rights reserved.

Kids II, Inc.

1015 Windward Ridge Parkway
Alpharetta, GA 30005

Consumer Services: 770-751-0442

Printed in China

© 2003

1501

bb
einstein



- Functions -

The mobile crib unit has a three position **Off, Play** and **Sleep Mode** switch. It also has a remote control that can activate, or stop the unit in either the **Play** or **Sleep** modes. There is a manually activated caterpillar clicker, and color wheel on the base unit.

1. Play Mode:

- First time pressing any button – unit says color name plus plays a short reward jingle and the matching color musical note flashes.
No mobile function.
- Second time pressing any button – unit says the name of the shape plus plays a short reward jingle, no light or mobile function.
- Third time pressing any button – unit says the color and the name of the shape, plays melody, and musical notes will light up in random order.
Mobile activates.

Melodies include:

- *Triangle: Concerto in F Major, RV539, 1st Movement (Vivaldi).*
- *Circle: Goldberg Variations, No. 1, BWV 988 (Bach).*
- *Square: Sonata 8 (Pathetique), Op. 13, 2nd movement (Beethoven).*

2. Sleep Mode:

- Press any button on the crib unit, or press the R/C button, and unit will play continuously.
Mobile will play for period of 15 minutes, and then will shut off automatically (base unit does not activate). Mobile can be reactivated by pressing any button on the crib unit or the R/C button.

Melodies include:

- *Fur Elise, Woo 59 (Beethoven).*
- *Minuet in G from the Anna Magdalena Notebooks (Bach).*
- *Jesu, Joy of Man's Desiring, BWV 147 (Bach).*
- *Piano Sonata in F, K533, 3rd movement (Mozart).*
- *Sonata 8 (Pathetique), Op. 13, 3rd movement (Beethoven).*

Model# 30711 Discover & Play Musical Mobile Instructions

Age Grade:

Mobile: birth to 5 months

Finger Puppets: 5 months and up

▲ WARNING:

Possible entanglement or strangulation injury. Keep mobile out of baby's reach.

Remove mobile from crib or playpen when baby

begins to push up on hands and knees.

Do not add additional strings or straps to this product.

IMPORTANT:

ALWAYS replace cap onto mobile base when mobile arm is removed. Cap should be securely in place at all times when mobile arm is removed from mobile base unit. Inspect product frequently for loose or damaged components.

Battery Requirements:

Base unit: Requires 3 C batteries (not included).

R/C unit: Requires 2 AAA batteries (not included).

Alkaline batteries are recommended for better performance.

Do not mix old and new batteries. Do not mix alkaline, standard, or rechargeable batteries. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Non-rechargeable batteries are not to be recharged. Exhausted batteries are to be removed from the toy. Batteries are to be inserted with the correct polarity. Supply terminals are not to be short-circuited.