


## PRIOR TO USAGE/CHARGING

1. Prior to using your TV headset, place it in the TV Headset Charger/Transmitter Base to charge, the TV headset does not come charged. The minimum charge time is 3 hours for a full charge. First time use—charge for 8 hours.
  2. Use the AC Adapter (included) to charge the headset by plugging one end of the AC Adapter into the back of the Charger/Transmitter Base and the other into the electrical outlet. See illustration on right.
  3. When you first place the Headset into the Base, the charging indicator light will be red. Once the TV Headset is charged, the light will turn green.
- NOTE:** In order for the TV Headset to work, Charger/Transmitter Base must be connected to the electrical outlet at all times.

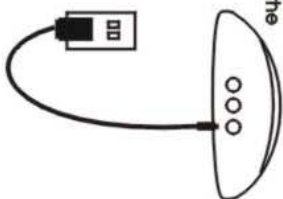

## USAGE CONNECTING CHARGER/TRANSMITTER BASE


You can connect charger/transmitter base to your TV 3 different ways.

### A VIA AUDIO CORD



1. Plug the Audio Cord into the Audioport located on the back of the charger/transmitter Base, plug the other end (black and red) into the AUDIO OUT port located in the BACK of your TV. See below illustration. It must be

AUDIO OUT for it to work. **DO NOT** try to plug black/red end of the cord into the front of your TV because those ports are AUDIO IN. If your TV does not have at least one AUDIO OUT port, use the AUDIO OUT port in the back of your cable or satellite box, VCR, DVD.

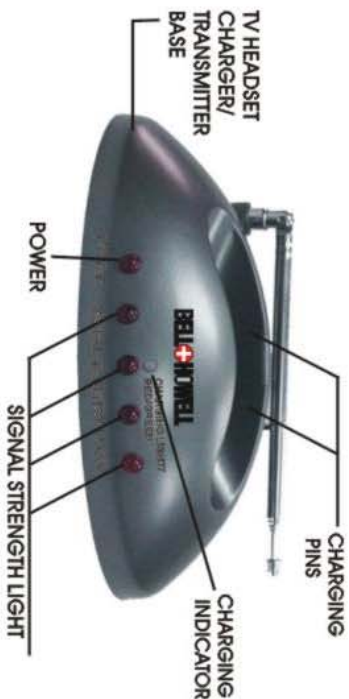

### B: VIA HEADPHONE ADAPTER



This is a simple and quick way to connect the Charger/Transmitter Base to your TV, computer or stereo. Great when you are travelling. In most TVs when Headphone Adapter is used and plugged into the TV speaker will not transmit out sonic.



1. Attach the headphone adaptor onto the either red or black end of the Audio Cord (see above illustration); plug the headphone adaptor end into the headphone jack located on the front side of the TV.
2. Plug the other end of the Audio Cord into the Audio port located on the back of the Charger/Transmitter Base.

### C VIA POWER MICROPHONE



Use this option if you can not reach your AUDIO OUT port or do not have it.



1. Plug the power microphone into the Audio port located on the back of the Charger/Transmitter Base.
2. Peel off the white backing of the Velcro piece to expose the adhesive, place it in the center of the TV speaker. See above illustration.
3. Set the TV volume to normal so the microphone can pick up the sound of your TV and transmit to the Headset.

"The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

"NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment."