


PlayStation® 3 wireless controller instruction manual

**ENGLISH** 

Thank you for purchasing the wireless controller for PlayStation® 3 console. This controller comes with a rechargeable battery pack, a USB charging cable and a non-rechargeable battery pack.

Please keep this instruction manual for future reference.

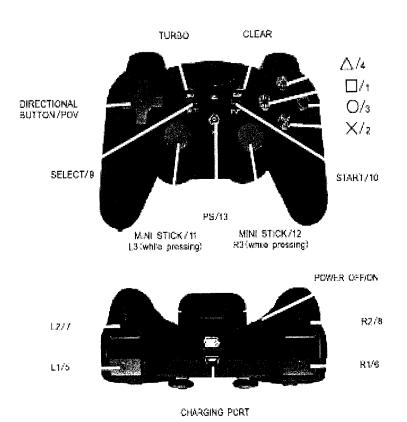

# Recycling

When battery run out of use, please take them to the battery recycle center.

# Important notice

- 1. If you feel pain, weakness, numbness or tingling while playing, we suggest you to take a rest.
- 2. We recommend that you take a break for about fifteen minutes every hour.

## Packing content

- 1 x instruction manual.
- 1 x Rechargeable battery pack.
- 1 x Non-rechargeable battery pack.
- 1 x Wireless controller.
- 1 x Receiver unit.
- 1 x USB charging cable.

#### **Feature**

- 1. Up to 10 meters operating range.
- 2. Analogue action button.
- 3. With rechargeable battery pack.
- 4. With non rechargeable battery pack when rechargeable battery pack runs out of use.
- 5. Rubber grip design.
- 6. With turbo and clear button.
- 7. With PS button.

#### LED

1. Receiver LED

Flash: not connected with Game Pad.

Light stays on red: connected with Game Pad.

2. Game Pad led

Red LED slow flash: not connected with receiver.

Red LED off: connected with receiver.

Red LED fast flash: low power indication.

Red LED fast flash: using the button which is programmed with

Turbo function.

Green LED slow flash: charging Game Pad.

Green LED light: charge completed. Green LED fast flash: charging error.

### **Battery installation**

1. Remove the non chargeable battery pack from controller.

Install the battery compartment with 2X1.5V AA non chargeable batteries inside, or just install rechargeable battery pack directly.

### Charging controller

- 1. Remove the non-rechargeable battery pack from the controller.
- 2. Install the rechargeable battery pack.
- 3. Turn on the controller by switching the power button to "on" status.
- Connect the USB charging cable with one end to the controller and the other end to PlayStation® 3 console.
- 5. Turn on PlayStation® 3 console, the green led will keep flashing slowly during charging, once the charging completed, the LED will change to Red!

#### Receiver connection


- 1. Ensure that your PlayStation® 3 console is switched OFF.
- 2. Plug the receiver unit into USB port of PlayStation® 3 console.
- 3. Turn on the PlayStation® 3 console.

#### **Function**

#### Turbo:

Press turbo and any fire button (like, △, □, ×, L1, L2, L3, R1, R2, R3, D-PAD), RED LED is fast flashing, the fire button is programmed with turbo function; Press turbo and that programmed turbo fire button again, that button's turbo function is cleared. Or you can just press Clear button, to clear all button's programmed Turbo function.

### Installation on PC

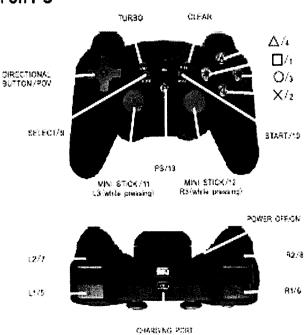

- 1. Plug the receiver unite to PC USB port. The computer will automatically detect the controller.
- 2. Driver(built-in windows system) installation
  The driver will be installed automatically. Just follow the on-screen instruction to complete the installation.
- Select START/ Setting/ Control panel and the double click game controller (or gaming options, depending on your operating system).
  - The game controller's dialog box displays the gamepad's name with OK status.
- 4. In the control panel, click properties to configure your controller.

### Important Safeguards and Precautions

- 1. The controller is for indoor use only, never exposing directly to sunlight or use under humid condition.
- 2. Do not immerse in liquid.
- 3. Do not expose the unit to dusty, high humidity, high temperature or mechanical shock area.
- 4. Do not use if the equipment is damaged.
- 5. Do not disassemble the unit.
- 6. For external cleaning, use soft, clean and damp cloth only.
- 7. Do not connect or disconnect the receiver while the PlayStation® 3 console is turned on.

### Important Note

The controller has no standby mode, please turn off the controller after use to save battery power.

The controller is not a sensor function controller.

The USB port on the controller is for charging function only, it does not communicate with PlayStation® 3 console

The rechargeable battery pack is only charged with 20-30% power capacity at factory, please charge the rechargeable battery pack for at least 12 hours before use.

It will automatically go into standby mode if the game pad fails to connect with the receiver after 2 minutes, please re-switch the power button on backside of the Game Pad.



Warning: This Game Pad is not Sony licensed, it does not support playing PlayStation® 2 games on PlayStation® 3 console.

### Low power

When battery power is low, the red LED is fast flashing, please replace it with non-rechargeable batteries or charging the rechargeable battery pack.

### Warning

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Note

This equipment has been tested and found to comply with the limits for a class B digital device. Pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to the radio communications however, there is not guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The use is encouraged to try to correct the interference by one or more of the following measures.

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The FCC warning statement will be shown in packaging.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation

Please update the PlayStation® 3 console system up to 1.9 version; then PS button will be functional, download address: www.PlayStation3.com.

Please rotate the stick to left and right 360 degree with max angle when you power on the wireless controller!



ajosuoj e u dila unim asn joj ZH9tZ Rechargeable USB Cable SSHTANIMETER 2 S'HETER MIKETERS KINGFAME 2.4GHz WIRELESS For use with PLAYSTATION 3 Console

> This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

this cotroller a gamer's premier choice for next generation gaming.

Non-rechargeable

(not include batteries)

battery pack

KING CHUANG TECH & ELECTRONIC CO., LTD info@acrux21. com Blcok A, Mountain Top, Fuyuan Industrial Zone, JiuWei Village Xixiang Town, www. acrux21. com

BaoAn District Shenzhen China.

PlayStation® 3 is a registered trademark of Sony Computer Entertainment Inc. This product is not licensed, designed, sponsored, endorsed or manufactured by Sony Computer Entertainment Inc.

Rechargeable

battery pack



USB Charging

Cable design

2. 4GHz RF Technology for quick & reliable response. Controller can be used with or without

wires to your gaming needs. Take your gaming to the next level with our precise analog sticks,

trigger functions & buttons for optimized control & accuracy. Stylish, functionality, & comfort make



Mini Size receiver



Comfortable rubber

grip design