


Portable Bluetooth Speaker with Colorful Lighting Effects



USER MANUAL

DESCRIPTION OF PARTS

- 1 Light Mode Button
- 2 Short press : Previous song
Long press : Volume decrease
- 3 Short Press: Pause / Play /
Hand free Calling
- 4 Short press : Next song
Long press : Volume increase
- 5 ON/OFF Button
Mode(s) Button: Wireless /
FM / USB / Micro SD(TF) Card
- 6 Charging port
- 7 LED Indicator
- 8 Micro SD (TF) Card S
- 9 AUX Input
- 10 USB Flash Drive/Power Bank Output

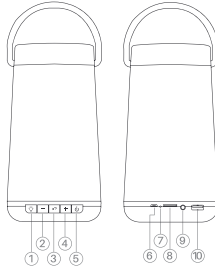

INSTRUCTIONS FOR USE

Charging the Speaker

The speaker has a built-in rechargeable battery. When the battery runs out, the speaker turns off automatically. Please recharge the battery. To charge the battery, do as follows :

Plug the Micro USB end of the included USB charge cable into the charging port. Plug the other end of the charge cable into a USB port on your computer or other compatible external device. A red LED indicator light will illuminate upon successful connection to notify you that the speaker is charging. For a full charge, give the speaker 2-4 hours of charge time. Once the speaker is fully charged, the LED indicator light will turn off to notify you that the speaker is ready for use.

IMPORTANT REMINDERS

- Please do not disassemble, repair or transform the product.
- This product uses a lithium battery. Do not discard it or place it in a fire.
- Do not expose this product to rain or humidity, so as to avoid the damages to the device.
- Please do not recharge the device repeatedly. Doing so can age the lithium battery quickly.
- While in FM Radio mode, please insert the charging cable into the charging port to get a better radio signal, thereby providing you with an even better listening experience.

Bluetooth Mode

Your new Bluetooth speaker can wirelessly stream audio from any Bluetooth-enabled device within a distance of 10m. To do so, first you must turn on the Bluetooth speaker. Open the Bluetooth menu of the external device you wish to pair the speaker with and begin a device search. "NAXA-3101" will appear in the list. Select to pair. Should a password prompt appear, enter "0000" to continue pairing. Once paired, select a desired song on the external device to stream music through the Bluetooth speaker.

Music Mode	Function	Operation buttons
Playing music	Increase Volume	Long press + key
Playing music	Decrease Volume	Long press - key
Playing music	Pause	Short press ▶/◀ key
Pause	Play	Short press ▶/◀ key
Playing music	Previous track	Short press ⏮ key
Playing music	Next track	Short press ⏭ key

Note: The above functions can be used in all models, such as Bluetooth mode, USB Drive Play mode, TF Card Play mode, as well as FM Radio mode. In AUX input mode, you need to control the medias through the media source devices, you need to operate with the source devices for previous / next track.

Hands-Free Calling Function

Please ensure you mobile phone is paired with the wireless speaker

Handsfree Mode	Function	Operation buttons
Incoming Call	Answer Incoming call	Short press ▶/◀ key
Incoming Call	Reject Incoming call	Long press ▶/◀ key
Incoming Call	End the Call	Short press ▶/◀ key
ON the line	Increase Volume	Long press + key
ON the line	Decrease Volume	Long press - key

LED Colorful Light

- Turn on speakers.
- Short press **⏻** button on the speaker to turn on/off the LED light, or switch the color of LED light (10 colors).

Streaming Music from an SD Card or USB Flash Drive

- Turn on the speaker. Insert the Micro SD (TF) card or USB flash drive containing your desired songs into the SD or USB port on the speaker. Once inserted a sound message will say "Play by USB drive" or "Play by TF card" to notify you that it has been properly inserted.
- The speaker will automatically begin playing songs from the Micro SD card or USB flash drive.

Listening to FM Radio

- Turn ON the speaker.
- Insert the Micro USB end of the included USB rechargeable cable into the charging port, and leave the other end of the cable open. USB rechargeable cable serves as FM Antenna while in FM Radio mode.
- Press the Mode button each time until it reaches FM radio mode, sound message " The Radio Mode" will be heard.
- To Auto-SCAN the stations, press **▶/◀** once.
- It will take few minutes to search all the stations. Once all the stations are scanned, they get registered in memory, automatically.
- Press **-** or **+** to skip selected stations.
- Long press **+** to increase the volume or **-** to decrease the volume.

Playing Music in Auxiliary Mode

- Turn on the speaker.
- Insert one end of the Auxiliary cable (included) into the Auxiliary port, sound message "AUX Input Mode" will be heard. Plug the other end into the audio device (such as phone / MP3 / Player / computer / tablet ...etc).
- Select your desired song on the external device in order to play it.
- Long press **+** to increase the volume or press **-** to decrease the volume.

Note: Media can be controlled only through the source devices, while playing music in Auxiliary mode.

TIPS

Between Wireless Play / FM Radio / AUX In / USB / Micro SD (TF) Card, when the speaker is not in use, turn it off in order to preserve power.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
	Low battery or Battery dead	Low battery or Replace battery
Sound distorted	Low battery or Battery nearly dead	Low battery or Replace battery.
	Source (Tablet, Mobile Phone, Laptop,) turned off.	Turn the source on.
No sound at all	Speaker turned off.	Turn the speaker on.
	Media paused on source.	Play media from source.
	There are short functional obstacles in the product	Restart the speaker
Wireless BT cannot connect	Product has been conedded with other devices	Disable Wireless BT of other source devices and search for Wireless BT again

SPECIFICATIONS

Wireless Distance	up to 10 Metres
Output Power / Horn Type	5 Watts / 4" 57mm
FM Frequency Range	87-108MHz
Unit Size	102 x 184 x 102 mm
Power Input	DC 5V (800mAh)
Charging Time	2-3 hours
Play time	up to 2 hours (max. volume)
Built-In Rechargeable Battery	3.7V / 2000mAh
Micro SD (TF) Card/USB Drive	Support up to 32GB
Multiple Functions	Wireless Play / FM Radio / USB Drive / Hands-Free Call / TF card / AUX Input / Connection / LED Colorful Lights

Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.

SAFETY INSTRUCTIONS

- Keep the speaker away from heat sources, direct sunlight, humidity, water and any liquids.
- Do not operate the speaker if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and / or injury to yourself and damage to speaker.
- Do not use the speaker if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the speaker with wet hands.
- Do not put objects into any of the openings.
- Keep the speaker free from dust, lint etc.
- Do not use this speaker for anything other than its intended use.
- Keep the speaker out of reach of children.
- This appliance is not a toy.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire or the like.

CARE & MAINTENANCE

Read the following recommendations before using the Bluetooth speaker. Following these, you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture, or humidity in order to avoid effecting the device's internal circuit.
- Do not use abrasive cleaning solvents on the device while cleaning it.
- Do not expose the device to extremely high or low temperatures, as this will shorten the life of electronic devices, destroy the battery, or distort certain plastic parts.
- Do not dispose of the device in fire, as it will result in an explosion.
- Do not expose the device to contact with sharp objects, as this will cause scratches and damage.
- Do not let the device fall down onto the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the device, doing so may lead to damage if not done by a professional.

SUPPORT

If you have any problems with your new device, please review the instructions in this manual for solutions. Please also visit us on the web at www.naxa.com to get the latest news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

NAXA Technical Support

2320 East 48th St.
Vernon, CA 90058
866-411-6292
http://www.naxa.com/naxa_support/

FCC Warning

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment . This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.