

春合昌電器(深圳)有限公司		一般公差 (未勾選依據)		<input type="checkbox"/> A級	<input type="checkbox"/> B級	<input type="checkbox"/> C級
國	圓名：BT-102 英語說明書(KINYO)	核準	0~30	* 0.10	* 0.20	* 0.50
料號	12589600	審核	30~120	* 0.15	* 0.35	* 1.00
單位比例	mm / 1:1	材質	80G雙膠19	120~315	* 0.20	* 0.50
框		表面處理	耐候保原設計	315~	* 0.30	* 0.70
註：本公司在開發設計時不用KYE-021101規定一級環境管理物質		版次	A			


印刷顏色：黑色印刷

KINYO A NEW DIMENSION IN SOUND

BT-132

2.0 PORTABLE BLUETOOTH
STEREO SPEAKER
with Built-in Microphone

2.0 BOCINA ESTEREO PORTATIL
CON BLUETOOTH
y Microfono Incorporado

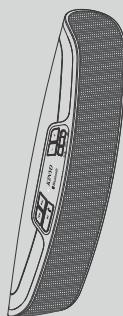

User's Guide
Guía De Usuario

Please read and understand **all** safety instructions
before use.
Lea y comprenda todas las instrucciones de
seguridad antes de usar el equipo.

12589600

TROUBLESHOOTING

SYMPTOM	Possible Problem	SOLUTION
No sound from speakers	Power isn't turned on	<ul style="list-style-type: none"> Make sure the system is on and the power source is connected. When using AC adapter as the power source, make sure the adapter is plugged into a wall outlet. When using USB power check to make sure the USB port is correctly and properly connected. Increase the volume from the speaker system. Increase the volume from the audio source and set it to the medium level. Fully connect the stereo plug to the audio source. Make sure the stereo plug is connected to the correct input. Use an alternate audio source to test the speakers. Check the computer's sound card settings and refer to the sound card or computer's manufacturer.
Problem with computer's sound card driver		
Cracking sound from speakers	Bad connection	<ul style="list-style-type: none"> Make sure the stereo plug is connected to the correct input. Try another audio source such as portable CD or MD player.
Sound is distorted	Volume level on the speaker system is set too high	<ul style="list-style-type: none"> Decrease the volume. Check the audio source volume and decrease the volume if necessary.
	MP3 player is set too high	<ul style="list-style-type: none"> MP3 files usually have poorer quality voice and distortion are common when played on low-quality speakers. Try an alternate source such as portable CD player.
	Audio source is distorted	<ul style="list-style-type: none"> MP3 files usually have poorer quality voice and distortion are common when played on low-quality speakers. Try an alternate source such as portable CD player.

LIMITED WARRANTY

Kinyo Company Inc. (KINYO) warrants this product to the original purchaser against defects in material and workmanship for a period of one (1) year from the date of purchase. Kinyo will, at its option, repair or replace the defective product at no cost to you during the warranty period.

The warranty will not apply if the unit has been subject to accident, misuse, abuse, disassembly, altered or operated contrary to the instructions contained in the accompanying manual.


To obtain warranty service, proof of purchase, in the form of retail receipt, bill of sale or invoice must be presented as evidence that the unit is within the warranty period. The product must be packaged either in its original packaging or in such a way as to reasonably protect it from shipping damage. Properly fill out the warranty card with description of problem. Send the product freight prepaid or deliver to:

**ATTN: SERVICE DEPT.
KINYO COMPANY INC.
14235 LOMITA AVE.
LA PUENTE, CA 91746**


NAME _____	ONE YEAR LIMITED WARRANTY CERTIFICATE
ADDRESS _____	CITY _____ STATE _____ ZIP _____
PHONE _____	EMAIL _____ MODEL# _____
DATE OF PURCHASE _____	WHERE PURCHASED _____
PROBLEM _____	SIGNATURE _____
THIS WARRANTY IS ONLY VALID IN THE UNITED STATES OF AMERICA	

PRODUCT OVERVIEW / VISIÓN GENERAL DE PRODUCTO


Top / Parte superior

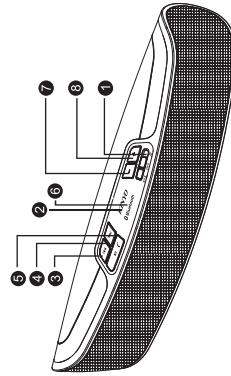


Bottom / Parte inferior

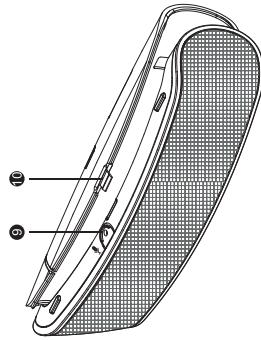

Rear / Parte trasera

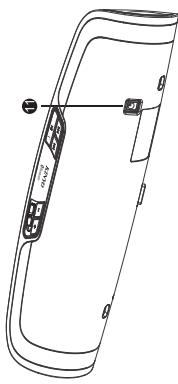

Bottom / Dentro del Compartimento

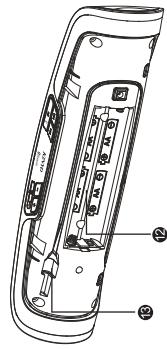

● ON/OFF Switch
 a) **Slid switch to the right for Bluetooth operation, Blue "KINYO" LED will light.**
 b) **OFF Slid switch to the left for Auxiliary input (Blue "KINYO" LED will light)**

● AUX: Slide switch to the left for Auxiliary input (Blue "KINYO" LED will light)

● Power LED Indicator: "KINYO" Blue LED "KINYO" light will illuminate when power is on.

● PAIRING / PLAY / PAUSE / CALL: Press to play the previous selection, (only during Bluetooth operation)

● PAIRING / PLAY / PAUSE / CALL: Press to play the next selection, (only during Bluetooth operation)

● PAIRING / PLAY / PAUSE / CALL: Only during Bluetooth operation)

● PAIRING / PLAY / PAUSE / CALL: Initiate the pairing mode from the speaker. The Bluetooth enabled device by pressing and holding the Pairing button. **"H"** for three seconds. The Bluetooth LED will flash blue light three times. Releases the button and the Bluetooth LED will then flash blue and red lights alternately to indicate that the speaker is in Bluetooth pairing mode.

Notes: If the pairing process cannot be completed within 90 seconds, the blue and red Bluetooth LED will stop flashing and the Bluetooth pairing process will automatically terminates. Please repeat the pairing instructions to pair up the Bluetooth speaker with the Bluetooth enabled device.

b) DISCONNECT BLUETOOTH CONNECTION: To disconnect the Bluetooth wireless connection, press and hold the **"H"** for three seconds. The Bluetooth LED will flash blue light three times to indicate the Bluetooth signal is disconnected.

c) ANSWERING / ENDING CALLS: To answer the **"H"** button on your Bluetooth device (when connected to the Bluetooth speaker) press the button to pick up the call. Press again to end the call.

d) PLAY PAUSE / PRESS "H" button to play the selection, press again to pause.

a) BLUETOOTH PAIRING LED Indicator: The Bluetooth LED will flash blue and red light alternately to indicate that the Bluetooth speaker enters pairing mode. When the Bluetooth device has successfully paired and connected with the Bluetooth speaker. The Bluetooth LED will flash blue light constantly.

If the Bluetooth connection is disconnected, the blue LED will flash three times to indicate the Bluetooth signal is disconnected.

b) Low Battery Indicator: Red LED Indicator will flash when battery is low, (only during Bluetooth operation)

● VOL:- Press to decrease the volume.

● VOL+: Press to increase the volume.

● MIC: The Bull-in Microphone is located on the bottom of the system.

Note: Make sure your Bluetooth enabled device is connected with the Bluetooth speaker. When the phone rings on your Bluetooth enabled device press the pairing microphone. Press the Pairing **"H/C"** button again to end the call.

● Open here to remove compartment cover.

● DC IN: Plug AC adapter (included) into a wall outlet. Connect the other end to the "DC IN" jack.

● Battery Compartment.

● 3.5mm Stereo Input Cable—Connecting to your portable audio device.

POWER SOURCE

Use ONE of the following options to power the speaker:

AC Power (Wall Outlet)

1. Plug AC adapter into a wall outlet. Connect other end to the "DC IN" jack on back of the system.


DC Power (Batteries)

1. Install 4 AA batteries (not included) into the battery compartment on the back of the system. Make sure the batteries are installed as illustrated.

2. When the battery power is low, the Bluetooth LED will flash red light indicating it's time to replace batteries. (only during Bluetooth operation). Do not mix different or new and used batteries.

PAIRING WITH BLUETOOTH ENABLED DEVICES

You need to pair the system with your Bluetooth device before using.

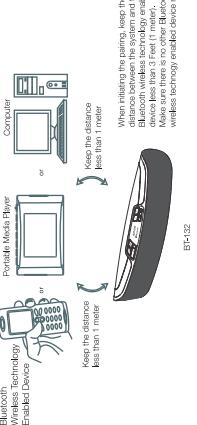

BT-132

Pairing is the process of associating your speaker with Bluetooth enabled devices. Pairing establishes a permanent security link between all devices using Bluetooth wireless technology. You will be prompted to enter a PIN (personal identification number) to establish the initial pairing. After the pairing is successful, you will not have to re-enter it again. The device remembers the PIN and will automatically connect to the speaker.

The following pairing instructions describe the pairing process between the speaker and a typical Bluetooth audio source. The pairing process may be different for your Bluetooth enabled devices. If you have problems pairing, please refer to the user's guide of your specific device for detailed pairing instructions.