 
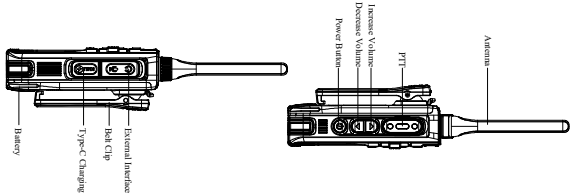 


Familiarize with Product

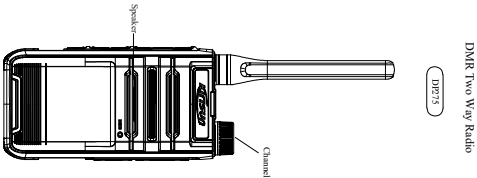


Unboxing Inspection

Please carefully open the packaging box and verify that it contains the items listed in the table below. If any items are missing or damaged, please contact your dealer promptly.

SN	Material Name	Quantity
1	Walkie-talkie	1
2	Charging Power Adapter	1
3	Power Cord	1
4	Battery	1
5	Belt Clip	1
6	Antenna	1
7	Lanyard	1
8	Certificate of Conformity	1
9	User Manual	1
10	Charging Base (Optional)	1


Charging Method

 - Plug the charging power adapter into a suitable AC power outlet.
- Insert the USB cable into the bottom side of the charging dock, connect one end of the USB cable to the power adapter, and plug the other end into the TYPE-C port on the right side of the terminal. The blue indicator light turns on to start charging. Please charge with caution.
- After about 4 hours of charging, the blue indicator light turns off, indicating the battery is fully charged.
- Remove the charging power adapter from the AC power outlet.

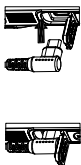

Charging Method: Dock Charger (Optional)

- Plug the dock charger power adapter into a suitable AC power outlet.
- Insert the walkie-talkie into the charging dock; the blue indicator light turns on to start charging (please charge with the device off).
- After about 4 hours of charging, the blue indicator light turns off, indicating the battery is fully charged.
- Remove the dock charger power adapter from the AC power outlet.

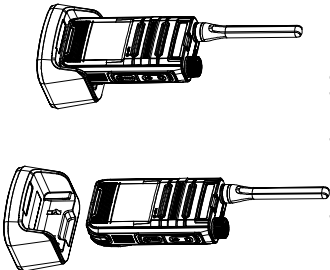


Note:

- The walkie-talkie battery is not charged when it leaves the factory. Please charge the battery before the first use.
- When charging the walkie-talkie with the battery, please turn off the walkie-talkie.
- For a new battery, first charge or a battery that has been stored for a long time (over 2 months), it should be charged several times to reach normal capacity. Ensure that the battery is charged at least once every three months.




Installing/Removing the Battery

- Installing the Battery:
  - Align the top of the battery with the battery installation position on the back of the walkie-talkie, and insert the battery.
  - Align the top of the battery with the battery installation position until you hear a "click" sound, ensuring the battery latch is in the correct position.

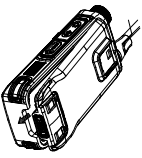

- Removing the Battery:
  - Press the bottom 【PUSH】 latch of the battery.
  - Once the battery is loosened, it can be removed.

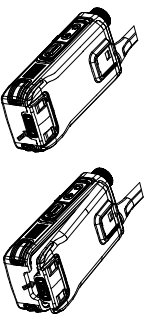


Note:

- Do not short-circuit the battery terminals or dispose of the battery in fire.
- Do not disassemble the battery casing on your own.

Installing/Removing the Antenna

- For installation, insert the threaded end of the antenna into the antenna port at the top of the walkie-talkie, and rotate it clockwise until it is tight.
- To remove the antenna, rotate it counterclockwise.

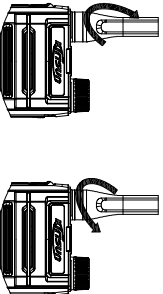

Installing/Removing the Belt Clip

- Installing the Belt Clip:
  - Align the top of the clip with the top of the main unit; the notch in the belt clip fits into the notch on the back of the main unit; battery cover with the notch in the belt clip fits properly.
  - Align the top of the clip with the top of the main unit; the notch in the belt clip fits into the notch on the back of the main unit; battery cover with the notch in the belt clip fits properly.

- Removing the Belt Clip:
  - Align the top of the clip with the top of the main unit; the notch in the belt clip fits into the notch on the back of the main unit; battery cover with the notch in the belt clip fits properly.
  - Align the top of the clip with the top of the main unit; the notch in the belt clip fits into the notch on the back of the main unit; battery cover with the notch in the belt clip fits properly.



Basic Operations

- Tuning On/Off the walkie-talkie:
  - In the off state, press and hold the 【Power】 button for 2 seconds until you hear the announcement "beep-beep-beep", and then the 【PTT】 button for 2 seconds until you hear the announcement "beep-beep-beep", indicating the device is turned off.

- Adjusting Volume:
  - Pressing the Volume Up/Down buttons (marked with a speaker icon) to adjust the volume. Pressing the Volume Up/Down buttons (marked with a speaker icon) to adjust the volume. Pressing the Volume Up/Down buttons (marked with a speaker icon) to adjust the volume.

Programmable Buttons: The side buttons support long press for custom functions.

- High/Low Power: Switch between high and low power.
- Monitor: If the current radio channel has a sub-audio frequency, press this key to switch to carrier squelch mode, which disables the sub-audio function. The carrier squelch and output sound. Press the key again to return to the initial state.
- Squelch On/Off: Turn on/off the squelch function, which can be used to listen to weak channels.
- Scan: Turn on/off the scanning function to monitor communication activities on other channels.
- All/Allies On/Off: Turn on/off all/allies.
- Zone Adjustment: Switch between different zones using the key. Zones are programmed by CTCSS subtones.
- Relay On/Off: Enable or disable the relay function of the channel.

LCD Indicator

Indicator Light Status	Walkie-talkie Operating Status
Red Light On	Transmitting
Green Light On	Receiving signal
Blue Light On	Charging the battery

Common Faults and Troubleshooting

SN	Failure Symptom	Cause of Failure and Troubleshooting Methods
1	Won't Turn On	① Battery is dead. Please charge with a suitable charger. ② Fully switch on or other issues. Please visit a designated repair station for repair.
2	Low Volume	① Speaking too far from the microphone. Optimal distance is 15-30cm. ② Incorrect volume settings. Increase the volume. ③ Incorrect channel parameters settings. Reset the parameters and try again.
3	Unable to Intercom	① Check if the antenna is properly installed. ② Exceeded the communication range of the device.

FOC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.

- This radio is designed for and classified as Occupational/Commercial Use Only, meaning it must be used only during the course of employment by individuals aware of the hazards, population/unintended environment.
- Transmit to more than the stated duty factor of 50% of the time. To transmit (talk), push the Push-to-Talk (PTT) key. To receive calls, release the PTT key. Transmitting 50% of the time, or less, is important because the radio generates measurable RF energy only when transmitting.
- Keep the radio on at least 2.5 cm away from the face. Keeping the radio at the proper distance is important as RF exposure decreases with distance from the antenna. The antenna should be kept away from the face and eyes.
- When worn on the body, always place the radio in a approved holder, holster, case, or body harness or by use of the correct clip for the product. Use of nonapproved accessories may cause RF exposure when the radio is in use.
- Use of nonapproved antenna, batteries, and accessories causes the radio to exceed the FCC RF exposure guidelines.
- Contact your local dealer for the optional accessories of the product.
- The highest reported SAR values for head and body wear are 2.58W/kg and 3.44W/kg.

Golden Sunshine Service

Krisun Corporation introduces the "Golden Sunshine Service" policy, solemnly launching the following service commitments:  
1. Krisun products are warranted for 12 months for the main unit from the date of sale (based on the warranty card or invoice).  
Accessories are warranted for 6 months; if there are no special agreements, the national warranty law applies.  
If the purchased main unit and accessories encounter non-human-made quality issues during the warranty period, customers can enjoy free warranty services at Krisun Customer Service Center or its authorized service stations with the warranty card and invoice.  
The following information should be carefully filled in by the sales unit to assist the user:  
-Customer Retention Copy-

Model: \_\_\_\_\_  
Name: \_\_\_\_\_  
Customer: \_\_\_\_\_  
Purchase Date: \_\_\_\_\_  
Sales Unit Contact Person: \_\_\_\_\_  
Name of Sales Unit (with seal stamp): \_\_\_\_\_

Tel: \_\_\_\_\_

Tel: \_\_\_\_\_

Tel: \_\_\_\_\_

Golden Sunshine Service

Krisun Corporation introduces the "Golden Sunshine Service" policy, solemnly launching the following service commitments:  
1. Krisun products are warranted for 12 months for the main unit from the date of sale (based on the warranty card or invoice).  
Accessories are warranted for 6 months; if there are no special agreements, the national warranty law applies.  
If the purchased main unit and accessories encounter non-human-made quality issues during the warranty period, customers can enjoy free warranty services at Krisun Customer Service Center or its authorized service stations with the warranty card and invoice.  
The following information should be carefully filled in by the sales unit to assist the user:  
-Customer Retention Copy-

Model: \_\_\_\_\_  
Name: \_\_\_\_\_  
Customer: \_\_\_\_\_  
Purchase Date: \_\_\_\_\_  
Sales Unit Contact Person: \_\_\_\_\_  
Name of Sales Unit (with seal stamp): \_\_\_\_\_

Tel: \_\_\_\_\_

Tel: \_\_\_\_\_

Tel: \_\_\_\_\_