



Camera Bottom

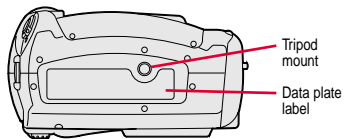


Tripod mount
Data plate label

Back Status LCD Panel

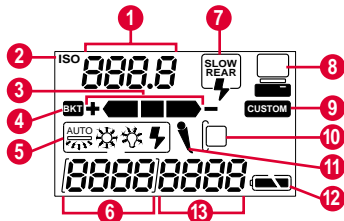

- | | |
|----------------------------------|----------------------|
| 1. ISO bracketing/Custom setting | 7. Flash Sync mode |
| 2. ISO setting mode | 8. Computer conn. |
| 3. Bracketing graphs | 9. Custom setting |
| 4. Bracketing | 10. Card present |
| 5. White balance | 11. Microphone |
| 6. Frame number | 12. Battery level |
| | 13. Frames remaining |

Camera Sides

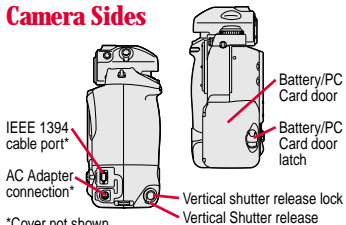


IEEE 1394 cable port*

AC Adapter connection*


*Cover not shown

Top Status LCD Panel

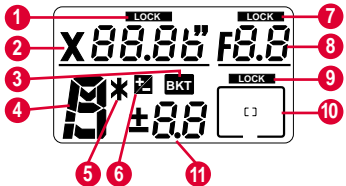

- | | |
|-----------------------|--------------------------|
| 1. Shutter speed lock | 7. Aperture lock |
| 2. Shutter speed | 8. Aperture |
| 3. Bracketing | 9. Focus area lock |
| 4. Exposure mode | 10. Focus/AF area mode |
| 5. Flexible program | 11. Exposure Comp. value |
| 6. Exposure Comp. | |

Using the Digital Controls

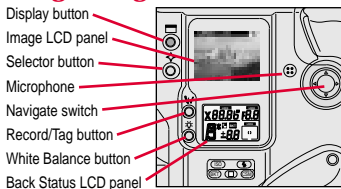

Display the Menu bar and select a Menu bar icon: Press and hold the Display button and use the Navigate switch until the desired icon is highlighted.

Display a dropdown menu: Highlight the Folder, Menu, or Display icon (see next page), and continue pressing the Display button until the dropdown menu appears.


Choose an item from a dropdown menu: Continue pressing the Display button and use the Navigate switch until the desired menu choice is highlighted.

Choose an item from a menu screen (e.g., Main menu): Press and hold the Selector button and use the Navigate switch to highlight your choice.

Tag an image: Quickly press and release the Record/Tag button.

Record a sound file: Press and hold the Record/Tag button and speak into the microphone.

Select a White Balance setting: Press and hold the White Balance button and use the Navigate switch until the desired White Balance icons appear in the Back LCD panel.

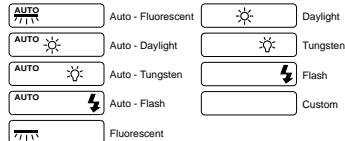

The Menu Bar

Folder Icon
Displays the Folder menu



1 PC Card

2 PC Cards

Menu Icon
Displays choices for the Main, Properties, and Custom Functions menus



Display Icon
Displays choices for Single, Four, and Nine Image Review mode



Contrast Icon
Displays the Display Contrast screen where you can adjust image contrast




Kodak Professional

DCS 600 Series Digital Cameras




Batteries

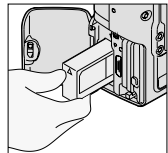

To power your camera, open the Battery/PC Card door, slide a battery to the back of the battery slot and press firmly in place.

You can also power your camera with an AC adapter when working indoors or connected to a computer.


Check the battery icon on the Back Status LCD panel.

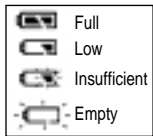

PC Card

As you capture images, they are stored on Type II or Type III PC Cards (PCMCIA cards) in your camera.


There are two slots for PC Cards. You can insert two Type II cards or one Type III card.

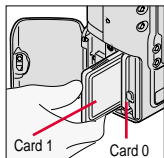

To insert a PC Card, open the Battery/PC Card door and insert. With two cards, the first card inserted is the active card.




To select a different PC Card, select the Folder icon, then select the card. (Refer to other side.)

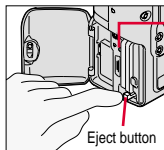

Important! Be sure the Card Busy LED is off before removing a PC Card. The blinking indicates data is being transferred to or from the PC Card. You can lose data if you remove a PC Card when it is busy.


To remove the PC Card, press the Eject button.

Camera Front

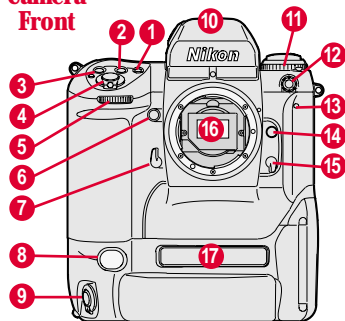


- | | |
|----------------------------------|---|
| 1. AF Area Mode button | 10. Viewfinder |
| 2. Exposure Mode button | 11. Drive Mode/Self-timer selector |
| 3. Exposure Compensation button | 12. Sync terminal |
| 4. Shutter Release | 13. Self-timer LED |
| 5. Sub-Command dial | 14. Lens Release button |
| 6. Depth-of-Field Preview button | 15. Focus Mode selector |
| 7. Mirror Lockup lever | 16. Anti-aliasing filter (IR filter in DCS 660M or DCS 620 base camera) |
| 8. White Balance sensor | 17. Product label |
| 9. Vertical Shutter release | |

Camera Back

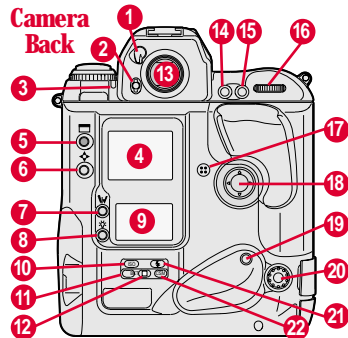

- | | |
|--|---|
| 1. Eyepiece Shutter lever | 12. Shutter Speed/Aperture/Focus Area Lock button |
| 2. Finder Release button | 13. Viewfinder eyepiece |
| 3. Alert LED | 14. Auto Exposure/Autofocus Lock button |
| 4. Image LCD panel | 15. AF Start/AF On button |
| 5. Display button | 16. Main-Command dial |
| 6. Selector button | 17. Microphone |
| 7. Record/Tag button | 18. Navigate switch |
| 8. White Balance button | 19. Vertical AF Start button |
| 9. Back Status LCD panel | 20. Remote Release port |
| 10. ISO button | 21. Flash Sync Mode button |
| 11. Auto Exposure/Flash Exposure Bracketing button | 22. Custom Setting Menu button |

Camera Top

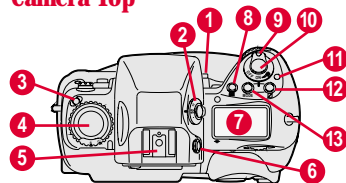

- | | |
|--|--|
| 1. Metering System Selector lock release | 7. Top Status LCD panel |
| 2. Metering System Selector | 8. AF Area Mode button |
| 3. Drive Mode Selector lock release | 9. Power/LCD Panel Illumination switch |
| 4. Drive Mode/Self-timer selector | 10. Shutter Release button |
| 5. Accessory Shoe | 11. Power Switch lock release |
| 6. Diopter Adjustment knob | 12. Exposure Compensation button |
| | 13. Exposure Mode button |



EASTMAN KODAK COMPANY
Rochester, New York 14650
© Eastman Kodak Company, 2000

Kodak and Kodak Professional are trademarks.
Printed in U.S.A. P/N 6B5235 5/00