

1 Loading the batteries



**Purchase cost-effective
rechargeable batteries and battery
charger**



www.kodak.com/go/c190accessories

2 Using an (accessory) SD Card

Your camera has internal memory. You can purchase an SD or SDHC Card to store more pictures and videos. (Maximum supported card size is 32 GB.)



CAUTION:


A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card when the camera is on may damage the pictures, the card, or the camera.




- 1 Turn off the camera.
- 2 Insert or remove the optional card.
- 3 Turn on the camera.

Purchase accessories www.kodak.com/go/c190accessories

3 Turning on the camera

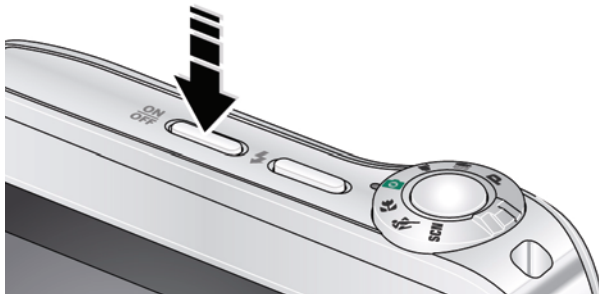

4 Setting the language and date/time

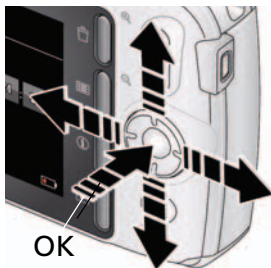

Language:

▲/▼ to change.

OK to accept.

Date/Time:

At the prompt, press OK.

▲/▼ change current field.


◀/▶ previous/next field.

OK to accept.

See the **Extended user guide** www.kodak.com/go/c190support

5 Taking a picture



① Turn the mode dial to Smart Capture 

② Press the Shutter button halfway to focus and set exposure.

When the framing marks turn green, press the Shutter button completely down.





See the Extended user guide www.kodak.com/go/c190support

6 Reviewing pictures/videos



Press the Review button 

Press   for previous/next picture/video.

Press the Shutter button halfway down to return to capture mode.

See the Extended user guide www.kodak.com/go/c190support

7 Transferring pictures/videos

- 1 Turn off the camera.
- 2 Connect KODAK USB Cable, Model U-8.
- 3 Turn on the camera.





See the Extended user guide www.kodak.com/go/c190support


Purchase accessories www.kodak.com/go/c190accessories

8 Getting help from your camera

Your camera offers a built-in Help system. It describes every setting for every menu choice. If you learn nothing else about your camera, learn how to use on-camera Help.



- 1 Press the Menu button  then highlight a menu choice.
- 2 Press the Info  button.

 Scroll through a Help topic.

See the Extended user guide www.kodak.com/go/c190support

9 Keep learning about your camera!

Congratulations!

You have:

- set up your camera
- taken pictures
- transferred pictures to your computer

Keep learning!


Finish reading this book, so you can take and share your best pictures!

Visit www.kodak.com/go/c190support:


- the extended user guide
- interactive troubleshooting and repairs
- interactive tutorials
- FAQs
- downloads
- accessories
- printing information
- product registration



Front view

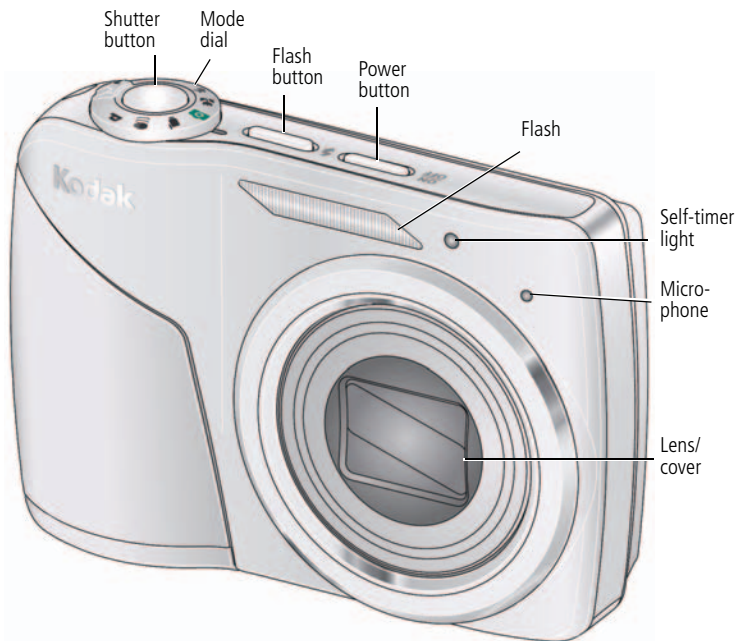

Back view

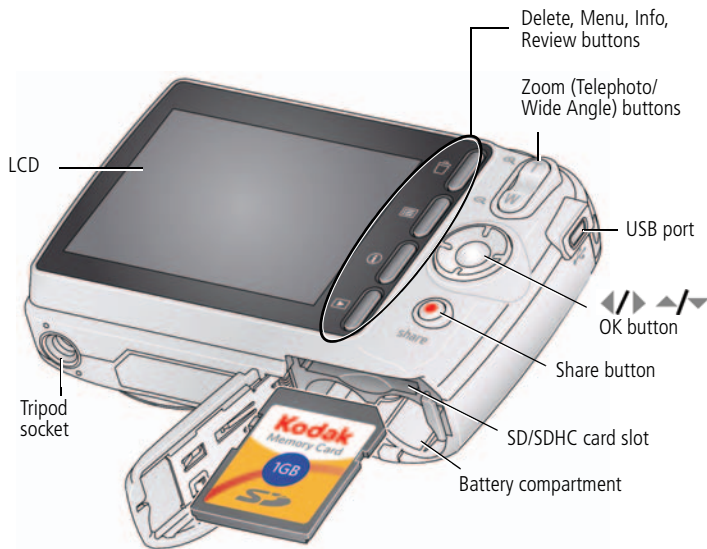






1

Doing more with your camera



Turn the Mode dial to the mode that best suits your subjects and surroundings.






Use this mode	For
 Smart Capture	General picture taking—it offers excellent image quality and ease of use.
 Video	Capturing video with sound. NOTE: Sound cannot be played on the camera. Sound is heard after the video is transferred to your computer.
 Blur Reduction	Reducing blur caused by camera shake or subject motion.
P Program	Advanced picture taking—allows access to manual settings.
 Close-Up	Close range. Use available light instead of flash, if possible.
 Sport	Subjects that are in motion.
SCN Scene	Point-and-shoot simplicity when taking pictures in practically any situation.

See the **Extended user guide** www.kodak.com/go/c190support

Using the flash

Press the flash button repeatedly to scroll through flash modes.
The current flash mode is shown on the LCD.






Flash modes		Flash fires
Auto		When the lighting conditions require it.
Fill (Flash On)		Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when the light is behind the subject). In low light, hold the camera steady or use a tripod.
Red Eye To choose a red eye setting, see the Setup tab.	 	A preflash fires, shrinking the eye pupil, before the picture is taken. A preflash does not fire; the camera corrects red eye.
Off		Never

See the Extended user guide www.kodak.com/go/c190support

Using the menu button to change settings


You can change settings to get the best from your camera.

NOTE: Some modes offer limited settings.

- 1 Press the Menu  button.
- 2 Press  to highlight the Capture/Video or Setup tab.
- 3 Press  to highlight a setting, then press OK.
- 4 Highlight an option, then press OK.

IMPORTANT: *Your camera offers a built-in Help system. To get the most from your camera, see page 7.*

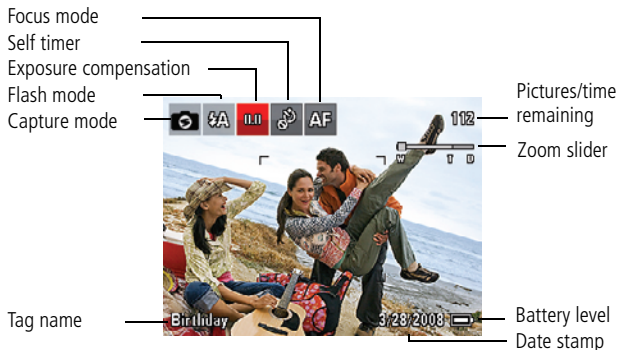

Understanding the picture-taking icons




2

Working with pictures/videos

Deleting pictures/videos

- 1 Press the Review  button.
- 2 Press  for previous/next picture/video.
- 3 Press the Delete button, then follow the prompts.

Understanding the review icons

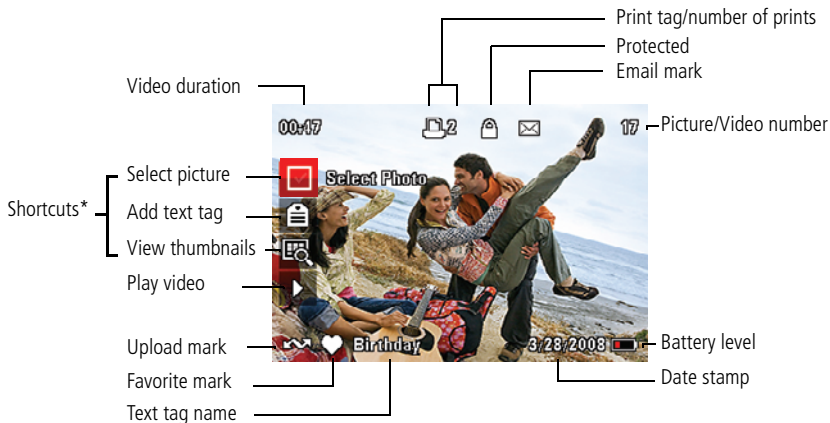

3

Share your stories!

Pictures start here!

1



Load software.

2



Take pictures.

3



Transfer pictures
to your computer.


Pictures become stories here!

At home



KODAK All-in-One
Printers

Online

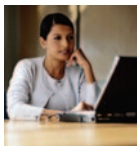

KodakGallery

At a retailer



KODAK Picture Kiosk

www.kodak.com/go/tips

www.kodak.com/go/c190support

4

Solving camera problems

Status	Solution
Camera does not turn on, off	■ Make sure the battery is charged and installed correctly (see page 1).
Camera buttons and controls do not function	
In Review, a blue or black screen is displayed instead of a picture	■ Transfer <i>all</i> pictures to the computer (see page 6). ■ Take another picture.
Memory card is almost or entirely full	■ Transfer the pictures to the computer (see page 6). ■ Delete pictures from the card (see page 14) or insert a new card.
Battery life is short	■ Make sure the correct battery type is installed. ■ Wipe the contacts with a clean, dry cloth before inserting a battery in the camera. ■ Insert a new or charged battery (see page 1).
Flash does not fire	■ Check the flash setting, and change as needed (see page 7). NOTE: The flash does not fire in all modes.

5 Appendix

FCC compliance and advisory

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

CE

Hereby, Eastman Kodak Company declares that this KODAK Product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/E.

Canadian DOC statement

DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes Classe B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Australian C-Tick



VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準よりクラスB情報技術装置です。この装置は、家庭環境で使用することとしていますが、この装置がラジオやテレビジョン受信機に近接すると、受信障害を引き起こすことがあります。説明書に従って正しい取り扱いをして下さい。

Korean Class B ITE

B급 기기 (가정용 방송통신기기)	이 기기는 가정용(B급)으로 전자파적합등록을 한 기기로서 주로 가정에서 사용하는 것을 목적 으로 하며, 모든 지역에서 사용할 수 있습니다.
-----------------------	-------------------------------------------------------------------------------------

China RoHS

环保使用期限 (EPUP)

在中国大陆, 该值表示产品中存在的任何危险物质不得释放, 以免危及人身健康、财产或环境的时间期限(以年计)。该值根据操作说明中所规定的产品正常使用而定。

有毒有害物质或元素名称及含量标识表						
部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
数码相机电路板元件	×	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。
 ×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006规定的限量要求。



USB 数据线

Kodak

Eastman Kodak Company
 Rochester, New York 14650

© Kodak, 2009

Kodak and EasyShare are trademarks of Eastman Kodak Company.