

Contents

For safety

CHAPTER 1 OVERVIEW	1
1.1 Introduction	1
1.2 Organization of This Manual	1
CHAPTER 2 USING RADAR FOR THE FIRST TIME	2
2.1 What is a radar ?	2
2.2 Characteristics of Radar Wave	3
2.3 Terms Specific to Radars	6
CHAPTER 3 INSTALLATION	10
3.1 Checking Contents of Your Package	10
3.2 Checking Power Supply Voltage	11
3.2.1 Power Supply Requirement	12
3.2.2 Fuse Replacement	12
3.3 Determining Place of Installation	12
3.3.1 Scanner unit	12
3.3.2 Display unit	12
3.3.3 Shifting away from obstacles	13
3.4 Installing Scanner Unit	14
3.5 Installing Antenna Unit	15
3.6 Installing Display Unit	16
3.7 Connecting Cables	17
3.7.0 Interconnecting cable (RA40C Radome scanner)	17
3.7.1 Interconnecting cable (RA41C Radome scanner)	17
3.7.2 Interconnecting cable (RA42C Open scanner)	20
3.7.3 Grounding wire	21
3.7.4 Power supply cable	22
3.8 Adjustment	22
3.9 Connecting External Equipment to Display Unit	23
3.10 Countermeasure for Electromagnetic Interference	23
3.11 When Discarding Your Radar	24
CHAPTER 4 FUNCTIONS AND NAMES	25
4.1 Key layout	25
4.2 Rear panel	26
4.3 Radar screen (Single screen)	26
4.4 Radar screen (Dual screen)	27
4.5 Radar screen (All PPI screen)	27
4.6 Radar screen (All PPI/PPI screen)	28
4.7 Navigation screen	28
CHAPTER 5 OPERATION	29
Basic operation of Radar	29
5.1 Powering On and Off	29
5.2 Adjusting brilliance of screen and key-backlight	29
5.3 Basic Operations	30

5.3.1 Powering On and Off.....	30
5.3.2 Transmitting	30
5.3.3 Adjusting brilliance of screen and key-backlight.....	31
5.3.4 Changing Distance Range (RANGE UP, RANGE DOWN).....	31
5.3.5 Automatic adjustment (AUTO)	31
5.3.6 Sensitivity adjustment (GAIN).....	32
5.3.7 Removing sea clutter (STC).....	32
5.3.8 Removing rain and snow clutter (FTC).....	33
5.3.9 Man Over Board (MOB)	34
5.4 Functions of Soft Keys	35
5.4.1 Bearing measurement (EBL1).....	35
5.4.2 Bearing measurement (EBL2).....	35
5.4.3 Distance measurement (VRM1)	35
5.4.4 Distance measurement (VRM2)	36
5.4.5 Measuring the angle between two points (FL EBL2).....	36
5.4.6 Measuring the distance between two points (FL VRM2).....	36
5.4.7 Changing the group of Soft Keys(NEXT).....	37
5.4.8 Erasing heading maker temporarily (HDG OFF).....	38
5.4.9 Using parallel cursors (/ / / CSR).....	38
5.4.10 Establishment of the indication of the RANGE RINGS (RINGS).....	38
5.4.11 ON/OFF of variable range function (VAR RNG).....	38
5.4.12 Changing display modes (MODE).....	38
5.4.13 Guard Zone (GZ)	38
5.4.14 Off Center (OFF-C).....	39
5.4.15 Setting of the SLEEP function(SLEEP).....	40
5.4.16 Tuning adjustment (TUNE).....	40
5.4.17 Echo expansion (ST)	41
5.4.18 Displaying locus of target (TRACK)	41
5.4.19 Enlarging selected areas (ZOOM).....	41
5.4.20 Increasing sensitivity (S/L).....	42
5.4.21 Switching the screen (SEL WIN).....	42
5.4.22 Changing the color of screen (PICTURE).....	42
5.4.23 Change to PPI screen (PPI).....	43
5.4.24 Change to SEMI3D/PPI screen (SEMI3D).....	43
5.4.25 Change to PPI/PPI screen (PPI/PPI).....	43
5.4.26 Change to PPI/NAV screen (PPI/NAV)	44
5.4.27 Change to ALL PPI screen (ALL PPI).....	44
5.4.28 Change to ALL PPI/PPI screen (ALL PPI2).....	44
5.5 MENU Operation.....	45
- List of MENU.....	45
5.5.1 Mark Menu.....	46
5.5.1.1 Bearing measurement (EBL1)	46
5.5.1.2 Determining the distance (VRM1)	47
5.5.1.3 Bearing measurement (EBL2)	47
5.5.1.4 Determining the distance (VRM2)	47
5.5.1.5 Measuring the distance or angle between two points (FL EBL2, FL VRM2)	47
5.5.1.6 Measuring the angle between two points (FL EBL2).....	48
5.5.1.7 Erasing heading maker temporarily (HDG OFF)	49
5.5.1.8 Using parallel cursors (/ / / CSR)	49
5.5.1.9 Establishment of the indication of the RANGE RINGS (RINGS)	50
5.5.1.10 Variable range function (VAR RNG).....	50
5.5.1.11 Output the position data of Cursor (TARGET).....	51
5.5.1.12 Follow the Distance and Bearing marker on the cursor (+MK LINE)	51

5.5.2 Nav (Navigation) Menu	52
5.5.2.1 Changing display mode (MODE).....	52
5.5.2.2 Guard Zone (GZ)	53
5.5.2.3 Shifting display in specific direction (OFF-C).....	54
5.5.2.4 Setting of the SLEEP function(SLEEP)	54
5.5.3 Echo Menu	56
5.5.3.1 Sensibility adjustment (GAIN)	56
5.5.3.2 Removing sea clutter (STC).....	57
5.5.3.3 Removing rain and snow clutter (FTC).....	57
5.5.3.4 Adjusting receiver tuning (TUNE)	57
5.5.3.5 Echo expansion (ST).....	58
5.5.3.6 Displaying locus of target (TRACK).....	58
5.5.3.7 Enlarging selected areas (ZOOM)	59
5.5.3.8 Increasing sensitivity (S/L).....	60
5.5.4 SETUP Menu	61
5.5.4.1 Initiating the screen display (WINDOW).....	61
- Limitation of screen operation	62
- Screen modes and Operations	62
(a) PPI Screen	62
(b) PPI/SEMI3D Screen.....	63
(c) PPI/PPI Screen	63
(d) PPI/NAV Screen	64
(e) ALL PPI Screen	64
(f) ALL PPI/PPI Screen.....	65
(g) MOB Screen.....	65
5.5.4.2 Switching screens on PPI/PPI screen (SEL WIN)	65
5.5.4.3 Changing the color of screen (PICTURE)	66
5.5.4.4 Fault Diagnosis by Self Check (SYSTEM CHECK).....	66
5.5.4.5 Changing the content of the setting (CUSTOM)	68
5.5.4.5.1 Changing the settings of soft keys (KEY ASSIGN).....	69
5.5.4.5.2 Changing the content of settings 1(PRESET1).....	71
5.5.4.5.3 Changing the content of settings 2 (PRESET2).....	73
5.5.4.5.4 Changing the content of settings (ADJUSTMENT).....	75
(1) Adjusting distance (TIMING ADJ)	75
(2) Adjusting angle (HEAD ADJ).....	75
(3) Adjusting tuning circuit (TUNING CAL)	76
(4) Adjusting antenna height (ANTENNA).....	77
(5) Setting GAIN circuit (GAIN)	78
(6) Setting STC circuit (STC).....	78
CHAPTER 6 MAINTENANCE AND INSPECTION.....	79
CHAPTER 7 TROUBLESHOOTING.....	81
7.1 Fault Diagnosis by Self-check	81
7.2 Inspecting Each Part	82
CHAPTER 8 PRODUCT SPECIFICATIONS	83
8.1 General.....	83
8.2 Scanner Unit.....	85
8.3 Display Unit	85

8.4 External Interface	86
8.5 Standard set.....	87
8.6 Options	87
8.7 External dimensions and weight	87
8.8 External connection and function	87

APPENDIX

1. RA40C GENERAL SYSTEM DIAGRAM	
2. RA41C GENERAL SYSTEM DIAGRAM	
3. RA42C GENERAL SYSTEM DIAGRAM	
4. RA40C INTERCONNECTION DIAGRAM	
5. RA41C / 42C INTERCONNECTION DIAGRAM	
6. OUTLINE DRAWING DISPLAY UNIT	
7. RA40C OUTLINE DRAWING SCANNER UNIT	
8. RA41C OUTLINE DRAWING SCANNER UNIT	
9. RA42C OUTLINE DRAWING SCANNER UNIT	
10. FLUSH MOUNT PROCEDURE	
11. INDEX	
RA40C TEMPLATE OF SCANNER MOUNTING HOLES (ACTUAL SIZE)	
RA41C TEMPLATE OF SCANNER MOUNTING HOLES (ACTUAL SIZE)	