


Most items in the CUSTOM menu are normally set when the radar is initially installed or are changed infrequently. Press "MENU", select CUSTOM from the SETUP menu, and then press "ENT". "KEY ASSIGN", "PRESET1", "PRESET2" and "ADJUST", are displayed in the box beside CUSTOM.

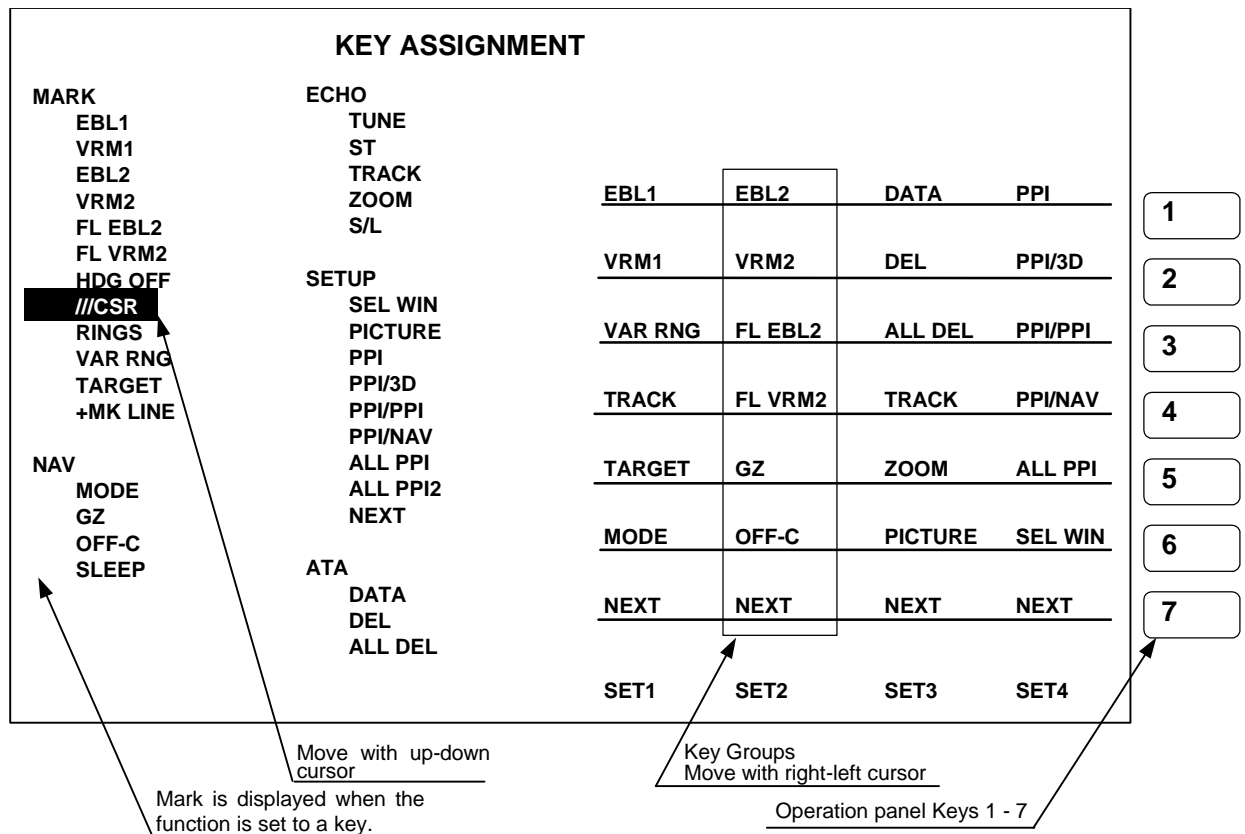


5.5.4.6.1 Changing the settings of the soft keys (KEY ASSIGN)


- RA51/52/53/54/55 INSTRUCTION MANUAL – 05

- (4) Highlight the function you'd like to assign, then press the numbered button you want to assign it to. The key name on the screen diagram will change to the new assignment.
- (5) Continue to make other changes in the same way. When you are done, press "ENT" and all the changes you've made will be stored.

Example 1) Altering OFF-C allocated to key 6 in Set 2 to HDG OFF.

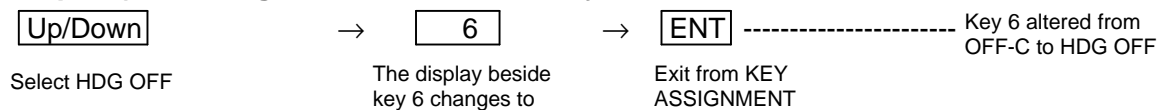

Example 2) Re-allocate SEL WIN to key 1 in Set 2.

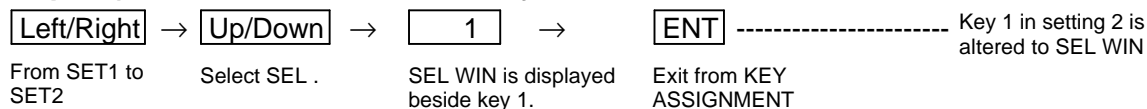

Example 3) Alter key 1 in Set 1 from ST to HDG OFF and then reset key 1 in Set 2 as SEL WIN.

