

Index

A

Adjustment	
Distance.....	62
Angle.....	63
Tuning.....	63
Antenna height	64
Automatic gain.....	65
Automatic STC.....	65
ALL PPI Screen	52
ALL PPI/PPI Screen	53

B

Bearing	31, 39
Brilliance.....	27
Buzzer volume	58

C

Changing the setting (CUSTOM)	56
Course error (XTE).....	26
Cross cursor (+).....	25

D

Display modes (MODE).....	6,33,44
---------------------------	---------

E

EBL	31,39
Echo expansion (ST)	34,48
Echo Menu	47

F

False echoes	3
FL VRM2, FL EBL2	31,40
FTC	30,48

G

Gain	29,47
Guard zone (GZ)	33,44
Guard zone mode (GZ MODE) ..	60
Guard zone level (GZ LVL).....	60

H

Heading marker.....	6
Heading Off (HDG OFF).....	33,41
Heading flash (HM FLSH)	58
Heading angle (HDG)	24
Hold (HOLD).....	61

L

Language.....	60
---------------	----

M

+MK LINE	42
Menu	38
Man Over Board (MOB)	30
MOB Screen	53
Monitor mode (MONI).....	54,60

N

Nav (Navigation) Menu	44
Navigation screen	26
North mark (NORTH M)	6,58

O

Off-center (OFF-C).....	33,45
Option	75

P

Parallel cursor (///CSR).....	33,41
PPI Screen	24,52
PPI/NAV Screen	53
PPI/PPI Screen.....	52
PPI/SEMI3D Screen	52
P TABLE (Pulse table).....	58

R

Radar interference	5
Radar screen	24
Range.....	29
Range rings (RINGS).....	33,41
Range ring interval	28
Reverse display	38,56

S

Semi-3D.....	36,52
Sleep (SLEEP).....	34,45
Speed (SPD SET)	60
ST'BY	27,58
ST'BY screen	58
STC	30,47
Stern mark (STERN M).....	58
Switching the screen (SEL WIN)	35,54
Self check (SYSTEM CHECK).....	54

T

Target (TARGET).....	42
Track (TRACK)	35,49
Tune	34,48
Tune meter	24

V

VAR RNG	33,42
VRM1.....	31,39
VRM unit (VRM UNIT)	58

W

Way point (WP).....	26
WP BRG (Bearing of Way point)	58

X

XTE (Course error)	26,34
--------------------------	-------

Z

ZOOM	35,49
------------	-------