

User Manual

Installation

1. Pull the Car Key out from the ignition
2. Find OBD2 connector, in your car and Plug in SUPER OBD2.
3. Insert the key into the ignition and twist the key to the first stage. (Do not start the car).
4. Please wait for a while about 5 sec. (SUPER OBD2 will communicate and establish connection with ECU). When connection is successful, OBD lights flashing rapidly.
5. Start up the engine.

Reset key

Press the reset button for about 5 sec reset.