

LED Cube Clock with Wood Grain Finish

KACLKWDCUBA

Quick Start Guide



Features

- Display Mode: DP-1 Time, date, temperature on rotation.
DP-2 Time only.
- Calendar: 2000 – 2099 years
- 12/24 hour format display
- Alarm function
- Selectable display brightness
- DC5V/500MA power supply by USB or 3 x AAA battery operation
- Sound control mode (power saving)

Packaging Contents

- Digital Wooden Clock
- Quick Start Guide
- USB Charging Cable

Displays and Keys

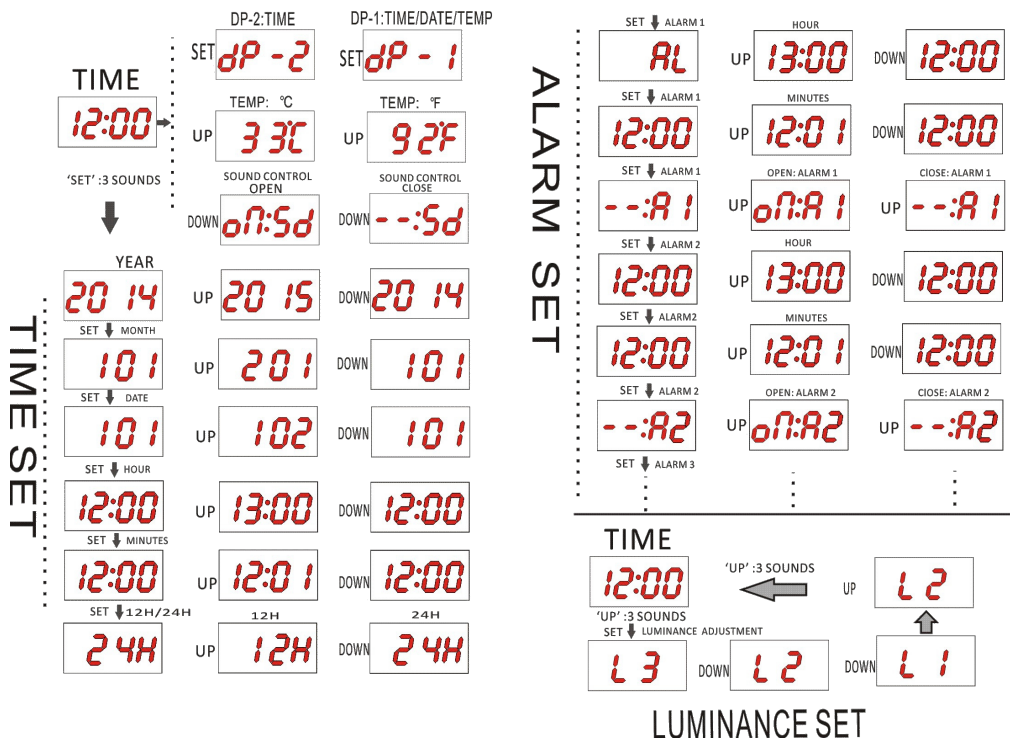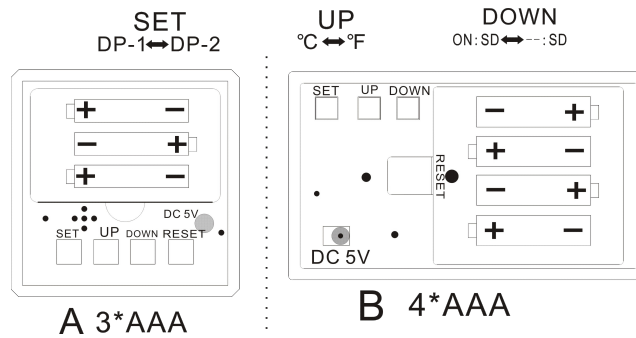

1. Display mode select: DP-1/DP-2
Initial mode : DP1 ;press 'SET' to transform DP1↔DP2)
2. Sound control mode select (Power-saving mode on AAA battery):
Press 'DOWN', "on: SD"↔"—:SD"; "ON :SD" means sound control works; "--:SD" means sound control closed
3. Press "up"; °C→°F format Conversion
4. Press button "SET"for 3 seconds to enter into setting mode,
You may set
:YEAR→MONTH→DATE→HOUR→MINUTE→12H/24H→AL(ALARM)→ALA1→ALA2→ALA3
When YEAR symbol flashing, adjust by"UP"and"DOW"n";...
5. 12 hour format display ; "PM" light is open
6. Display luminance adjustment
Press and hold the 'UP' key for 3 seconds to enter the setting item. Display "L3". Press DOWN key and the luminance decreases Display "L2", Press UP for luminance enhancement. The four levels of brightness are L3-0. After setting, hold down the 'UP' key for 3 seconds to exit setup.
7. Button"RESET"
Any mistake or errors caused by improper operation may be solved by pressing the "RESET" button.

Precautions

- Please use the clock in a dry area due to the wooden housing. Wet, humid or extremely hot locations will damage the finish.
- Product is fragile. Do not drop, throw or hit the clock.
- Please use high quality AA alkaline batteries. If the brightness dims or is blinking, it means you have a low battery. Please change the batteries as soon as possible.

If you have any issues or questions regarding the use of this product, please contact the Kogan customer support team.