

kogan

2400W Oil Heater

KAHTP24OILA

Quick Start Guide

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

For Your Safety

- Read all instructions carefully, even if you are familiar with similar appliances.
- Do not position this heater immediately below or next to a power outlet.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Let the heater cool before moving. Keep combustible papers, clothes and curtains at least 30cm from sides of the heater. Do not drape laundry or any other items over the heater.
- Ensure that the heater is placed at a distance of at least 30cm away from walls when in use.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug, or after the heater malfunctions, has been dropped or is damaged in any manner. Unplug the power cord and contact the Kogan.com customer support team.
- Do not use the heater outdoors.
- This heater is not intended for use in bathrooms, laundry areas or similar moist indoor locations. Never locate the heater where it may fall into a bathtub or other water container.
- Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.
- Do not run the power cord under carpeting or cover the cord with throw rugs, runners or the like. Arrange the cord away from high traffic areas and where it will not be tripped over.
- Do not place the cord over any part of the heater.
- Do not plug this heater into an extension lead, double adapter or power board.
- Do not operate unless the cord is fully uncoiled.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts.
- To disconnect the heater, set controls to OFF then remove the plug from the outlet.
- This heater has electrical parts inside. DO NOT use it in areas where gasoline, paint or flammable liquids are used or stored.
- Use the heater only as described in this booklet. Any other use is not recommended by the manufacturer which may cause fire, electric shock or injury to persons.
- Fully remove the power cord from the cord storage before use. Always uncoil the power cord fully before applying power.
- This product must always be used AND STORED in the upright position.
- Children of less than 3 years should be kept away unless continuously supervised.

- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- CAUTION- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Warning: In order to avoid overheating, do not cover the heater


Compulsory Warning

- If the supply cord is damaged, the cord must be replaced by a Kogan.com technician in order to avoid a hazard.
- This oil filled heater is filled with a precise quantity of oil. Repairs requiring the opening of the oil container are only to be conducted by a Kogan.com technician. The customer support team should be immediately contacted if there is an oil leakage.
- Disposal of the oil should be in accordance with local regulations. You should contact your local council to determine the correct procedure.
- This product has not been designed for any uses other than those specified in this manual.

Usage


Assembly

1. Remove the heater and all the accessories from the carton.
2. Turn the heater upside down.
3. Position the wheel base assemblies between the end fins on either side of the heater.
4. Attach them to the heater using the U-bolts and wing nuts supplied, as shown to right.
5. Tighten the wing nuts, then turn the heater the right way up.
6. The heater is ready for use.

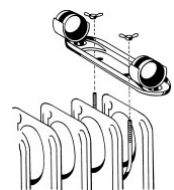

Parts Description

- A) Power Setting Switch
- B) Thermostat Control
- C) Handle
- D) Oil filled fins
- E) Casters
- F) Cord Storage
- G) Plug
- H) Wheel base assemblies

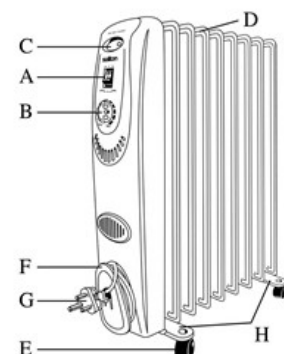

Operating Your Oil Radiator

1. Place the heater on the floor at least 30cm away from the wall and any other objects such as furniture, curtains or plants.
2. With the thermostat control switch and the power settings switches in the "OFF" position, plug the heater into the mains supply.
3. Turn the thermostat control clockwise to the desired setting.
4. Switch the heater to one of the following power settings:
 - Push switch (I) for Low Heat to keep the room temperature at a comfortable/pleasant level.
 - Push switch (II) for Medium Heat. This setting is ideal if sitting in a room for long periods of time.
 - Push switches (I) and (II) simultaneously for Rapid, High Heat. This setting is ideal for warming up a cold room quickly.
5. The power switch lights up when activated.
6. Turning the thermostat control clockwise will increase the "set" temperature.
7. Turning the thermostat anti-clockwise will decrease the "set" temperature.
8. Do not cover the heater at any time during operation. There is the risk of fire if the heater is covered.
9. Once you have finished using your heater, turn the power switches to (O), and the thermostat control switch to the "0" position, and unplug the unit from the mains supply.

Cleaning The Oil Radiator

Always disconnect the heater from the mains supply before cleaning.

Wait for the heater to cool down completely before cleaning.

Clean the outsides of the heater by wiping with a damp cloth and buff with a dry cloth.

DO NOT use waxes or polishes as these may react with the heat and cause discolouration.

Storing The Oil Radiator

Save the carton for out of season storage.

Unplug the heater and ensure it has cooled completely before storage.

Clean the heater following the cleaning instructions above.

Remove the wheel base assemblies.

Place the heater and the wheel base assemblies in the original box and store in a cool dry place.

If you choose to store your heater fully assembled, be sure to cover it to protect it from dust accumulation.

If you have any further questions regarding the use of this product, please contact the Kogan.com customer support team.