

kogan

55" LED TV (Full HD)

KALED55XXXVA

USER MANUAL



Table of Contents

| | |
|---|----|
| Safety Instructions..... | 3 |
| General Safety Instructions..... | 3 |
| Installation..... | 4 |
| Cleaning..... | 5 |
| Specifications & Accessories..... | 6 |
| Specifications..... | 6 |
| Accessories..... | 6 |
| Buttons and Terminal Interface..... | 7 |
| TV Buttons..... | 7 |
| Terminal Interface..... | 7 |
| Installation of TV..... | 7 |
| TV placement..... | 7 |
| Connect antenna and power..... | 7 |
| Turn on the TV..... | 7 |
| Remote Control..... | 8 |
| TV Menu..... | 10 |
| Input Source..... | 10 |
| Picture Menu..... | 10 |
| Picture MODE..... | 10 |
| Brightness/Contrast/Sharpness/Saturation/Hue..... | 10 |
| Color Temp..... | 11 |
| Aspect Ratio..... | 11 |
| PC Setting..... | 11 |
| Advanced Settings..... | 11 |
| Sound Menu..... | 11 |
| Sound MODE..... | 12 |
| Treble/Bass/Balance..... | 12 |
| Surround Sound..... | 12 |
| EQ Setting..... | 12 |
| AVL..... | 12 |
| SPDIF..... | 12 |
| Audio Description..... | 12 |
| Sound Type..... | 12 |
| Channel Menu..... | 12 |
| Auto Scan..... | 13 |
| Manual Scan..... | 13 |
| Digital Manual Scan..... | 13 |
| Analog Manual Scan..... | 13 |
| Channel Edit..... | 13 |
| Signal Information..... | 14 |
| Lock System..... | 14 |
| Channel Locks..... | 14 |
| Parental Rating..... | 14 |
| Lock Keypad..... | 14 |
| New Password..... | 14 |
| SETUP MENU..... | 15 |

 
| | |
|-----------------------------------|----|
| OSD Language..... | 15 |
| Audio Languages..... | 15 |
| Subtitles..... | 15 |
| Teletext..... | 15 |
| Mode Setting..... | 15 |
| Time Settings..... | 15 |
| PVR Settings..... | 15 |
| First Time Setup..... | 16 |
| OAD..... | 16 |
| Reset..... | 16 |
| USB Operation..... | 16 |
| Setting Up TV Stand or Mount..... | 16 |
| TV Stand Installation..... | 16 |
| Mounting the TV to the wall..... | 16 |
| Troubleshooting..... | 17 |

Safety Instructions


General Safety Instructions

Risk of electric shock. DO NOT OPEN!

Do not attempt to service the television yourself, as opening or removing the covers may expose you to dangerous voltage or other hazards. Refer all servicing to the Kogan customer support team.

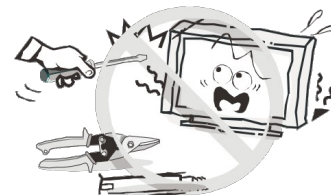

 To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The television should not be exposed to dripping or or splashing, and no liquid filled objects such as vases should be placed on the case.

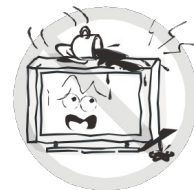

In the event of smoke, strange noises or a strange smell from the unit, you should follow these steps:

- Turn off the unit immediately.
- Disconnect the power plug from the power outlet.
- Contact the Kogan customer support team. Never attempt to make repairs yourself.

 


Never push objects of any kind into the set through the cabinet slots as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill any liquids onto the set. Use special caution in households where children are present. The television is not suitable for children under 4 years old to operate.




Power supply cords should be routed safely to prevent dangers due to damaged cords.

The mains plug is the main disconnect method, so it should be easily accessible and not be obstructed during use.

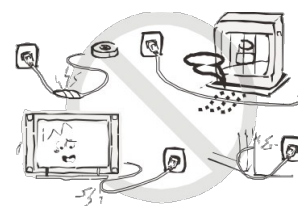

 To avoid fires, no naked flame sources such as lit candles or burning incense should be placed onto the casing of the television.

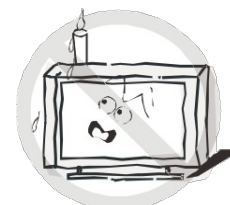


Do not pull the plug out of a power outlet by pulling on the power cable. Always grasp the plug and pull. Never touch the plug with wet hands.



An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits.

 When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them may be fatal.

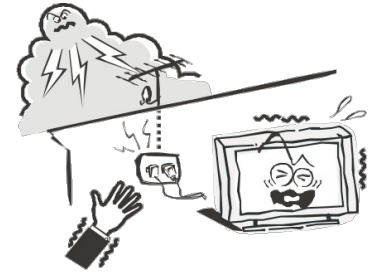

Always turn the set off when it is not being used.

Unplug the television from the power outlet when it will not be used for a long time or when there is an electrical storm.

 
Never touch the antenna cable during a lightning storm.




Excessive volume from earphones and headphones can cause permanent hearing loss. Always monitor the volume of noise from these devices, especially when children are using them.



Installation

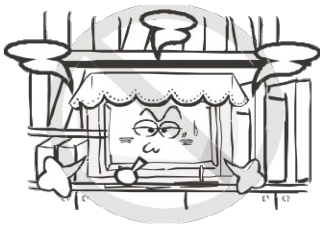

 
Ventilation should not be impeded or limited by covering the ventilation slots with items such as newspapers, tablecloths, curtains etc.. At least 10cm of space should be left around the apparatus for sufficient ventilation.

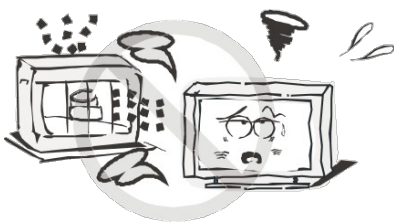

The television should be situated away from heat sources such as radiators, heaters, stoves or other products that produce heat.


Place the television in a position where the screen is not exposed to direct sunlight. It is best to have soft indirect lighting while watching, and you should avoid a completely dark viewing environment and reflections to avoid eye fatigue.

 Keep the product away from high magnetic fields (such as near an amplifier speaker) to avoid affecting the tint.

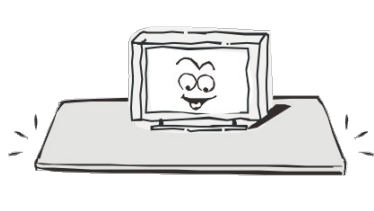


Do not place the television on an unstable table, stand or shelf. The set may fall, causing serious injury as well as damage to the television itself.

 
If moving the television on a cart, move the unit with care as sudden stops and starts may cause the television to overturn.

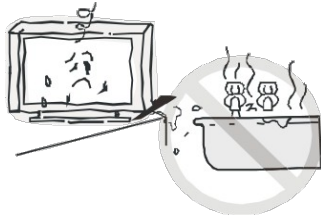

 Do not place this television near water, for example near a bathtub, wash bowl, kitchen sink, laundry tub, swimming pool or in a damp basement etc..

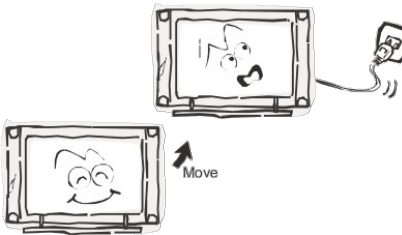

 
When moving the television to a warm location from a cold location, allow some time for any dew or condensation inside the television to evaporate fully before you turn the unit on.

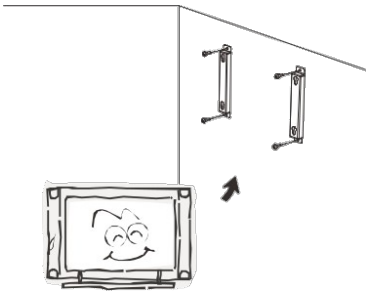

To prevent injury, the television must be securely attached to the floor/wall in accordance to the supplied installation instructions.

Cleaning

 Unplug the television from the power supply before cleaning. Do not use any liquid cleaners or harsh chemicals. Use a soft, damp cloth.

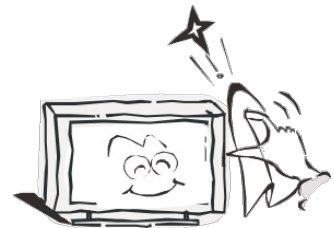

Specifications & Accessories

Specifications

| | |
|------------------------|---------------------------|
| Model | KAL55XXXVA |
| Display Screen Size | 55" Diagonal |
| Power Supply | 100-240V ~ 50/60Hz |
| Video In | PAL/NTSC |
| Sound Output | 2 x 10W |
| Remote Power Input | DC 3V (Two AAA batteries) |
| Power Consumption | 135W |
| Operating Temperatures | 0°C ~ 40°C |

Accessories


Remote Control

Buttons and Terminal Interface

 

 





TV Buttons

Note: The following is a function schematic. The actual position and arrangement of buttons may differ.



-  Turn power ON/OFF
- SOURCE** External Signal Input Selection
- MENU** Display main MENU and confirm MENU item selection
- CH +/-** Select channel
- VOL +/-** Adjust volume


Terminal Interface

| | | | |
|---|--|---|--|
|  | AV Input External AV signal input with relevant left/right audio channels. |  | USB Input Connect USB device to play media files or record programs via the PVR function. |
|  | Y Pb Pr Input Connect to the composite terminal of your DVD/VCR. |  | HDMI Input Digital signal from a HDMI video connector. |
|  | ANT 75 Connect the antenna/cable TV input (75/VHF/UHF) |  | VGA Input PC analog signal input. |
|  | PC Audio Input VGA input and audio input when in VGA mode. |  | Earphone Output For use with headphones or external speakers. TV speakers will be disabled while in use. |

Installation of TV

TV placement

 Place your TV on a flat surface that is able to bear the weight of the TV. To avoid damage, please don't expose the TV to water or direct heat. Do not block the ventilation on the back of the TV.

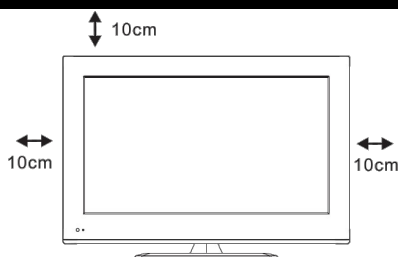


Connect antenna and power

Connect the antenna cable to the antenna socket on the back of the television.
Plug the power cable into the wall socket.

Turn on the TV


Press the power button on the TV and the indicator light will turn green. If the TV is in standby mode (the indicator showing as red), then press the power button on the remote control to turn the TV on.

 Note: These images are for reference purposes only.

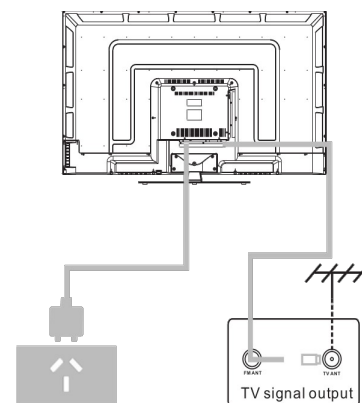

Remote Control

 1. **POWER** : Set your TV to power on or standby mode.
2. **MUTE** : Press to mute the sound. Press again or press VOL+ to unmute.
3. **0-9** : Press 0~9 to select a TV channel directly while watching TV. The channel will change after 2 seconds. Applicable for entering page number in teletext mode and so on.
4. **DTV/DTV**: Switch between Analog and Digital TV
5. **↶** Return to the previous viewed program.
6. **S.MODE**: Press to cycle through the different sound settings
7. **SLEEP**: Select amount of time before TV turn itself off automatically.
8. **MTS** : Press to search the NICAM modes.
9. **P.MODE**: Press to cycle through the different picture settings
10. **MENU**: Allow you to navigate the on-screen menus.
11. **SOURCE**: Open the main menu ,press to list the sources
12. **▲▼◀▶ ENTER**: Allow you to navigate the on-screen menus and adjust the system settings to your preference.
13. **EXIT**: Exit from the menu or sub-menu and cancel the function in process (if applicable)
14. **DISPLAY**: Press to display the source and channel's info.

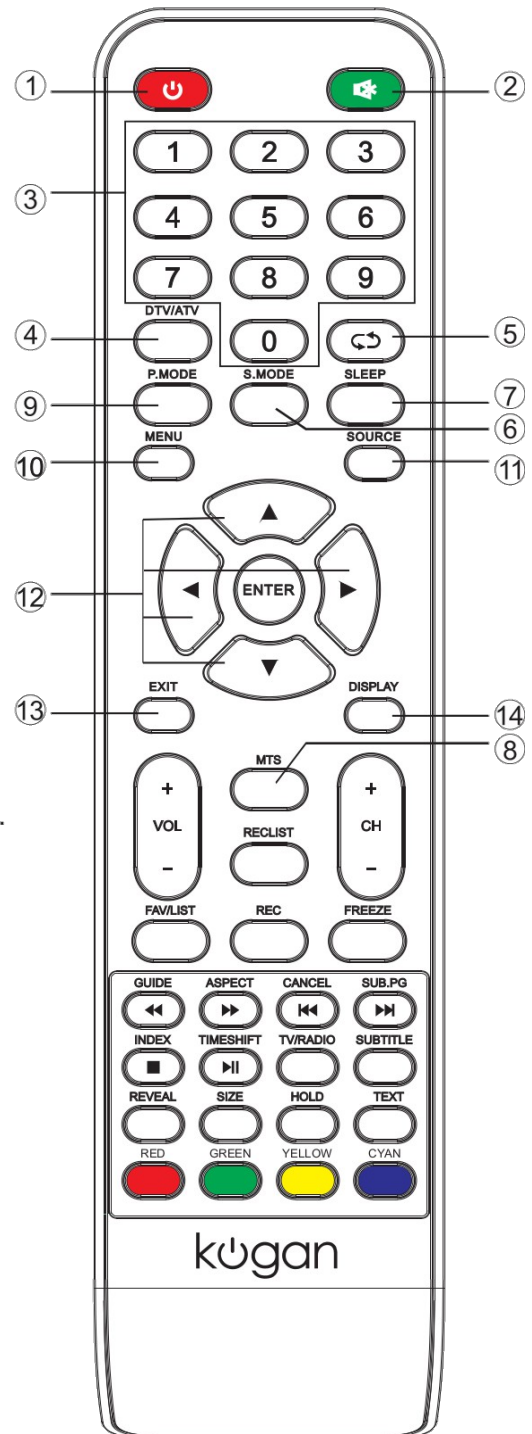


Battery Installation:

Remove the battery compartment lid on the rear of the remote control by sliding the lid down, then off. Put two AAA batteries inside the battery compartment with their + and - ends aligned as indicated. Do not mix old and new batteries or different types of batteries. Slide the lid until you hear it click into place.

Using the Remote Control:

Unless stated, otherwise, the remote control can operate all the features of the TV. Always point the remote control directly at the remote sensor in front of the TV.

 15. **VOL+/VOL-**: Press to increase / decrease the sound level.
16. **TV/RADIO**: When watching channel, allows you to switch between TV and Radio modes
17. **GUIDE**: 1. Launches the EPG (Electronic Program Guide) 2. Fast reverse in PVR or Media Player mode.
18. **TIME SHIFT**: 1.DTV channel time shift Function. 2.play on PVR or Media Player mode.
19. **CANCEL**: 1. When a page is selected in the mode of text, it may take some time before it becomes available, pressing the CANCEL key will return to the TV mode. When the required page is found , the page number will appear at the top of the TV picture, press the CANCELkey to return to the mode of text for you to browse this page. 2. Previous chapter in PVR or Media Player mode
20. **INDEX**: 1.Request the Index page in Teletext mode. 2.Exit the playing function in PVR or Media Player mode.
21. **SIZE**: Change the size of display in Teletext mode.
22. **REVEAL**: Reveal or Hide the hidden words.
23. **COLOR BUTTONS**: Teletext switch of the analog parts, the items selection in the menu of the digital parts and the practice of the MHEG5 in the DVB menu.
24. **CH+/CH-** : Press to scan through channels.
25. **FAV/LIST**: press to open the favorite list. then you can select the favorite channel.
26. **ASPECT**: 1. Select picture scale. 2.fast forward in PVR or Media Player mode.
27. **FREEZE**: press to freeze the picture
28. **SUB. PG** 1.Press to access sub page. 2. Next chapter in PVR or Media Player mode.
29. **SUBTITLE**:To show and set the language of current DTV.
30. **HOLD**: HOLD On or Off for current page display .
31. **TEXT**:Switch the teletext on and off.
32. **REC LIST**: Show the recorded list.
33. **REC**: Record begin in PVR mode.

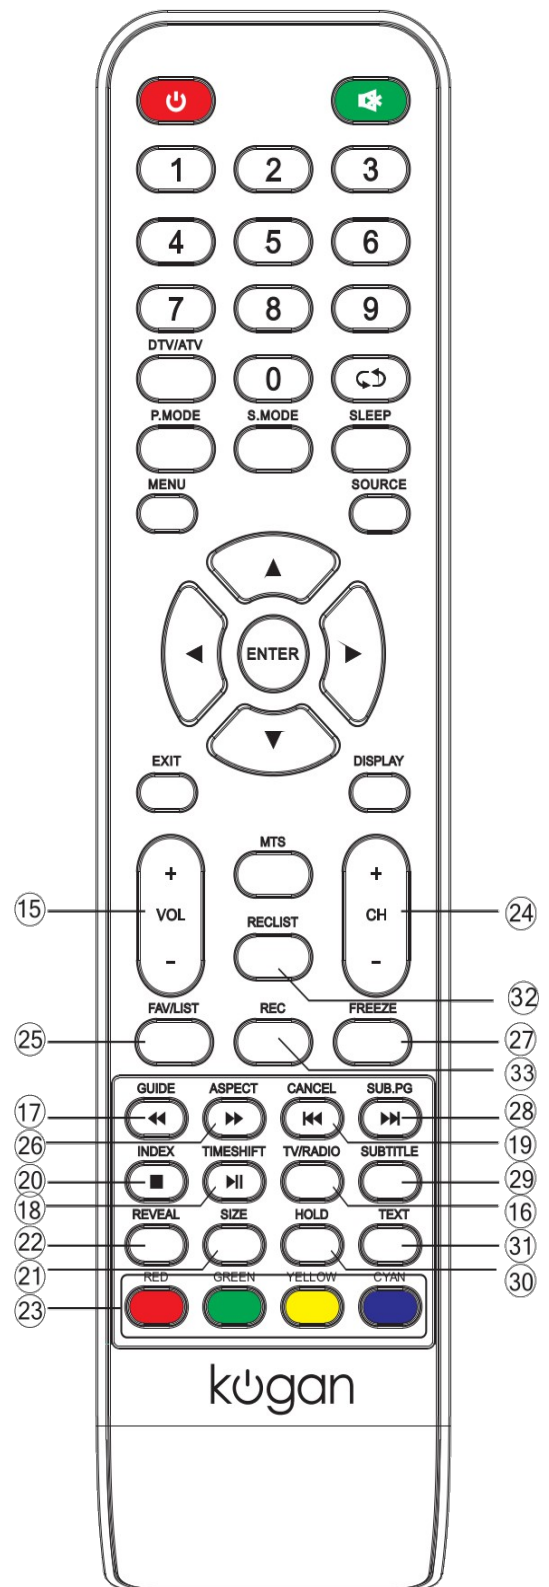

TV Menu

 
Input Source

Press **INPUT** to select the input source.

Press ▲/▼ or **INPUT** to select the source you want.

Press **ENTER** to confirm your selection.



Press **EXIT** to quit.

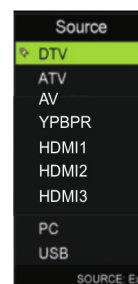

Picture Menu

Press MENU button to display the main menu.

  Press ◀/▶ to select PICTURE in the main menu, then press ▼/ENTER to enter.

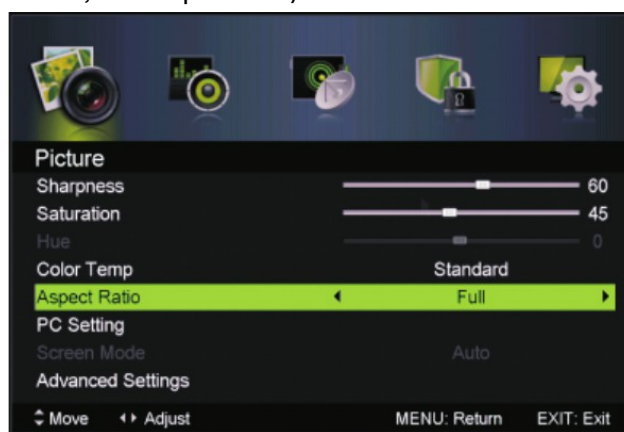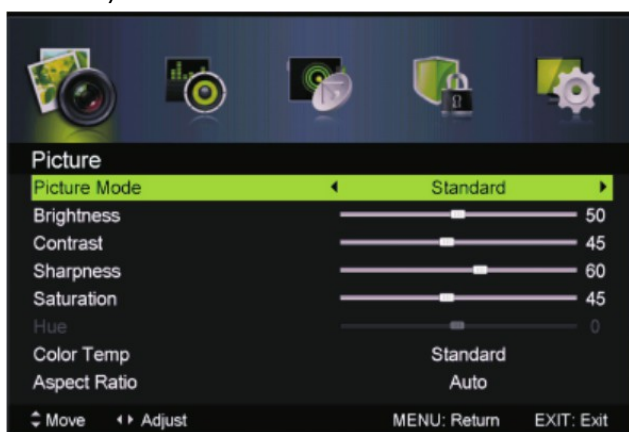

1. Press ▲/▼ button to select the option that you want to adjust in the **PICTURE** menu.
2. Press **ENTER**/◀/▶ to adjust settings.
3. Once adjusted, press the **MENU** button to save and return back to the previous menu.

Picture MODE

Press ▲/▼ button to select the picture mode, then press ◀/▶ to select.

TIP: You can press the **PMODE** button to change the picture mode directly.

Brightness/Contrast/Sharpness/Saturation/Hue

Press ▲/▼ to select option, then press ◀/▶ to adjust.

| | |
|-------------------|---|
| Brightness | Adjust the optical fibre output of the entire picture. This option will affect the dark regions of the picture. |
| Contrast | Adjusts the highlight intensity of the picture. With this option, the dark regions of the picture will remain unaffected. |
| Sharpness | Adjusts the peaking in the detail of the picture. |
| Saturation | Adjusts the saturation of colour, based on your preferences. |
| Hue | Used in compensating the colour changes associated with transmission when in NTSC format. |

Color Temp

Changes the overall colour cast of the picture.

Press ▲/▼ to select Color Temp, then press ◀/▶ to select Standard/Cool/Warm.

Standard Produces a vivid, neutral image.

Cool Produces a gentle, blue-tinged image.

Warm Produces a red-hued image.

Aspect Ratio

Press ▲/▼ to select Aspect Ratio, then press ◀/▶ to select.

| | |
|---------------------------------|--|
| Auto | Automatically adjusts the aspect ratio based on the TV size and the format of the program. |
| Full/4:3 Zoom1/Zoom2 | Select to force the TV to display the image according to your personal preferences. |

PC Setting

Press **INPUT** to select PC source.

Press **MENU** to enter the main menu, then press ◀/▶ to select the **PICTURE** menu.

Press **ENTER**/▼ to enter, then press ▼ to select PC setting.

Advanced Settings

 
Adjust advanced video features to fine tune the image.

Press ▲/▼ to select Advanced Settings, then press **ENTER**/▶ to enter sub-menu.

Sound Menu

Press **MENU** button to display the main menu.

Press ◀/▶ to select **SOUND** in the menu, then press **ENTER**/▶ to enter.

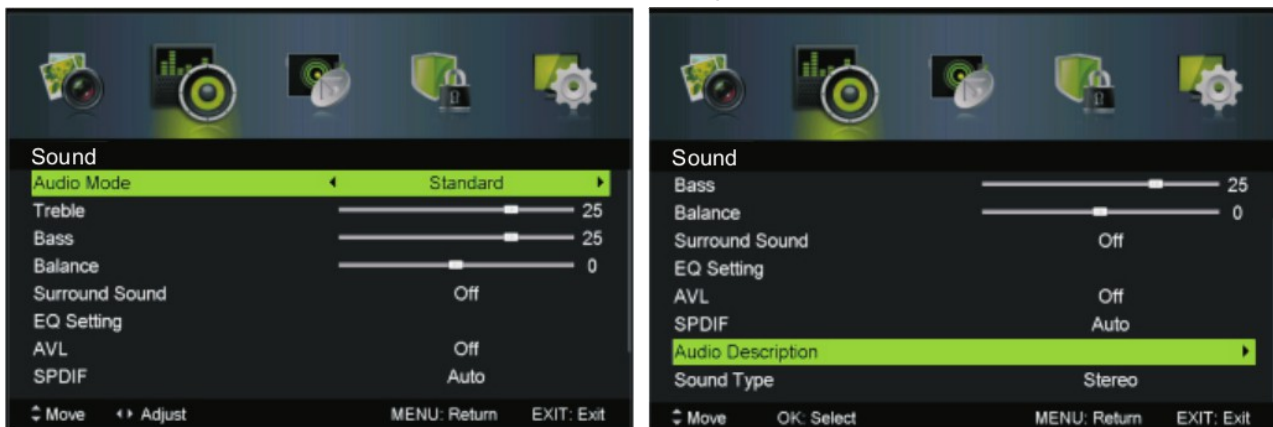

1. Press ▲/▼ button to select the option that you want to adjust in the **SOUND** menu.
2. Press **ENTER**/◀/▶ to adjust settings.
3. Once adjusted, press the **MENU** button to save and return back to the previous menu.

Sound MODE

Press ◀/▶ to select the Sound Mode, then press **ENTER**/▼ to select.

Treble/Bass/Balance

Press ▲/▼ to select option, then press ◀/▶ to adjust.

| | |
|----------------|---|
| Treble | Adjust the treble effect. Increases or decreases high pitched sounds. |
| Bass | Adjust the bass effect. Increases or decreases lower pitched sounds. |
| Balance | Adjust balance shift between left and right speakers to adapt to your listening position. |

Surround Sound

Press ▲/▼ to select Surround Sound, then press ◀/▶ to select On or Off.

EQ Setting

Adjust the curve of 7 bands equalizer.

Press ▲/▼ to select EQ Setting, then press **ENTER**/▶ to enter sub-menu.

AVL

Set the auto-volume control.

Press ▲/▼ to select AVL, then press ◀/▶ to select On or Off.

SPDIF

Press ▲/▼ to select SPDIF, then press ◀/▶ to select Off / Auto / PCM.

Audio Description

Press ▲/▼ to select Audio Description, then press **ENTER**/▶ to enter sub-menu.

Sound Type

 
Press ▲/▼ to select Sound Type, then press ◀/▶ to select.

(Available Sound Types: Stereo, Dual I, Dual II, Mixed)

Channel Menu

Press **MENU** button to display the main menu.


Press ◀/▶ to select **CHANNEL** in the menu, then press **ENTER**/▶ to enter.

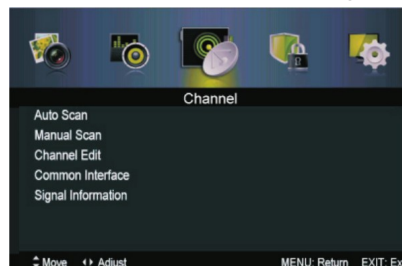

1. Press ▲/▼ button to select the option that you want to adjust in the **CHANNEL** menu.
2. Press **ENTER**/◀/▶ to enter sub-menu.
3. Press the **MENU** button to save and return back to the previous menu.


Auto Scan

 Press ▲/▼ to select Auto Scan, then press **ENTER**/▶ to enter sub-menu.

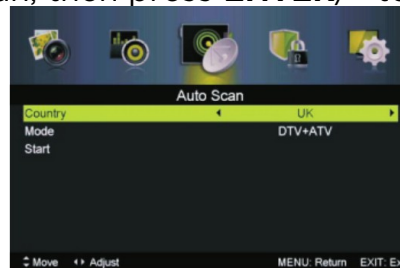


Manual Scan

 Press ▲/▼ to select Manual Scan, then press **ENTER**/▶ to enter sub-menu.

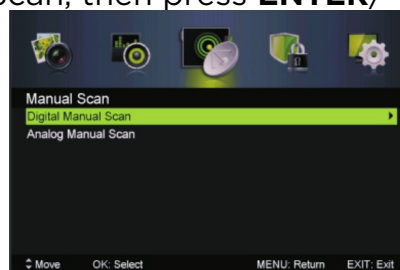

Digital Manual Scan

 Press ▲/▼ to select Digital Manual Scan, then press **ENTER**/▶ to enter sub-menu.

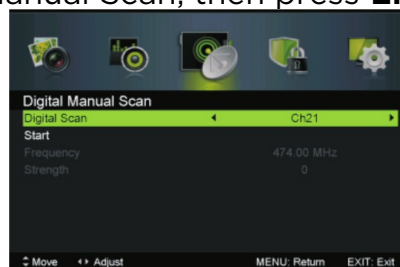




Analog Manual Scan

Australia no longer has analog TV signals.

Channel Edit

Press ▲/▼ to select Channel Edit, then press **ENTER**/▶ to enter sub-menu.



   The 3 coloured keys are the shortcuts for programming channels.

Firstly, press ▲/▼ to highlight the channel that you want to delete, move or skip, and then;

Press the **RED** button to delete the channel.

Press the **GREEN** button to skip the channel. (Your TV will skip the channel automatically when using CH+/- to view channels)

Press the **BLUE** button to set the channel into moving mode. You can then press ▲/▼ to move it to the position you want.

 
Signal Information

Press ▲/▼ to select Signal Information. Then press **ENTER** to see detailed information about the signal. This option is only functional in DTV mode.

Lock System

Press **MENU** button to display the main menu.

Press ◀/▶ to select **Lock System** in the menu, then press **ENTER**/▼ to enter.

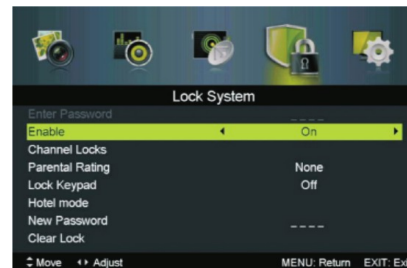

1. Press ▲/▼ to select the option that you want to adjust in the **Lock System** menu.
2. Press **ENTER**/◀/▶ to adjust.
3. Once adjustment is finished, press **MENU** to save and return to the previous menu.

Note: Default password is 0000.

Press ▲/▼ to select enable, then press ◀/▶ to select ON or OFF.

Channel Locks, Parental Rating and Lock Keypad are available when enabled.

Channel Locks

Press ▲/▼ to select Channel Locks, then press **ENTER**/▶ to enter sub-menu.

Parental Rating

Press ▲/▼ to select Parental Rating, then press ◀/▶ to select.

Lock Keypad

Set to prevent changes being set by young children or other unexpected usage.

Press ▲/▼ to select Lock Keypad, then press ◀/▶ to select ON or OFF.

 
 
New Password

Press ▲/▼ to select New Password, then enter 4 digit code twice to set.

SETUP MENU

Press **MENU** button to display the main menu.

Press **▲/▼** to select **SETUP** in the menu, then press **ENTER/▼** to enter.

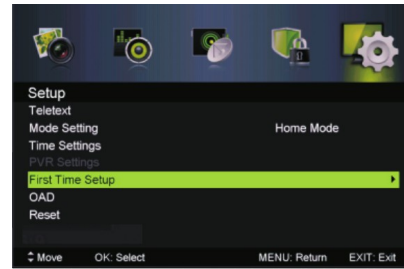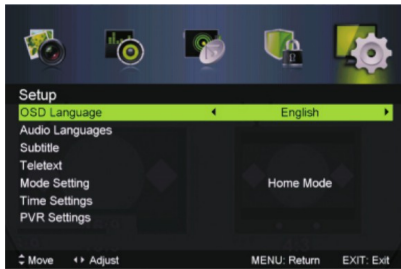

1. Press **▲/▼** to select the option that you want to adjust in the **Setup** menu.
2. Press **ENTER/▲/▼** to adjust.
3. Once adjustment is finished, press **MENU** to save and return to the previous menu.

OSD Language

Press **▲/▼** button to select OSD language, then press **▲/▼** to select.

Audio Languages

Press **▲/▼** button to select Audio Language, then press **ENTER** to enter the sub-menu.

Press **▲/▼/▲/▼** to select the Audio Primary Language and Audio Secondary Language.

Subtitles

Press **▲/▼** to select Subtitle, then press **ENTER** to enter the sub-menu.

Teletext

Teletext is not currently available on Australian TV networks.

Mode Setting

Press **▲/▼** to select mode setting.

Time Settings

Press **▲/▼** to select Time Settings, then press **ENTER/▶** to enter sub-menu.

PVR Settings

Press button to select PVR Settings, then press **ENTER** to enter sub-menu. It will check the USB.



First Time Setup

Press ▲/▼ to select First Time Setup, then press **ENTER** to enter.

OAD

Press ▲/▼ to select OAD, then press **ENTER** to enter sub-menu.

 
Reset

Press ▲/▼ to select Reset, then press **ENTER** to enter sub-menu.

USB Operation

Note: Before operating the **USB** menu, plug in a USB device, then press the **INPUT** button to set the Input Source to **USB**.

Press ◀/▶ to select USB in the Source menu, then press **ENTER** to enter.

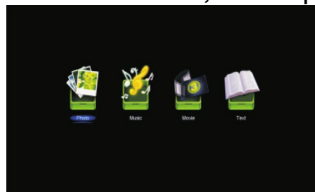


Press ◀/▶ to select the option you want to adjust in the main USB menu, then press **ENTER** to enter.

Setting Up TV Stand or Mount


TV Stand Installation

 1. Insert the stand bracket into the glass base. Ensure all of the mount screws are aligned properly, then screw them in with the 6 x screws (A) and the metal plate.
2. Put the glass base assembly onto the main TV unit, then screw them together using the 5 x screws (B).
3. Installation is complete.

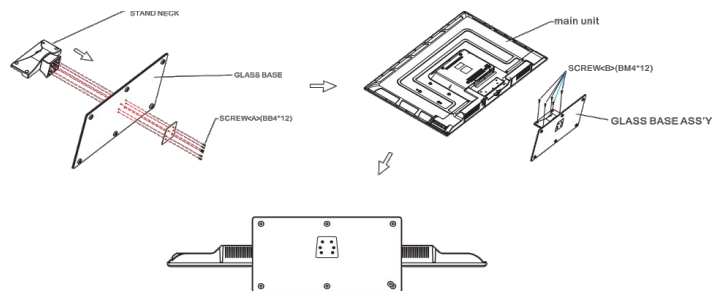

Mounting the TV to the wall

 1. Place the TV on a table covered with towels or other soft protective layers with the screen facing downwards. Take care to keep the screen safe from being scratched.
2. Use a screwdriver to remove screws from the bottom stand (as shown in picture 1), then remove the stand.
3. Using the measurements between the screw holes (as shown in picture 2), mark out the bracket points on the wall (as shown in picture 3).
4. Drill four holes into the wall (size shown in image is for reference only), then place in the 4 mounting screws.
5. As shown in picture 4, use a screwdriver to fasten the screws into the back of the TV, then mount the TV on the wall.

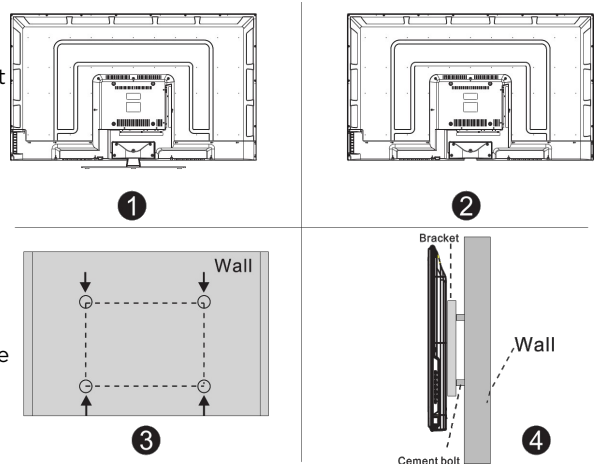

Note

- The bracket and wall mounting equipment is not supplied with the TV.
- When mounting the TV, we recommend you have it installed and mounted by a professional, as incorrect installation may result in the mount coming away from the wall, causing structural damage to your room and damage to the TV itself.
- Images shown above are for reference only.

Troubleshooting

If you have any problems with your television, please check the suggested solutions below, as these issues may be caused by improper adjustment/setup rather than a malfunction with the unit. If the problem persists, please contact the Kogan customer support team.

| Problem | Possible Solution |
|---|--|
| Poor picture and sound quality | <ul style="list-style-type: none">• Try a different channel• Adjust the antenna• Check all connections |
| No picture or sound in TV status | <ul style="list-style-type: none">• Try another channel• Press the TV/AV button• Make sure TV is plugged in• Check the antenna connection |
| No sound, or sound is too low at maximum volume | <ul style="list-style-type: none">• Check the volume settings on any external speakers connected to your television• Adjust the TV volume accordingly• Check that MUTE hasn't been turned on |
| No colour, wrong colour or tints | <ul style="list-style-type: none">• Make sure the program itself is broadcast in colour• Select the picture menu, then adjust the colour and tint submenus |
| Picture rolls vertically | <ul style="list-style-type: none">• Check all connections |
| Blurred or snowy picture, distorted sound | <ul style="list-style-type: none">• Check direction, location and connections to your antenna• Issues may be caused by use of an indoor antenna |
| Remote control malfunctions | <ul style="list-style-type: none">• Replace remote control batteries• Check battery terminals• Remote is out of range, move closer to TV• Confirm there is no obstructions between remote and TV• Make sure power cord is plugged in |
| Image is not centered on the screen | <ul style="list-style-type: none">• Adjust the horizontal and vertical position |

If you have any questions or problems with your television, please contact the Kogan.com customer support team.