



# 3200 Lumens HD Projector KAPROFHDXA Quick Start Guide

## Table of Contents

Safety & Warnings.....	1
Overview.....	2
Accessories.....	2
Remote Control.....	2
Product Diagram.....	3
Multimedia File Support.....	3
Operation.....	4
Projector distance and size.....	4
Setup.....	5
Image Adjustments.....	6
Connections.....	7

## Safety & Warnings

Handle with care and inspect regularly to ensure product is in good working order.


If this product, power supply cord or plug shows any signs of damage: stop use, unplug the product and contact Kogan.com support.

- Read all instructions before using the projector and retain for reference.
- Do not look straight into the light from the projector lens: bright light can harm your eyes and cause severe damage to the eyes of infants.
- Do not use the projector in a damp or humid environment.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is designed for consumer use: follow directions and use only as described.
- Do not use with an extension cord unless necessary, and if so, ensure it is suitably rated and it is handled safely as is the product's own power cord:
- Do not allow the power cord to be exposed to water, heat, direct sunlight or overhang where it can be pulled or otherwise be damaged or pose a hazard.
- This appliance contains no user-serviceable parts. It contains high-voltage components. If it suffers any failure or damage, cease usage and contact Kogan Support after consulting the Troubleshooting section of this manual.

# Overview


## Accessories

1) Projector

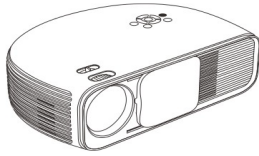

lens cap included

2) AV Cable

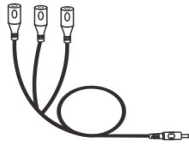

3) Power cable




4) Remote Control




batteries not included

5) Lens Cleaning Cloth

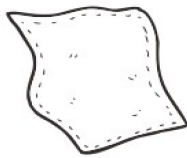


6) Support Base

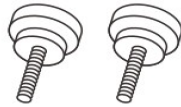

7) Manual




## Remote Control

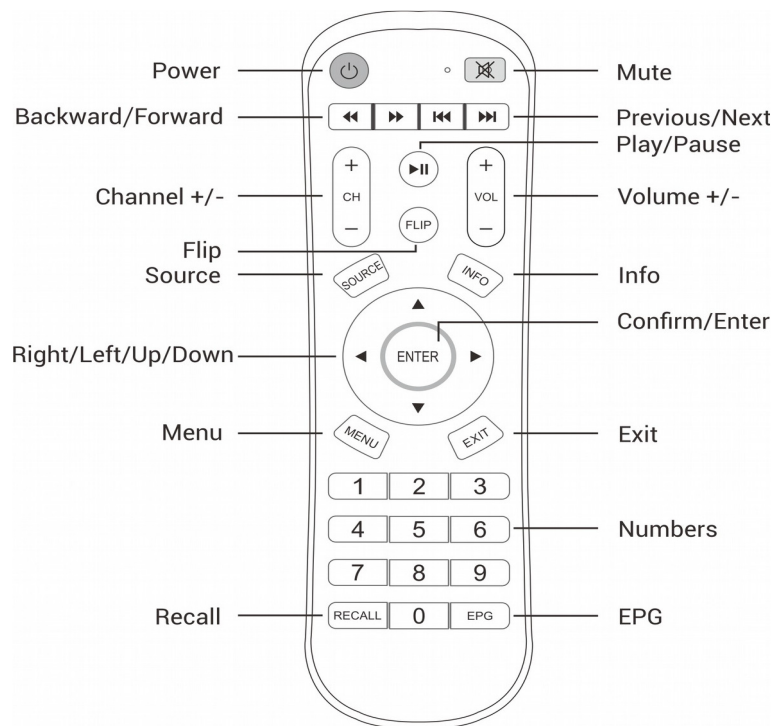


# Product Diagram


Front View

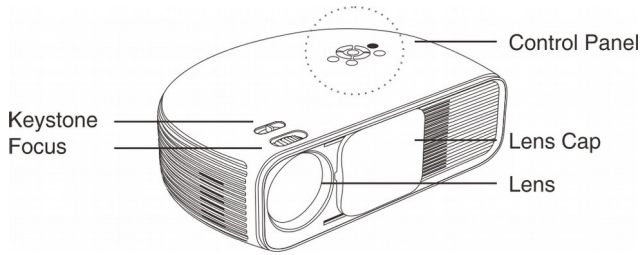


Rear View

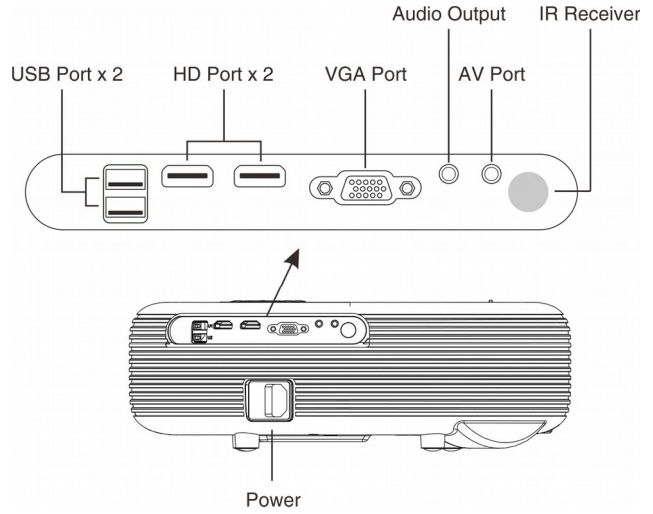

Bottom View

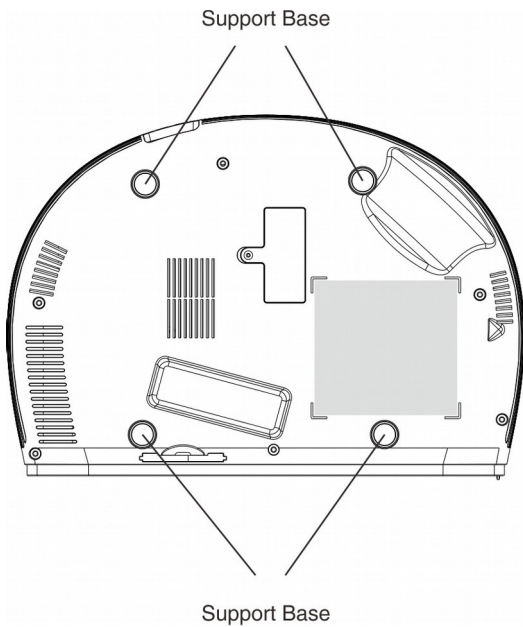

Control Panel

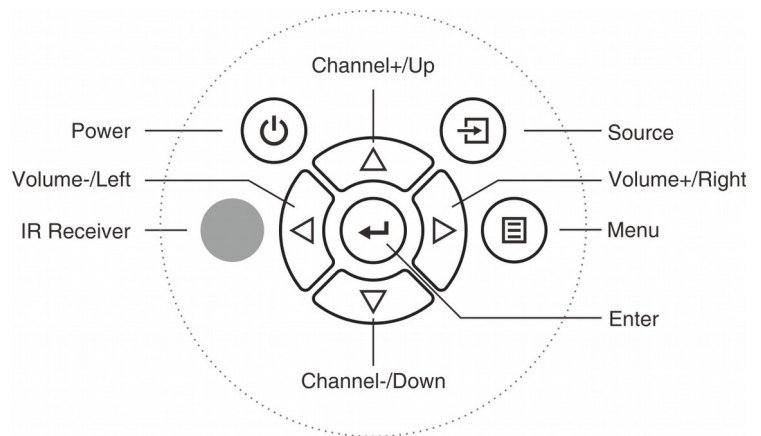

## Multimedia File Support


Format	Type	File Extension
<b>Image</b>	JPEG, PNG, HMP, MPO, GIF	.jpg / .png / .bmp / .gif
<b>Audio</b>	MPEG1, MPEG2, WMA, LPCM, MP3	.avi / .wmv / .ts / .dat / .vob / .wav / .mkv / .mp3 / .mp4 / m4a
<b>Video</b>	MPEG1, MPEG2, H.263, H.264, AVS, VC1, MJPEG, RV30, RV40, HEVC	.dat / .ts / .mp4 / .mpg / .mpeg / .avi / .mkv / .mov / .wmv / .asf / .flv / .3gp / .3gpp / .tp / .trp

# Operation


## Installation & Setup

If ceiling-mounting, consult a professional installer. Ensure all screws are in the correct position and use screws less than 10mm. Failure to do so may result in screws penetrating the plastic shell, damaging the projector and causing electrocution due to contact with high-voltage components inside the projector.

## Projector distance and size

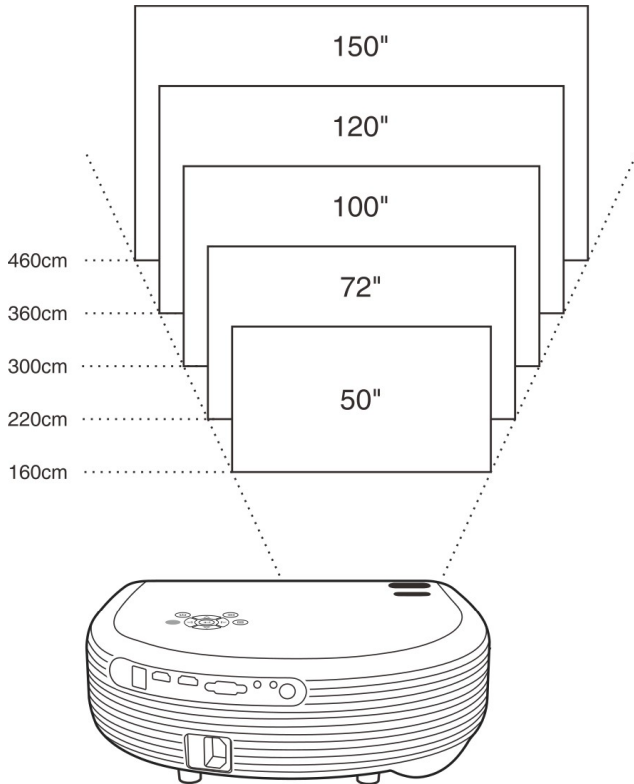


The image size depends on the distance between the projector and screen along with the settings made. There may be up to a 3-5% deviation from the above data.

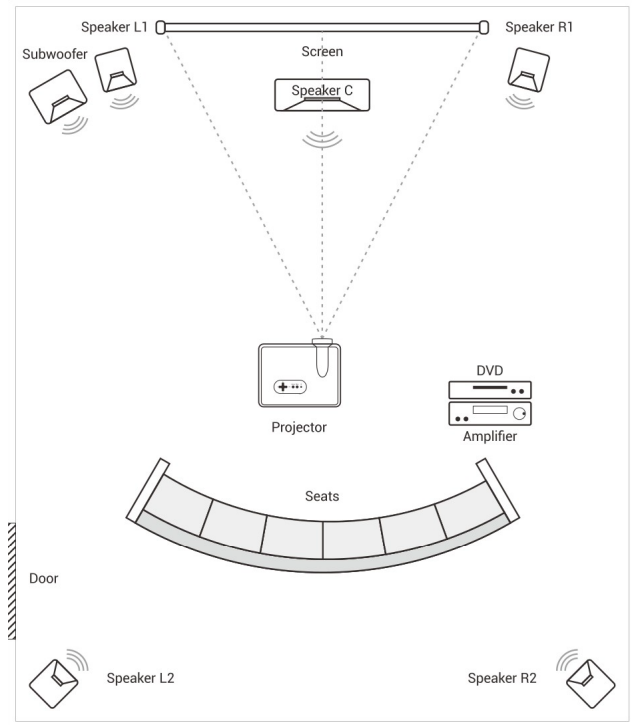


To ensure an optimal viewing experience, avoid sunlight on the projector screen directly.

## Setup


1. Refer to the figure below regarding angling for a correct image.

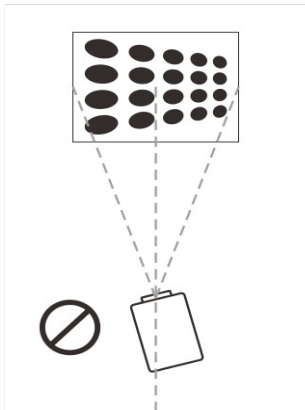

Incorrect: off-centre and distorted

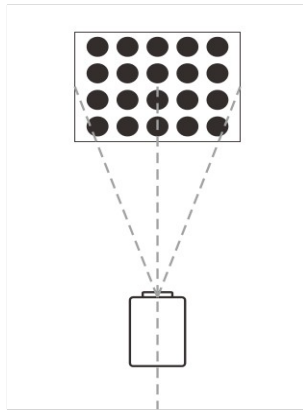


Correct

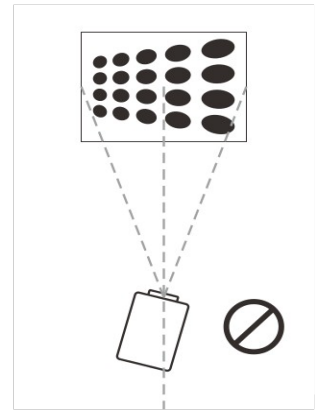

Incorrect: off-centre and distorted

2. Connect the power plug as illustrated and press the power switch. The indicator light will turn on red.

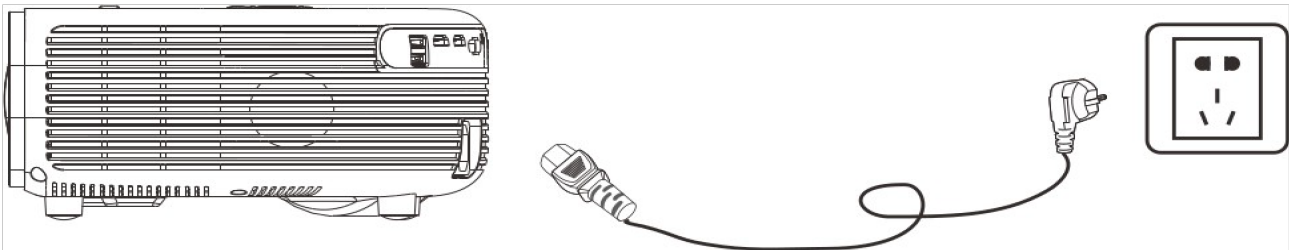


3. Press the power button on the control panel or remote control.




## Image Adjustments

A keystone adjustment can resolve issues where the image is projected in a trapezoidal shape.

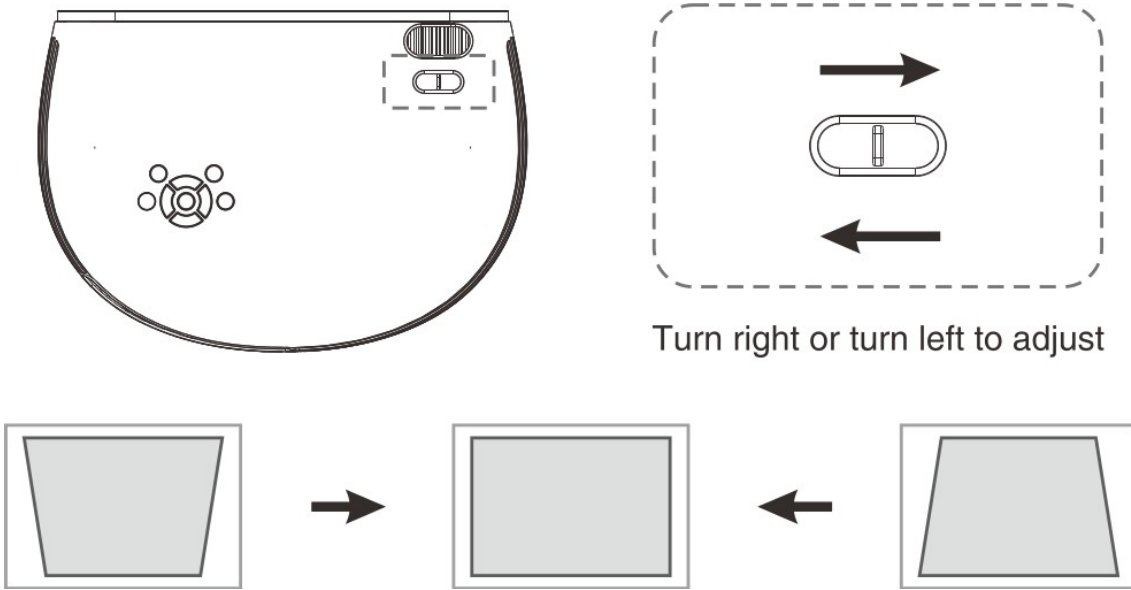


A focus adjustment can resolve issues where the image is blurry or difficult to see.

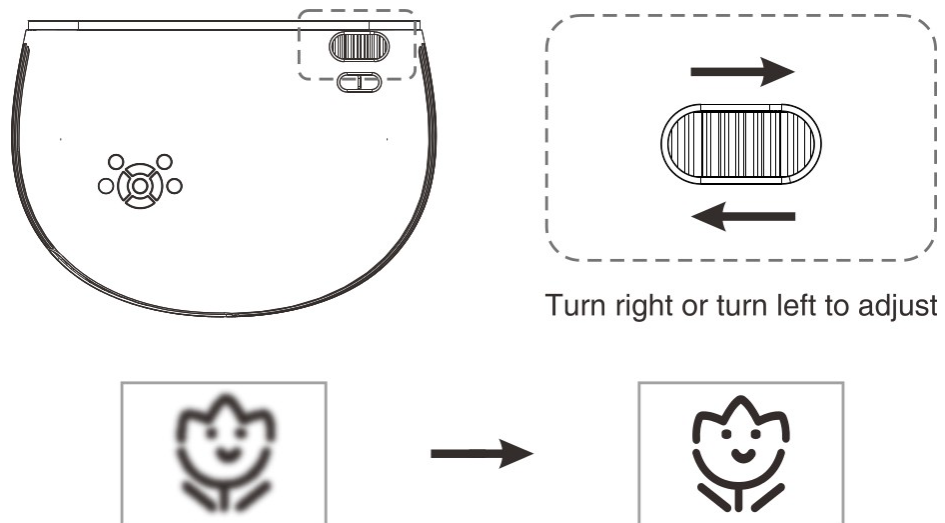


# Connections

## USB Flash Drive (Multimedia)

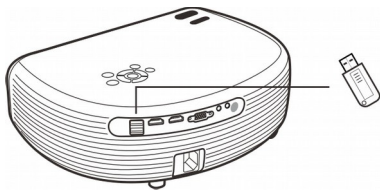


Input Source
AV
PC-RGB
HDMI1
HDMI2
<b>USB1</b>
USB2

## HDMI Connection

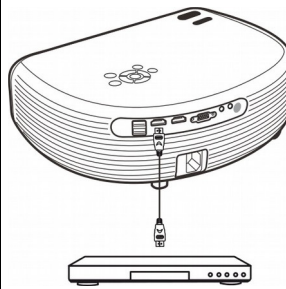


Input Source
AV
PC-RGB
<b>HDMI1</b>
HDMI2
USB1
USB2

## VGA Connection (Video Only)

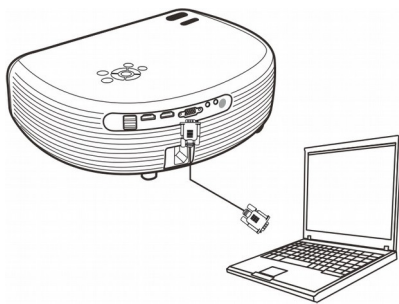


Input Source
AV
<b>PC-RGB</b>
HDMI1
HDMI2
USB1
USB2

## Audio Out (to External Audio)

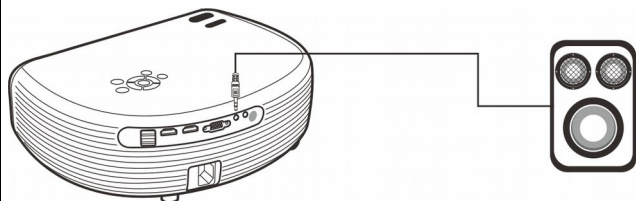


## AV Connection

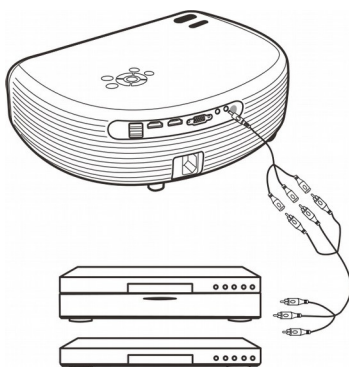


Input Source
<b>AV</b>
PC-RGB
HDMI1
HDMI2
USB1
USB2

## Mobile Device - MHL Cable


MHL-capable Android or iOS device

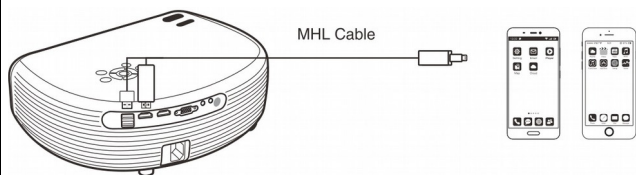

## iOS - Lightning Digital AV Adaptor

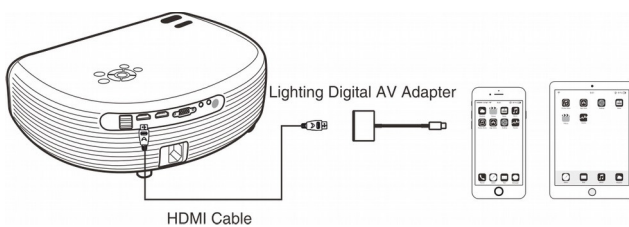

## Google Chromecast / Apple TV

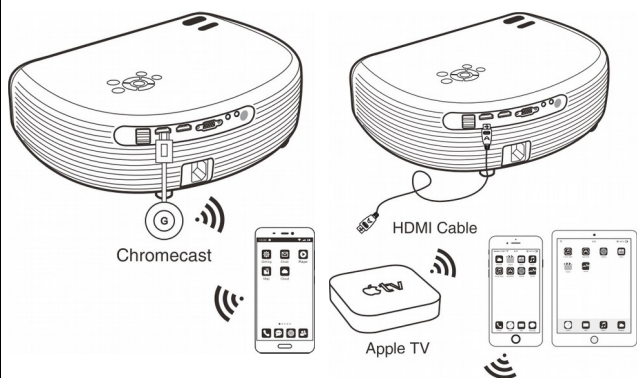

User manual is subject to change without notice. For the latest version of your user manual, please visit <https://www.kogan.com/usermanuals/>