

kogan

Agora HD Mini 3G Tablet

KHTBL08163GA

USER MANUAL



Content

<u>Get Started.....</u>	<u>3</u>
<u>Insert SIM card and Memory Card</u>	<u>3</u>
<u>Charging the Battery or Connect to a Computer... </u>	<u>4</u>
<u>PAD Overview.....</u>	<u>5</u>
<u>Locking and Unlocking the Screen.....</u>	<u>6</u>
<u>Basic Operation.....</u>	<u>7</u>
<u>Switch on/off.....</u>	<u>7</u>
<u>Enter Sleep Mode</u>	<u>8</u>
<u>Manage Notification.....</u>	<u>9</u>
<u>Adjust the volume</u>	<u>10</u>
<u>Connecting your device to a computer.....</u>	<u>11</u>
<u>Add Widgets and More Icons to Home Screen.....</u>	<u>12</u>
<u>Rearrange or Remove Widgets and Icons on your</u>	


<u>Home Screen</u>	<u>13</u>
<u>Enter Launcher.....</u>	<u>14</u>
<u>Open and Switch Applications.....</u>	<u>14</u>
<u>Switch to Recently Used Application.....</u>	<u>15</u>
<u>Browse the Web.....</u>	<u>16</u>
<u>Connect to Wi-Fi network</u>	<u>16</u>
<u>Access internet via Wi-Fi.....</u>	<u>17</u>
<u>Listen to Music.....</u>	<u>18</u>
<u>Download Applications from Android Market.....</u>	<u>19</u>
<u>Manage Applications/ Move to SD card.....</u>	<u>21</u>
<u>Maintenance & Safety.....</u>	<u>23</u>

Get Started

Insert SIM card and Memory Card


1. Power off the device.
2. Insert the SIM card and Micro SD card into the slot.

Note: Use only compatible memory cards for use with this device. Incompatible memory cards may damage the card or the device itself, and may corrupt the data stored on the card.

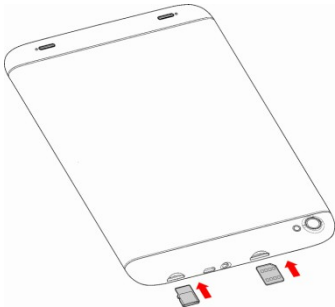

Charging the Battery or Connect to a Computer

You can charge your battery by connecting the USB cable (supplied with this device) to a computer or USB charging device.

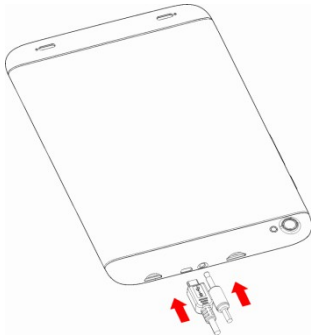




PAD Overview

The PAD offers a wide variety of experiences with built-in Camera, Video recorder, FM radio, plus a Music and Sound recorder. You can install various APPs, games, and more (supports APK format) by downloading them from the Android Market.



Locking and Unlocking the Screen


Press the power button to enter Sleep mode, after which the screen will be locked; press the power button again to wake up and then drag the lock to the right side to unlock.

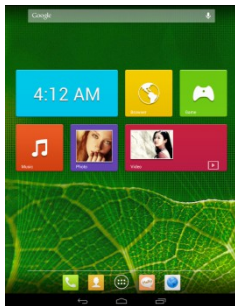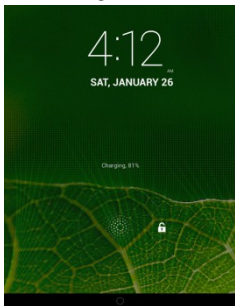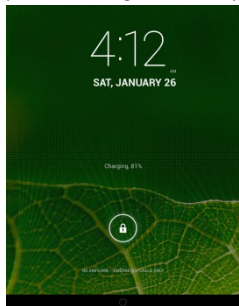

Basic Operation

Switch on/off

After you installed your Micro SD card and SIM card, press the **POWER** button to switch on your device. To turn the unit off, press and hold the **POWER** button down. The screen will show "Power off" on the screen and then shortly afterwards the unit will shut down.

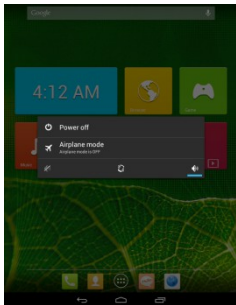

Enter Sleep Mode

To make your device to enter sleep mode, go to settings → Display → Sleep.

1. Switching to Sleep Mode

◆**Manual:** Quick pressing the Power button will turn the display off temporarily and your device will go to sleep mode.



◆**Automatic:** If you leave the device idle for a certain period of time, your device will change to Sleep mode automatically.

2. Waking up from Sleep mode

To wake up your device manually, press the POWER button, and then drag lock icon to the right side.


Manage Notification

Touch the bottom of the screen where the system time is showed to open the Notification panel. When there is an available Wi-Fi or other notifications, you can open the Notification panel to have a view or perform simple operations. To close the Notification panel, tap the Back or Home icon.

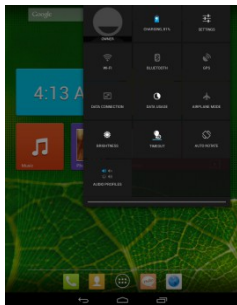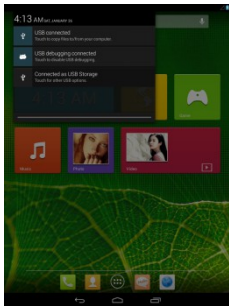


Adjust the volume

1. Press **VOLUME UP** or **VOLUME DOWN** buttons on the right side to adjust the ringer volume.
2. Enter **Launcher > Settings > Audio profiles > General > Volumes**, where you can adjust the volume of Music, Video, Games and other media.
3. Enter **Launcher > Settings > Audio profiles > Silent**, to switch the tablet to Silent Mode.

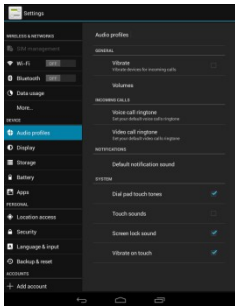


Connecting your device to a computer

1. Connect your device to a computer with the supplied USB Cable
2. Tap to open Notification panel and tap USB connected.
3. On the computer, the connected device is recognized as a removable disk.
4. Navigate to this removable disk and open it.
5. Then you can transfer files from the computer to the root folder of the storage card in the device or vice versa.
6. Disconnect the device from the computer:
Remove the USB Cable as your computer's safety requirement.

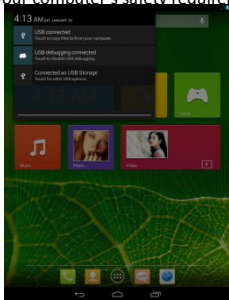



Add Widgets and More Icons to Home Screen

Enter Launcher and hold your finger on an application icon till the screen vibrates, and then release your finger hold.

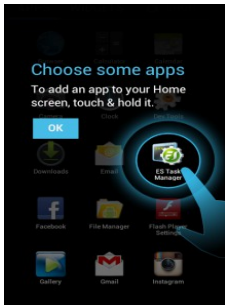

Rearrange or Remove Widgets and Icons on your Home Screen


- Hold your finger on the widget or icon you want to move. Once the device vibrates, don't release your hold on the icon, instead drag the widget or icon to a new location on the screen.
- Press and hold on an icon till the device vibrates, and drag the widgets or icon to the remove text to delete it!

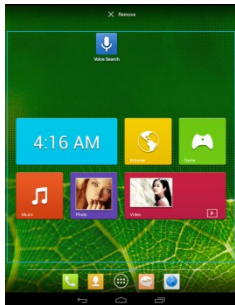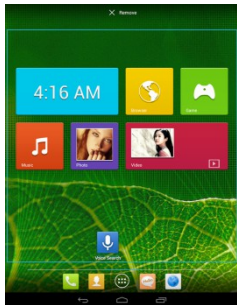

Enter Launcher

Open and Switch Applications


The Launcher holds icons for all of the applications on your device, including any applications that you downloaded from Android Market or other sources. On the Home screen, touch the Launcher Icon to open the main menu.

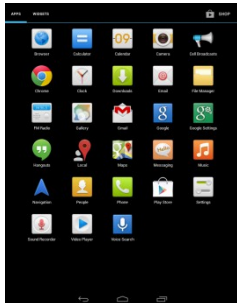

Press either the Home icon or Back icon to close the Launcher.

Switch to Recently Used Application

Tap the background apps icon  to switch to recently used apps.

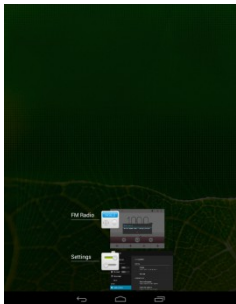

Browse the Web

Connect to Wi-Fi network

To browse the Internet via Wi-Fi:


1. Go to Menu > Settings > wireless & networks and then tap Wi-Fi ON.
2. Next, select the WIFI connection listed under Wi-Fi networks.



To browse the web, you need switch Wi-Fi on. When you switch on Wi-Fi to use it browse the web, some networks may need a password.


Access internet via Wi-Fi

Enter Settings > Wireless & networks > More, scroll down to find the Mobile network, and then enter "Access Points Names", choose the correct WAP account.

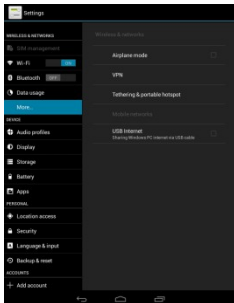



Listen to Music

When you copy music to your SD card, the Music player searches the card for music files and builds a catalog of your music based on information about each file that is stored in the file itself.

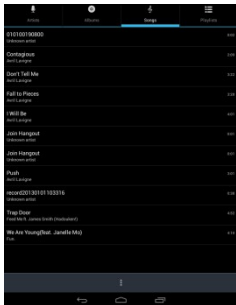


Download Applications from Android Market

1. Add a Google account

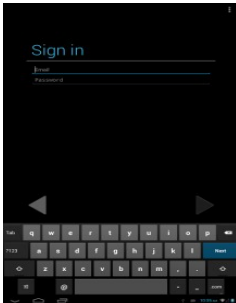
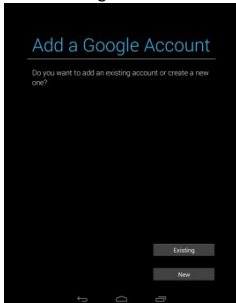


2. Enter Play Store and download Apps.


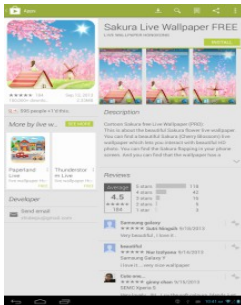


Manage Applications/ Move to SD card

1. Add a Google account.
2. Enter Android market or Play store and then download applications.
3. **Go to Settings > Security > Unknown sources**, a system message comes up to give a warning to you. Click "OK", then you can install your Apps.

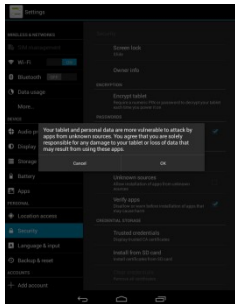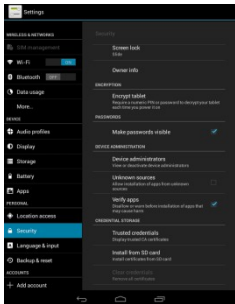

4. Go to **Settings > Apps**, you can manage the applications; Click an application here to see more details of it or uninstall it.

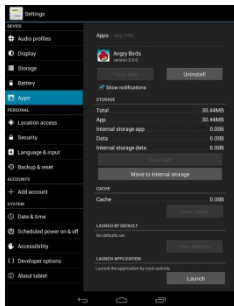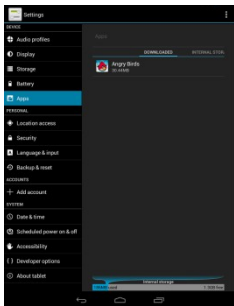

Maintenance & Safety

Please read and observe the following information for safe and proper use of your device and to prevent damage. Please keep a copy of the user guide in an accessible place at all the times after reading it.

1. After Sales Service

Kindly refer all enquiries to the Kogan customer support team.

2. Charger and Adapter Safety

Charger and adapter are designed for indoor use only.

3. Battery Information and Care

- Do not try to be disassembled the PAD or withdraw the battery from the casing.
- Full recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- The self-protection function of the battery cuts the power of the device when operation is in an abnormal status.

4. General Notice

- Never drive or operate machinery while using the PAD.
- Pay special attention to the use of the PAD near heart pacemakers, hearing-aids and

- some other medical equipment, because the device can cause interference with them.
- Using non-genuine accessories may harm your device and could result in warranty cancellation.
- Do not dismantle the device. In case of product failure, please contact the Kogan customer support team as soon as possible.
- When charging the device, always keep it in an area with good ventilation. Clear the area of flammable and explosive objects.
- In order to avoid demagnetization, always keep the device away from magnetic objects such as credit cards, DVD players etc.
- Ensure the device not to contact any liquid. In the even of the unit becoming submersed in liquids, contact the customer support team immediately.
- Do not use the device in an environment with too high or too low temperature, never expose the device to strong direct sunshine or too wet an environment. The suitable temperature for the device and accessories is 0°C-40°C. Do not use the tablet at altitudes over 2,000m.
- Do not use liquids or wet cloths with strong cleansers to clean the device.
- This device can shoot video and record audio functions, which should only be used as per the related laws and regulations.
- Always keep the device out of unsupervised children's reach.
- Do not throw or vibrate the device because violent treatment to the device may damage the inner circuits and connections.

Warning: Kogan will not bear any responsibility for any non-compliance with the above guidelines or improper use of the PAD. Kogan reserves the right to make modifications to any of the content here in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the device. In such case, the latter shall govern.