



KONGSBERG

MBR 179
Maritime Broadband Radio
Instruction Manual

G210-55/462371/5/C

xxxx 2024 © Kongsberg Discovery AS

DRAFT

Document information

- Product: MBR 179
- Hardware version: MK2
- Document: Instruction Manual
- Document part number: G210–55/462371

Copyright

The information contained in this document remains the sole property of Kongsberg Discovery AS. No part of this document may be copied or reproduced in any form or by any means, and the information contained within it is not to be communicated to a third party, without the prior written consent of Kongsberg Discovery AS.

Warning

The equipment to which this manual applies must only be used for the purpose for which it was designed. Improper use or maintenance may cause damage to the equipment and/or injury to personnel. You must be familiar with the contents of the appropriate manuals before attempting to operate or work on the equipment.

Kongsberg Discovery disclaims any responsibility for damage or injury caused by improper installation, use or maintenance of the equipment.

Disclaimer

Kongsberg Discovery AS endeavours to ensure that all information in this document is correct and fairly stated, but does not accept liability for any errors or omissions.

Support information

If you require maintenance or repair, contact Kongsberg Discovery's support organisation. You can contact us using the following address: support.seatex@kd.kongsberg.com. If you need information about our other products, visit <http://www.kongsberg.com/discovery>.

Table of contents

ABOUT THIS MANUAL.....	7
MBR 179.....	8
System description.....	8
System diagram.....	9
Scope of supply.....	10
Restrictions in guarantee.....	10
Radio frequency license.....	11
Exposure statement.....	14
Equipment identification.....	14
FCC compliance statement.....	14
Health and safety.....	15
Network security.....	15
Support information.....	16
OPERATION.....	17
Getting started.....	17
Turning on the Radio Unit.....	17
Enabling contact with the Radio Unit.....	18
Defining the IP address on the computer's network adapter.....	19
Operating procedures.....	21
Setting up the radio site for operation.....	21
Joining a wireless network.....	25
Editing an existing radio network.....	26
Adding or removing equipment.....	28
Enabling the embedded MBR link crypto.....	29
Checking the status of the MBR network.....	30
User preference procedures.....	31
Selecting colour palette for display.....	31
User interface.....	32
Operational principles.....	32
Display organisation.....	32
Display views.....	33
Functions and dialog boxes.....	38
Menu system.....	39
MBR Configuration Wizard.....	40
Configuration guide.....	40
Create site.....	41
Add radios to site.....	42

Configure site	43
Local Host List	45
Status	46
Edit network	47
Resource management.....	48
Join network	50
Crypto key configuration	50
System status	51
Network status.....	51
Individual radio site status.....	52
INSTALLATION	53
Preparations.....	53
Mechanical drawings.....	53
Necessary tools and equipment	54
Radio Unit location	54
Radio Unit power source	55
Installing the Radio Unit.....	55
Pin layout combined Ethernet and power cable.....	57
Setting to work summary	57
INSTALLATION WITH MBR POWER SUPPLY.....	58
About installation with MBR Power Supply	58
Power Supply Unit description	58
Preparing the installation	59
Rack requirements.....	59
Selecting the best location for the MBR Power Supply	59
Mounting the MBR Power Supply in a rack.....	60
MBR Power Supply specifications	61
MBR Power Supply maintenance.....	61
Cleaning the MBR Power Supply air inlet filter	62
Changing the fuse in the MBR Power Supply power inlet	62
Changing the fuse on the MBR Power Supply circuit board	63
DRAWINGS.....	65
About the drawings	65
Radio Unit dimensions.....	66
MBR Power Supply dimensions.....	67
TECHNICAL SPECIFICATIONS.....	69
Performance specifications	69
Interface specifications.....	69
Weights and outline dimensions	70

Power specifications..... 70

Frequency specifications..... 70

Environmental specifications 71

Standards and regulations 71

Manufacturer’s conformity declaration 72

MAINTENANCE 73

Checking the product version 73

Updating the system software..... 73

Cleaning the Radio Unit 74

Repairing the Radio Unit 74

EQUIPMENT HANDLING..... 75

Taking delivery 75

Unpacking and handling 75

Storage 76

Disposal 76

About this manual

Purpose of manual

The purpose of this manual is to provide the descriptions and procedures required to install, configure, operate and maintain the MBR 179.

Target audience

This publication is intended for all users of the MBR 179 system. This includes project engineering personnel, installation personnel, IT administrators and operators.

License information

The MBR 179 is not subject to product licensing. The product is a radio transmitting device. A frequency license is required for operation.

Maintenance purposes

This publication is also intended as reference material for the maintenance personnel. Keep this publication for later use.

Software version

The **Operation** chapter in this document is for Maritime Broadband Radios with software version 2.18 or higher.

This document describes the web interface configuration. For use of API (Application Programming Interface), refer to the API documentation.

MBR 179

Topics

[System description, page 8](#)

[System diagram, page 9](#)

[Scope of supply, page 10](#)

[Restrictions in guarantee, page 10](#)

[Radio frequency license, page 11](#)

[Exposure statement, page 14](#)

[Equipment identification, page 14](#)

[FCC compliance statement, page 14](#)

[Health and safety, page 15](#)

[Network security, page 15](#)

[Support information, page 16](#)

System description

The MBR 179 is a Maritime Broadband Radio (MBR). It is a part of the Maritime Broadband Radio (MBR) product family of real-time steerable phased array digital radio units. It is developed for use in maritime applications where reliable communication and data transfer are crucial for efficient and safe operations. The MBR 179 is a radio type suitable for all types of vessels requiring long-range communication.

The MBR 179 is an Ethernet based radio that requires no extra infrastructure to operate. It operates on OSI layer 2 as a network bridge transporting IP packets over the air interface connecting computers, sensors and systems together. The radio has a TDMA access protocol with user configurable time slot allocation. The MBR 179 supports Internet Protocol version 4.


A *radio network* is a network of several MBR Units communicating together. The radio network operates as a wireless radio mobile ad hoc network (MANET) which can be

used as a stand-alone network or as an extension of your existing radio network, or fixed networks. The radio network is defined by network name, network id and optional encryption key. The MBR 179 can be used together with all other MBR Units in the product family.

A *radio site* is one or several radio units connected together by a local Ethernet connection at the same location. The benefits of a radio site with several radio units is an increased coverage area or redundancy with radios covering the same area. Data links to remote MBR units will seamlessly be handed over from one Radio Unit to another Radio Unit on the same radio site.

All antennas, radio transceivers and signal processing are contained in the radio unit. The interface to the radio unit is power and Ethernet. The MBR 179 can be powered from a generic DC power source or from an MBR Power Supply unit with AC input. The MBR Power Supply can be purchased from Kongsberg Discovery AS. The MBR 179 is set up via a web interface which is available on each radio unit. It can also be set up from an API (application programming interface). Contact Kongsberg Discovery AS for information on API.

System diagram

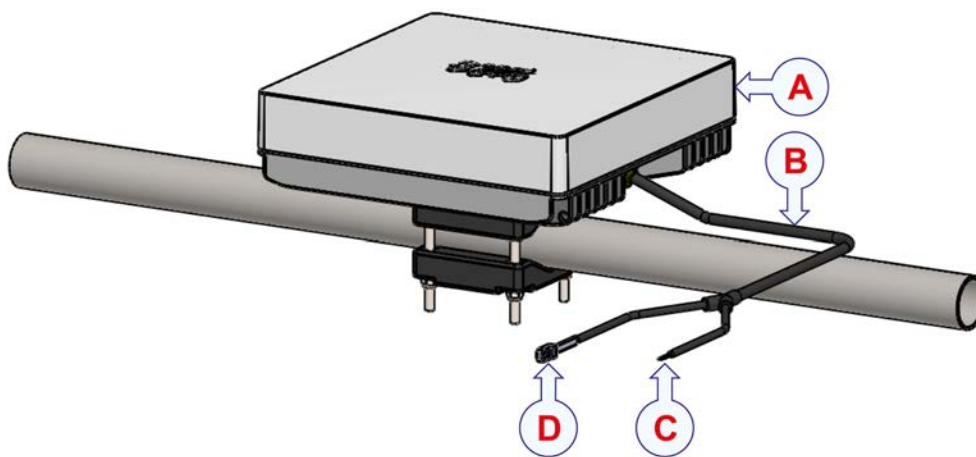

- A** *Radio Unit*
- B** *Combined Ethernet and power cable*
- C** *Connection to power source on vessel/ MBR Power Supply*
- D** *Ethernet connection to user equipment*

Scope of supply

The basic items are included in the delivery. Additional optional items can be purchased from Kongsberg Discovery AS.

Basic items

- 1 ea Radio Unit
- 1 ea Combined Ethernet and power cable, 10 m
- 1 ea End-user documentation

Additional required items

The following additional items are required for installation and/or operation. They can be ordered from Kongsberg Discovery AS, or another Kongsberg office, or purchased locally.

- Power supply
 - Computer
- For configuration purposes.

Additional optional items

The following additional optional items can be used together with the MBR 179.

- MBR Power Supply
- Junction Box
- Power cable
- Ethernet cable
- Combined Ethernet and power cable, 30 m

Restrictions in guarantee

Changes or modifications to the product not explicitly approved by Kongsberg Discovery AS will void the guarantee.

The liability of Kongsberg Discovery AS is limited to repair of this product only under the given terms and conditions stated in the sales documents. Consequential damages such as customer's loss of profit or damage to other systems traceable back to this product's malfunctions, are excluded.

The warranty does not cover malfunctions of the product resulting from the following conditions.

- Incorrect power connection.
- Incorrect installation of galvanic isolation from vessel structure.

Radio frequency license

This product contains a radio transmitting device. A frequency license for the use of radio frequencies is required for operation. Use in national waters will require a frequency license issued by the relevant national authorities. The owner and user of the equipment are responsible for obtaining such a license prior to switching the product ON.

This product is in compliance with the standard ETSI EN 303 276. This applies to the frequency channels 5862 and 5890 MHz.

This product is in compliance with FCC (Federal Communications Commission) Part 15.407 operating under the waiver DA 22-656. This applies to the frequency band 5735 to 5840 MHz.

The product shall only be used for maritime operations: between vessels, and between vessels and land. No land-to-land applications are permitted.

The product shall not be used for cruise ship passenger communications but may be used in connection with operational aspects of cruise ships.


This device may cause interference to Federal Government radar operations at Patrick Air Force Base, Vandenberg Air Force Base, and NASA's Wallops Island and Coquina facilities. The MBR Radio Unit has an automatic geo-fencing feature which will turn all transmissions from the radio off if the radio is located within the exclusion zones around these areas. The Radio Unit may not be used within the exclusion areas. This applies to both devices located on land and shipboard devices.

The exclusion zones are defined as follows - map content shown is from Google Earth:

Operation prohibited on Channels I, II and III (Patrick Air Force Base, Florida):


- SE corner: 27 47'14"N 80 03'32"W
- NE corner: 28 48'23"N 80 03'32"W
- NW corner: 28 48'23"N 80 54'15"W
- SW corner: 27 47'14"N 80 39'00"W

MBR 179 Instruction Manual

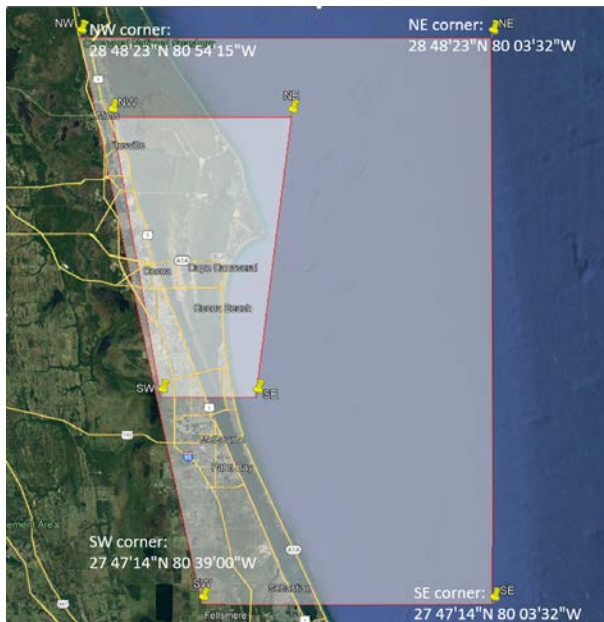

Operation prohibited on all channels (Patrick Air Force Base, Florida)

- SE corner: 28 09'37"N 80 32'25"W
- NE corner: 28 39'50"N 80 28'12"W
- NW corner: 28 39'50"N 80 50'20"W
- SW corner: 28 09'37"N 80 44'04"W

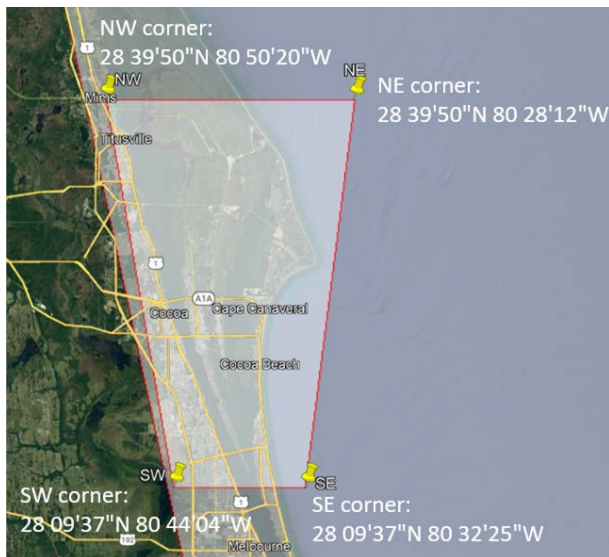

Operation prohibited on Channels I, II and IV within a 200 km radius of the following locations:

- Wallops Island, Virginia: 37 51'17"N, 75 27'48"W
- Coquina, North Carolina: 35 50'12"N, 75 34'14"W


Operation prohibited on Channel III within a 65 km radius of the following locations:

- Wallops Island, Virginia: 37°51'17"N, 75°27'48"W
- Coquina, North Carolina: 35°50'12"N, 75°34'14"W



Operation prohibited on all channels (Vandenberg Air Force Base, California):

- SE corner: 34°13'12"N 120°36'00"W
- NE corner: 35°00'00"N 120°36'00"W
- NW corner: 35°00'00"N 121°00'00"W
- SW corner: 34°13'12"N 121°00'00"W

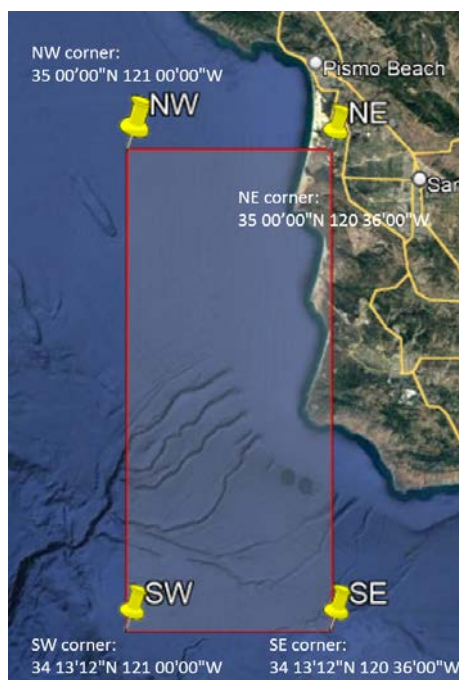

Exposure statement

To comply with FCC RF exposure limits for general population or uncontrolled exposure, the antenna(s) used for this transmitter must be installed on outdoor permanent structures in order to provide a separation distance at least 100 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

This product contains a radio transmitting device. According to the output power of the equipment, the minimum distance for human beings in a controlled environment is:

- **Maximum power/ETSI EN 303 276:** 1.5 m
- **FCC part 15.407:** 100 cm

Equipment identification

This product has the following identification for FCC (Federal Communications Commission).

- **FCC ID:** Q8IMBR179MK2

FCC compliance statement

This device complies with Part 15 of the FCC (Federal Communications Commission) Rules. Operation of the device is subject to the following conditions.

- 1 This device may not cause harmful interference.
- 2 This device must accept any interference received. Including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a marine and/or commercial environment. This equipment generates, uses and can radiate radio frequency energy. If not installed and used in accordance with the instructions, the equipment may cause harmful interference to radio communication. The equipment is not intended for operation in a residential area. Operation in such an area is likely to cause harmful interference. In which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by the party responsible for compliance, could void the user's authority to operate the equipment.

Health and safety

The equipment complies with IEC 61010-1/EN 61010-1 standards regarding product safety. The equipment is safe to operate under the following conditions:

- In an outdoor environment.
- In a wet environment.
- In altitudes below 2000 metres.
- In an environment with pollution degree 4.
- It has been installed by skilled personnel.

Operation or troubleshooting of this equipment will not imply any risk for high voltages, explosions or exposure to gas.

Caution

RF exposure: According to EN 50385 the safety distance for the MBR 179 is 1.5 metres.

Network security

If the MBR 179 product is connected to a local area network, data security is important.

Equipment manufactured by Kongsberg Discovery is often connected to a local area network (LAN). When you connect a computer to a local area network you will always expose the data on that computer. All the other computers connected to the same network may be able to access your data. Several threats are imminent:

- Remote computers can read your data.
- Remote computers can change your data.
- Remote computers can change the behavior of your computer, for example by installing unwanted software.

Usually, two parameters are used to define the threat level:

- 1 The likelihood that any remote computer will do any of the above.
- 2 The damage inflicted if a remote computer succeeds doing any of the above.

Kongsberg Discovery has no information about your complete system installation.

Products provided by Kongsberg Discovery are always regarded as stand-alone offline systems. They are regarded as stand-alone even though they may be connected to a local area network for sensor interfaces or data distribution.

Note

No network safety applications are installed on Kongsberg Discovery computers. The computer is not protected against viruses, malware or unauthorized access by external users.

Securing the MBR 179 system has no meaning unless you have established a policy that secures all the computers on the network. This policy must include physical access by trained and trusted users. The customer or end user of the MBR 179 system is responsible for defining and implementing a security policy and providing the relevant network security applications.

Note

Kongsberg Discovery will not accept any responsibility for errors or damages caused by unauthorized use of or access to the MBR 179 system.

Support information

If you need technical support for your product you must contact a Kongsberg Discovery office. A list of all our offices is available on our website.

- **Company name:** Kongsberg Discovery AS
- **Address:** Havnegata 9, N-7010 Trondheim, Norway
- **Telephone:** +47 33 03 41 00
- **Telephone, global 24h support:**
 - Europe, the Middle East and Africa: +47 33 03 24 07
 - Asia Pacific: +65 97 11 24 07
 - Americas: +15 04 303 5244
- **E-mail address:** support.seatex@kd.kongsberg.com
- **Website:** <http://www.kongsberg.com/discovery>

KM-Support App

Kongsberg Discovery support is also available in the KM-Support App. Our support application is available for free in the App Store and Google Play.

Operation

Topics

[Getting started, page 17](#)

[Operating procedures, page 21](#)

[User preference procedures, page 31](#)

[User interface, page 32](#)

[Functions and dialog boxes, page 38](#)

Getting started

Topics

[Turning on the Radio Unit, page 17](#)

[Enabling contact with the Radio Unit, page 18](#)

[Defining the IP address on the computer's network adapter, page 19](#)

Turning on the Radio Unit

The Radio Unit can either be powered directly from a power source on the vessel or from the MBR Power Supply unit. The MBR Power Supply can be purchased from Kongsberg Discovery AS.

Context

The software is pre-installed and the system will start automatically after it has been turned on.

Procedure

- 1 Make sure that the Ethernet cable is properly connected.
- 2 Apply power to the Radio Unit.
 - a Insert the power connector into the power source on the vessel.
 - b Press the ON/OFF switch located under the lid at the front of the MBR Power Supply.

Related topics

[Enabling contact with the Radio Unit, page 18](#)

[Defining the IP address on the computer's network adapter, page 19](#)

[Setting to work summary, page 57](#)

[Installation with MBR Power Supply, page 58](#)

Enabling contact with the Radio Unit

To be able to set up and communicate with the Radio Unit you must enable contact with the unit via a browser.

Prerequisites

In order to set up the Radio Unit you need these items.

- Computer with an Ethernet adapter.
- Up-to-date browser. For example Chrome or Firefox.

The IP address of the Radio Unit is found on a label at the rear of the unit.

You must define which IP Address and Subnet mask the Ethernet adapter in the computer shall use for this communication.

Context

You only need the computer for configuration or re-configuration purposes.


Note

*The **MBR Configuration Wizard** page only appears the first time you set up your site. After the configuration is completed, the web interface takes you directly to the **Main** view.*

Procedure

- 1 Set up the computer with:
 - **IP Address:** 10.19.127.10
 - **Subnet mask:** 255.255.0.0
- 2 Connect the computer to the Radio Unit via Ethernet.

- 3 Type the IP address of the Radio Unit in the browser address bar.
Observe that the **MBR Configuration Wizard** page appears.

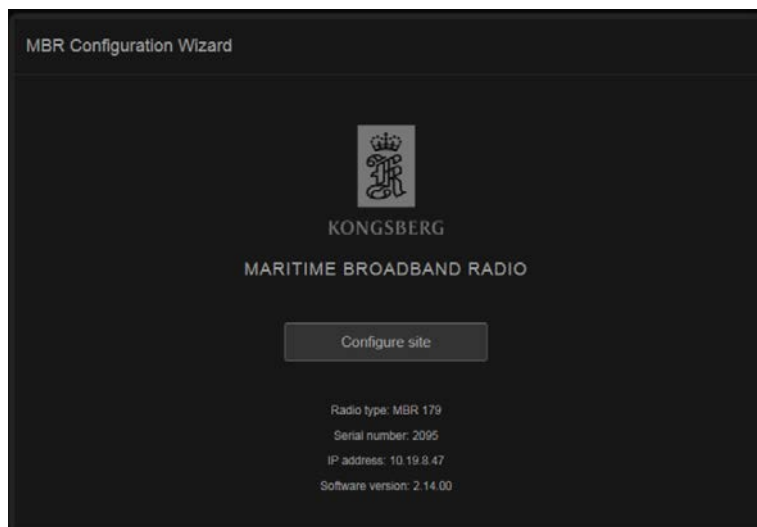

For previously configured systems the **Main** view appears.

Result

You are now connected to the web interface on your local radio.

Related topics

[Turning on the Radio Unit, page 17](#)

[Defining the IP address on the computer's network adapter, page 19](#)

[Setting up the radio site for operation, page 21](#)

[MBR Configuration Wizard, page 40](#)

[Setting to work summary, page 57](#)

Defining the IP address on the computer's network adapter

You must define which IP Address and Subnet mask the Ethernet adapter in the computer shall use for this communication. As long as you do not replace the computer or the network adapter, you only need to do this once.

Prerequisites

This procedure is made for the Microsoft® Windows® 7 and 10 operating systems. It is assumed that you are familiar with the Windows® operating systems, computer technology, and interface principles.

Procedure

- 1 Close all the programs that are running on the computer.

2 Open the **Network Connections** dialog box.

This procedure is made for the Microsoft® Windows® 10 operating system.

- a In the bottom-left corner of your desktop, select the Windows® search function.
- b In the search box, type "Network Connections", and open the **Network Connections** dialog box.
- c Right-click the network adapter you are going to use and select **Properties** on the shortcut menu.
- d On the list of connections, select **Internet Protocol 4 (TCP/IPv4)**, and then **Properties**.

This procedure is made for the Microsoft® Windows® 7 operating system.

- a In the bottom-left corner of your desktop, select the Windows® **Start** button.
- b On the right-hand side of the **Start** menu, select **Control Panel**.
- c Observe that the Control Panel opens.
- d Select **Network and Sharing Center**.
(If the Control Panel is shown with categories, select **View network status and tasks**.)
- e On the left-hand menu, select **Change adapter settings**.
- f Click once on your network adapter to select it, then right-click and select **Properties** on the shortcut menu.
- g On the list of connections, select **Internet Protocol 4 (TCP/IPv4)**, and then **Properties**.

3 Select **Use the following IP address**, and type the IP address and network mask.

- IP Address: **10.19.127.10**
- Subnet mask: **255.255.0.0**

4 Select **OK** to save the selected settings, and then close all the dialog boxes.

Related topics

[Turning on the Radio Unit, page 17](#)

[Enabling contact with the Radio Unit, page 18](#)

[Setting up the radio site for operation, page 21](#)

[Setting to work summary, page 57](#)

Operating procedures

Topics

[Setting up the radio site for operation, page 21](#)

[Joining a wireless network, page 25](#)

[Editing an existing radio network, page 26](#)

[Adding or removing equipment, page 28](#)

[Enabling the embedded MBR link crypto, page 29](#)

[Checking the status of the MBR network, page 30](#)

Setting up the radio site for operation

The setup is done using a wizard. The **MBR Configuration Wizard**. A *radio site* is one or several radio units connected together by a local Ethernet connection at the same location. A *radio network* is a wireless network of radio sites. You must set up the radio site before you can start the radio network configuration. All configuration of the MBR 179 Maritime Broadband Radio (MBR) is done through the web interface.

Prerequisites

The IP address for the Radio Unit is located on a label at the rear of the unit. You must have enabled contact with the Radio Unit.


The IP address and the MAC address for the third party equipment must be known.

Context

The MBR 179 Maritime Broadband Radio (MBR) uses static layer 2 bridging (OSI model - Open Systems Interconnection Basic Reference Model). It needs both the IP address and the MAC address of the equipment in order to establish an IP connection over the wireless network.

Procedure

- 1 On the **MBR Configuration Wizard** page, which appears after you have enabled contact with the Radio Unit, select **Configure site** to start the installation wizard.

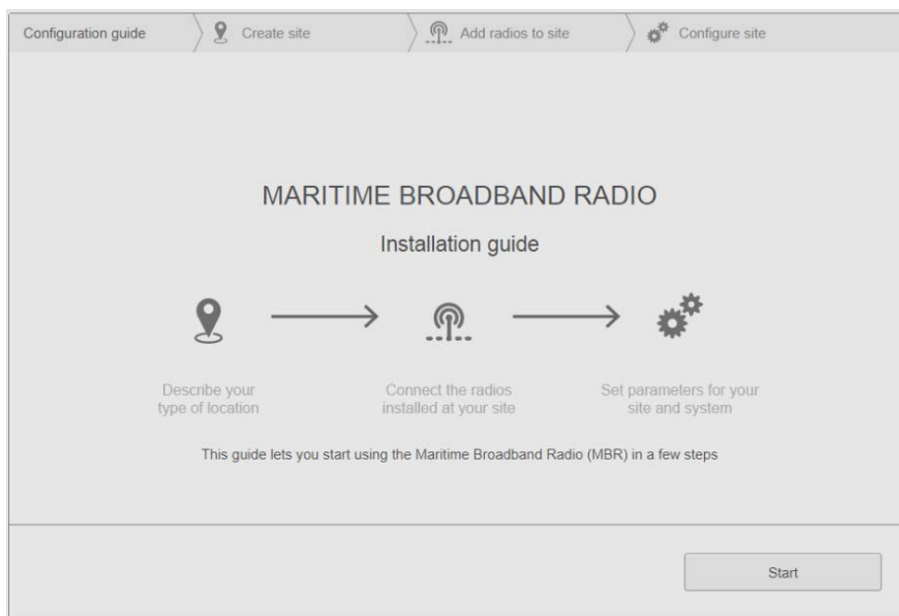

Note

*The default colour palette setting is with dark background. If your current light conditions require white background, select the white colour palette in the **Palette** group.*

- 2 Select **Start** on the **Configuration guide** page to start the step-by-step configuration of your radio site.

- 3 Type a suitable name for your radio site and select **Continue**.

Configuration guide

Create site

Add radios to site

Configure site

A radio site is one or several radio units connected together by Ethernet on one location.

Enter a name for your site (e.g. name of your vessel)

Name of site

MS Vessel

Back

Continue

- 4 Select the radios you want to add to the site. Type a description of the location of the Radio Unit. Select **Continue**.

Note

Radio units connected on the local Ethernet will appear automatically. They are by default selected.

Configuration guide

Create site

Add radios to site

Configure site

MS Vessel

Select the radios you would like to add to your site

Available radios

Description

MBR 189

Snr. 8888

Details

Port

MBR 179

Snr. 9999

Details

Mast

Back

Continue

- 5 Type the radio frequency. Select the data rate for the radio site from the **Rate** list.

The screenshot shows the 'Configure site' interface for 'MS Vessel'. It includes a breadcrumb trail: Configuration guide > Create site > Add radios to site > Configure site. The interface is divided into three main sections. On the left, there are input fields for 'Frequency [MHz]' (set to 5862) and 'Rate [Mbps]' (set to 8.5). The middle section, titled 'Radios', contains two entries: 'Port' (MBR 189 Snr. 8888) and 'Mast' (MBR 179 Snr. 9999), each with a 'Details' button. On the right, there is a 'Local Host' table with columns for 'Local Host' and 'IP'. The table contains two entries: 'Radio 2095' with IP '10.19.8.47' and 'MBR Config PC' with IP '10.19.0.5'. Below the table is a 'Manage Local Host List' button. At the bottom of the interface are three buttons: 'Back', 'Cancel', and 'Finish'.

Local Host	IP
Radio 2095	10.19.8.47
MBR Config PC	10.19.0.5

- 6 Select **Manage Local Host List** to open the **Local Host List** dialog box. This is where you add the equipment to your radio site which shall be available in the wireless network.

The screenshot shows the 'Local Host List' dialog box. It has a title bar with a close button (X). The dialog contains four input fields: 'IP address' (with a dropdown arrow), 'Type' (with a dropdown menu showing 'Generic'), 'Description (Optional)' (with a dropdown arrow), and 'MAC address' (with a radio button and a 'MAC' label). Below these fields is an 'Add' button. The main area of the dialog is a table with columns for IP address, Type, Description, and a status column with a green dot and a close button (X). The table contains two entries: '10.19.8.47' (Radio) with description 'Radio 2095' and '10.19.0.5' (PC) with description 'MBR Config PC'. Below the table are two buttons: 'Check stored MAC' and 'Close'.

IP address	Type	Description (Optional)	MAC address
--	Generic	--	<input checked="" type="radio"/> MAC
Add			
10.19.8.47	Radio	Radio 2095	<input checked="" type="radio"/> X
10.19.0.5	PC	MBR Config PC	<input checked="" type="radio"/> X

- 7 Type the IP address of the equipment you want to connect. Select type of equipment from the **Type** list. Type a description of the equipment for identification purposes.

If the equipment is switched on, the MAC address appears automatically. If not, type the MAC address. Select **Add** to add the equipment.

Note

*You can add and/or change information later by selecting the equipment, making the changes and selecting **Update**. You can also delete equipment by selecting the **X** symbol at the end of the line.*

- 8 Continue for all the equipment you want to add. Select **OK** to save the selected setting and close the dialog box.
- 9 Select **Finish** to complete your radio site configuration.

Result

The **Main** view appears and you are now ready to start using the radios.

Related topics

[Enabling contact with the Radio Unit, page 18](#)

[Defining the IP address on the computer's network adapter, page 19](#)

[Configuration guide, page 40](#)

[Create site, page 41](#)

[Add radios to site, page 42](#)

[Configure site, page 43](#)

[Setting to work summary, page 57](#)

Joining a wireless network


You must join the wireless network which you want your site to be a part of. If another radio site has created a new wireless network, you might want to join this network.

Context

If you are out of range of the wireless network at the time you carry out this procedure, the radio will automatically detect the wireless network and establish a connection when you are within reach of this network.

Procedure

- 1 On the **System** menu —> **Network**, select **Join** to open the **Join network** dialog box.

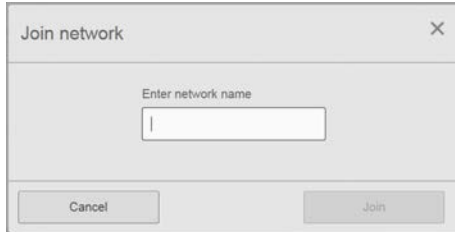

- 2 Type the name of the wireless network you want to join.

Note

The wireless network name is in upper case.

- 3 Select **Join** to join the wireless network.

Related topics

[Setting to work summary, page 57](#)

[Join network, page 50](#)

Editing an existing radio network

During operation you might want to administer and make changes to the wireless network. If a new site has been established or you want to change the distribution of resources.

Prerequisites

A wireless network must have been set up previously.

Context

The site ID is equal to the serial number of the Radio Unit. For multiple-panel sites, the site ID is equal to the lowest serial number.

Procedure

- 1 On the **System** menu —> **Network**, select **Edit** to open the **Edit network** dialog box.

Site	Resource distribution
MS Vessel (You)	50%
MS Boat	50%

- 2 If you want, type a new site name in the **Add by site ID** box. Select **Add** to add a new site to the existing network.
- 3 If you want to change the bandwidth resources, or the superframe length for the wireless network, select **Resource management** to enter the **Resource management** dialog box.
If you want to adjust the superframe, type the wanted **Superframe length**. Type the wanted **Resource distribution** in the Site list.

Note

For Superframe length it is recommended to use 50 – 100 ms. However, for special applications the superframe can be adjusted. This will affect the data throughput.

- 4 Select **OK** to store the bandwidth settings and return to **Edit network**.
- 5 Select **Update** to save the network settings.

Related topics

[Edit network, page 47](#)

[Resource management, page 48](#)

If you want to communicate with other types of equipment, for example sensors, you can add this equipment to your radio site. When third party equipment is no longer in use on your site, you can remove it.

- 1 On the **System** menu, select **Site** to enter the **Configure site** page.
- 2 Select **Manage Local Host List** to open the **Local Host List** dialog box.

Local Host List

IP address

Type

Description (Optional)

MAC address

--

Generic

--

MAC

Add

10.19.8.47	Radio	Radio 2095	<div><div></div></div>	<div><div></div></div>
10.19.0.5	PC	MBR Config PC	<div><div></div></div>	<div><div></div></div>

Check stored MAC

Close

- 3 Type the IP address of the equipment you want to connect. Select type of equipment from the **Type** list. Type a description of the equipment for identification purposes. If the third party equipment is switched on, the MAC address appears automatically. If not, type the MAC address.
Select **Add** to add the equipment.
- 4 To remove equipment, select the X symbol at the end of the line.
- 5 Continue for all the equipment you want to add or remove. Select **OK** to close the dialog box.
- 6 Back to the **Configure site** page. Select **OK** to save the chosen settings.


Local Host List, page 45

Enabling the embedded MBR link crypto

Here you can generate, upload or download the symmetrical crypto keys for the MBR embedded link crypto. The same crypto key must be entered on all radios in the same wireless network so the radios can communicate with each other.

Context

The crypto key length is 56 bits. The crypto key can be set to **infinite** duration or a time specific duration. The **Volatile** option specifies whether the key is stored in the MBR configuration indefinitely, or if the key is lost on the next power cycle, or until the key is re-configured.

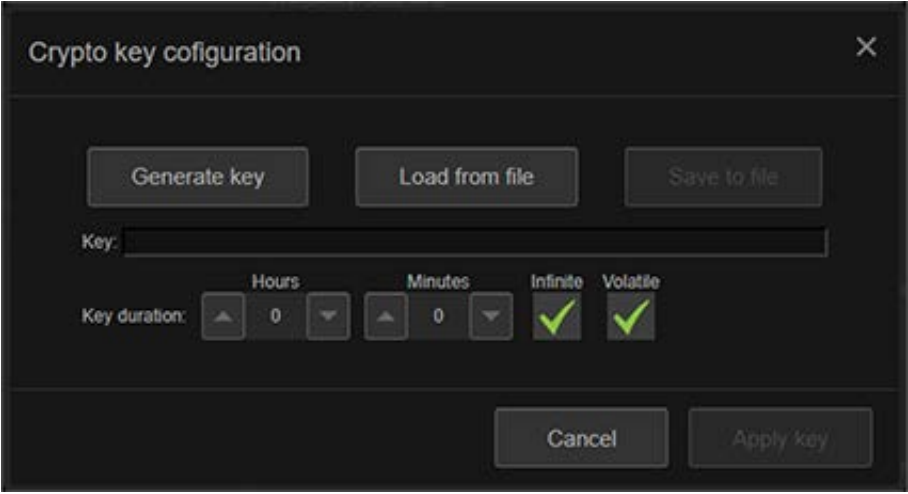

Procedure

- 1 On the **System** menu, select **Crypto**.
- 2 Select **Generate key** if you want to generate a new key. Select **Load from file** if you want to upload a crypto key from a text file.
- 3 Set a specific duration for the crypto key or select **Infinite** if you do not want an expiry date for the key.
- 4 Select **Volatile** if you want indefinite storage of the key.
- 5 Select **Apply key** to save the setting.

Related topics

[Crypto key configuration](#) , page 50

Checking the status of the MBR network

During operation you can check the status of the local radio site, the remote site(s) and the entire network of radio sites.

Prerequisites

The radio site(s) must have been set up for operation. If not, there is no status information to display.


Context

The status information is located to the left of the Main view. It is easily visible to the operator.

Procedure

- 1 Look at the system status information to view the status about your local site.

The status is **Active** when the radio site is set up for operation. The status is **Not configured** when the radio site is not set up for operation.

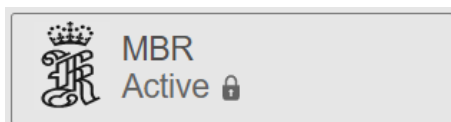


- 2 Look at the network information to view the status of the current radio network.

The current name and the frequency of the network are displayed.




- 3 Look at the **Site list** to view information about each site in the radio network.

The **Site list** holds information about your local site and remote radio sites.

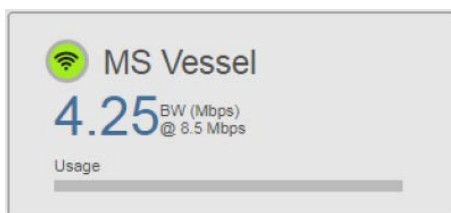

BW indicates the bandwidth resource allocated to the local radio site. The **Usage** bar indicates the instantaneous usage of the bandwidth resource.

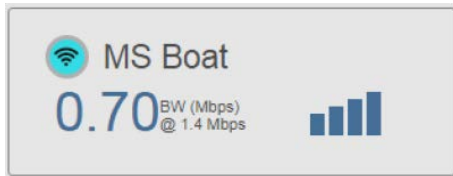

BW indicates the bandwidth resource allocated to the remote radio site. The signal strength bar indicates the signal strength of each local site.

Related topics

[System status, page 51](#)

[Network status, page 51](#)

[Individual radio site status, page 52](#)

[Display organisation, page 32](#)

User preference procedures

Topics

[Selecting colour palette for display, page 31](#)

Selecting colour palette for display

You can select a colour scheme for the display which suits your current light conditions.

Context

The **Palette** function provides colour schemes for the display presentation. Two palettes are available. Day black and Day white.



Procedure

- 1 Select **Palette** on the **System** menu.
- 2 Select the colour scheme you want to use.

User interface

Topics

[Operational principles, page 32](#)

[Display organisation, page 32](#)

[Display views, page 33](#)

Operational principles

The MBR 179 has a graphical configuration and user interface. Use a mouse and keyboard to navigate, select and operate the system.


The MBR 179 is operated and configured from the **System** menu.

Related topics

[Menu system, page 39](#)

Display organisation

The display is made up of five main parts. Information boxes with information about the status of the overall system, the networks and the radio sites to the left. A **System menu**, from which you operate and configure the system, at the top. Below the **System menu** various views will appear, depending on which of the information boxes to the left are selected. These views contain more detailed information about the overall system, the networks and the local radio sites.

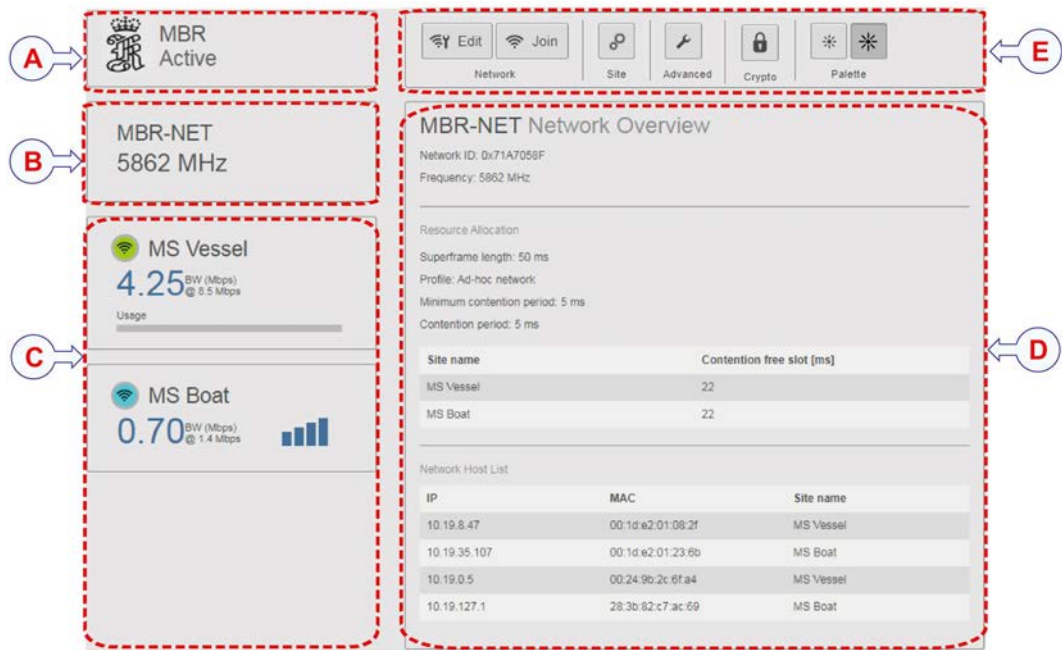

- A** System status: It shows the overall radio system status.
- B** Network information: It shows the name and frequency of the current network.
- C** Site list: A list of radio sites in the current network.
- D** Status information views: Three views may appear here, depending on which box is selected to the left. System Overview, Network Overview or Local Site information.
- E** System menu: It provides various system settings and operational functions.

Related topics
[Checking the status of the MBR network, page 30](#)

Display views


- Topics**
- [System Overview view, page 34](#)
 - [Network Overview view, page 35](#)
 - [Local Site view, page 36](#)

System Overview view

The *System Overview* view shows all sites in the wireless network. It also shows the radio serial number, signal margin, distance and data age for every site.

How to open

Select the **System status** box to the left in the **Main** view.

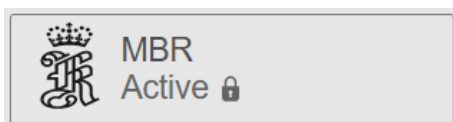

Example

System Overview				
Remote sites on network				
<input type="checkbox"/> Expand multipanel sites				
Site name	Serial number	Signal margin [dB]	Distance [m]	Age [s]
MS Boat	9067	65.9	7.5	0.10

Details

Expand multipanel sites

This option applies to sites with more than one Radio Unit (panel). Select this option to show more information about the other Radio Units which belong to this multipanel site.

Site name

This is the name of the remote radio sites in the network.

Serial number

This is the serial number of the radios on each individual remote site.

Signal margin [dB]

This is the receiver signal margin for the remote radio site (s).

Distance [m]

This is the distance in metres to the remote radio site(s).

Age [s]

This is the age of the data which are shown for this site.

Network Overview view

The *Network Overview* view is useful to monitor details about the wireless network. It shows the network parameters and the Network Host List. The Network Host List is the combination of all the Local Host Lists in the wireless network.

How to open

Select the **Network status** box to the left in the **Main** view.



Example

MBR-NET Network Overview

Network ID: 0x71A7058F
Frequency: 5862 MHz

Resource Allocation

Superframe length: 50 ms
Profile: Ad-hoc network
Minimum contention period: 5 ms
Contention period: 5 ms

Site name	Contention free slot [ms]
MS Vessel	22
MS Boat	22

Network Host List

IP	MAC	Site name
10.19.8.47	00:1d:e2:01:08:2f	MS Vessel
10.19.35.107	00:1d:e2:01:23:6b	MS Boat
10.19.0.5	00:24:9b:2c:6f:a4	MS Vessel
10.19.127.1	28:3b:82:c7:ac:69	MS Boat

Details

Network ID

This is the hexadecimal value of the network name used for identifying that each radio is on the same logical network.

Frequency

This is the configured operating frequency of the network.

Superframe length

This is the length of the repeating superframe of bandwidth allocation in milliseconds.

Profile

This is the current network profile.

Minimum contention period

This is the minimum contention period in the superframe. It shows the percentage of the bandwidth which is an open resource. Open resource is a contention-based multiple access protocol which allows radio sites to communicate without having a fixed allocated time slot.

Contention period

It shows the contention period in milliseconds. Contention period is also called Open period, and is a contention-based multiple access protocol which allows radio sites to communicate without having a fixed allocated time slot.

Site name

This is the name of the radio sites in the wireless network.

Contention free slot [ms]

This is the reserved transmission time for a radio site.

IP

This is the IP (internet protocol) address of the equipment in the Network Host List.

MAC


This is the MAC (media access control) address of the equipment in the Network Host List.

Local Site view

The *Local Site* view is useful to monitor information about the local radio site. It shows local site setup parameters and information about sent and received datagrams.

How to open

Select the **Local site** box to the left in the **Main** view.

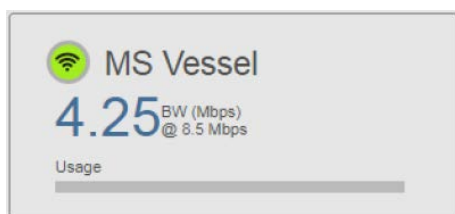

Example

MS Vessel Local Site

Radios on site: 9194

Data rate [Mbps]	Contention free slot length [ms]	Crypto status	Relay
8.5	47	Bypass	Off

Transmit Status

Transmit utilisation [%]	Transmit [kbps]	Sent IP frames	Sent wireless headers	Transmit busy
0	0	1080	1080	0

Frames Dropped

No link	Link busy	MAC busy
0	0	0

Received Status

Received headers	Received datagrams	Checksum errors
0	0	0

Details

Data rate [Mbps]

This is the configured data rate.

Contention free slot length [ms]

This is the configured reserved transmission time for the local site.

Crypto status

This is the status of the link crypto functionality.

Relay

This shows the status of the relay functionality for this site, if the relay functionality has been enabled.

Transmit utilisation [%]

This is the current transmission utilisation percentage of the allocated resource (contention free slot).

Transmit [kbps]

This is the current transmission in kbps.

Sent IP frames

This is the number of sent IP frames from this site.

Sent wireless headers

This is the number of wireless frames sent from this site (IP frames and management data).

Transmit busy

This shows the number of datagrams currently in queue for transmission.

No link

This shows the frames which have not been sent due to no link.

Link busy

This shows the frames which have not been sent due to a full transmission queue.

MAC busy

This shows the frames which have not been sent due to a busy MAC (media access control) controller.

Received headers

This is the counter for received wireless headers.

Received datagrams

This is the counter for received decoded datagrams.

Checksum errors

This is the counter for Checksum errors.

Functions and dialog boxes

Topics

[Menu system, page 39](#)

[MBR Configuration Wizard, page 40](#)

[Configuration guide, page 40](#)

[Create site, page 41](#)

[Add radios to site, page 42](#)

[Configure site, page 43](#)

[Local Host List, page 45](#)

[Status, page 46](#)

[Edit network, page 47](#)

[Resource management, page 48](#)

[Join network, page 50](#)

[Crypto key configuration , page 50](#)

 
[System status, page 51](#)

[Network status, page 51](#)

[Individual radio site status, page 52](#)

Menu system

The **System** menu is always visible at the top of the display. The menu provides various system settings and operational functions.



The **System** menu provides access to five groups of functions.

Network

Network allows you to join an existing network or edit an existing network.

Site

Site allows you to configure the radio site. Select **Site** to return to the configuration of your radio site. Here you can update the frequency, the data rate the third party equipment for the local radio site. You can also see the radio details for the radios on the local site.

Advanced

Advanced contains a web page with a set of advanced functions, tuning and diagnostics. These settings are for experienced users only. They are not intended for use under normal conditions. Therefore, they are not described in this document.

Crypto

Crypto opens the **Crypto key configuration**. Here you can generate, upload or download the symmetrical crypto keys for the MBR embedded link crypto.

Palette

Palette provides you with colour schemes for the display presentation. Select the colour scheme which suits your light conditions.

Related topics


[Operational principles, page 32](#)

MBR Configuration Wizard

The **MBR Configuration Wizard** page is the start page of your radio unit configuration. It only appears when the radio site is not configured. It is either the first time the radio is started, or after configuration is reset.

How to open

The **MBR Configuration Wizard** page appears when you have enabled contact with the radio unit via the web interface.

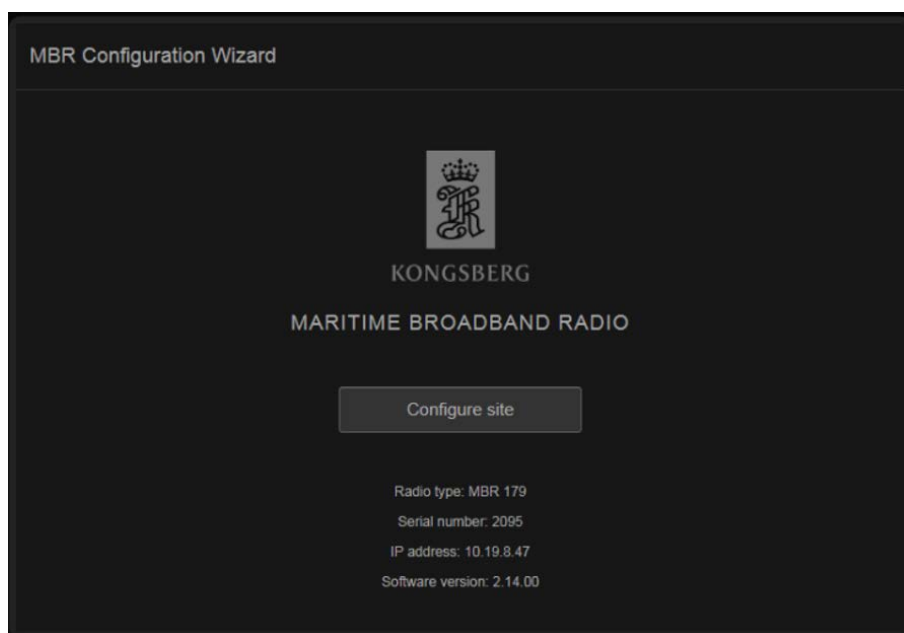

Details

Configure site

Select the **Configure site** button to open the installation wizard. The wizard takes you through the step-to-step configuration of your radio site.

Related topics


[Enabling contact with the Radio Unit, page 18](#)

Configuration guide

An installation wizard takes you through the setup of the radio site. The **Configuration guide** page is the first page in the step-to-step configuration of your radio site.

How to open

Select the **Configure site** button on the **MBR Configuration Wizard** page to open the installation wizard.

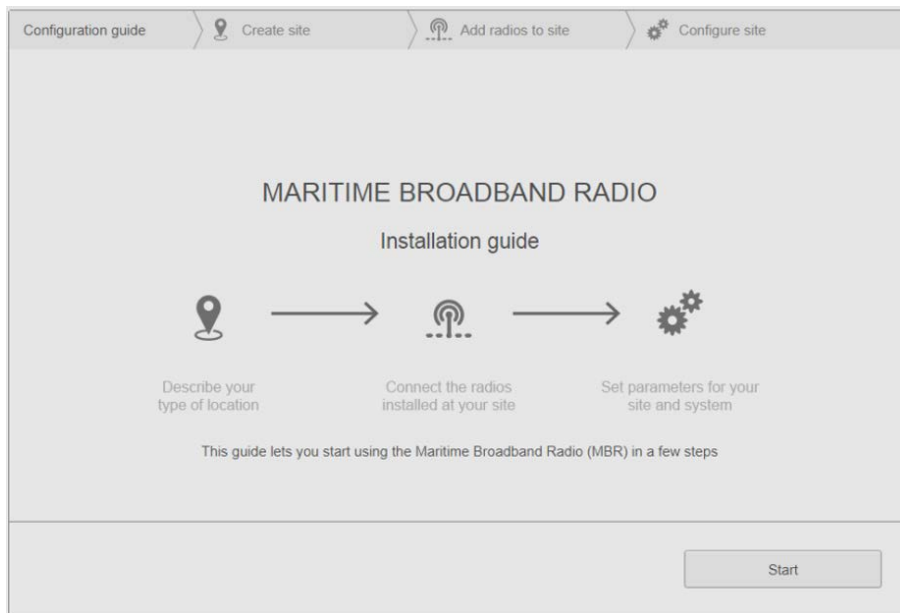

Details

Start

Select the **Start** button to start the step-to-step configuration of your radio site.

Related topics

[Setting up the radio site for operation, page 21](#)

Create site

Here you can type the name of your radio site.

How to open

This page is step 2 in the step-to-step configuration of your radio site.

The screenshot shows a web-based configuration interface. At the top, there is a navigation bar with four steps: 'Configuration guide', 'Create site', 'Add radios to site' (which is the active step, indicated by a radio icon), and 'Configure site' (indicated by a gear icon). Below the navigation bar, the main content area has a light gray background. It contains the following text: 'A radio site is one or several radio units connected together by Ethernet on one location.' followed by 'Enter a name for your site (e.g. name of your vessel)'. In the center, there is a text input field with the label 'Name of site' above it. The input field contains the text 'MS Vessel'. At the bottom of the form, there are two buttons: 'Back' on the left and 'Continue' on the right.

Details

Name of site

Type a suitable name for your radio site. This name will be displayed in the **Site list** and in the **Network** view.

Related topics

[Setting up the radio site for operation, page 21](#)

Add radios to site

Here you can add radios to your radio site.

How to open

This page is step 3 in the step-to-step configuration of your radio site.

The screenshot shows a web-based configuration interface for a radio site. At the top, there is a progress bar with four steps: 'Configuration guide', 'Create site', 'Add radios to site' (the current step), and 'Configure site'. Below the progress bar, the site name 'MS Vessel' is displayed. The main instruction is 'Select the radios you would like to add to your site'. There are two columns: 'Available radios' and 'Description'. Under 'Available radios', there are two entries: 'MBR 189 Snr. 8888' and 'MBR 179 Snr. 9999'. Each entry has a green checkmark icon and a 'Details' button. Under 'Description', there are two text input fields: 'Port' and 'Mast'. At the bottom of the form, there are 'Back' and 'Continue' buttons.

Details

Available radios

This is a list of available radios. Radio units connected on the local Ethernet will appear automatically. They are by default selected.

Details

Select the **Details** button to open the radio **Status** box. This dialog box shows the serial number, product version, configured values and diagnostics for the Radio Unit.

Name/description

Here you can type a description of the location of the Radio Unit.

Related topics

[Setting up the radio site for operation, page 21](#)


[Status, page 46](#)

Configure site

Here you can set the frequency, the data rate and select third party equipment for the local radio site. You can also see the radio details for the radios on the local radio site. This is also where you make changes to the radio site setup.

How to open

This is the last page in the step-to-step configuration of your radio site.

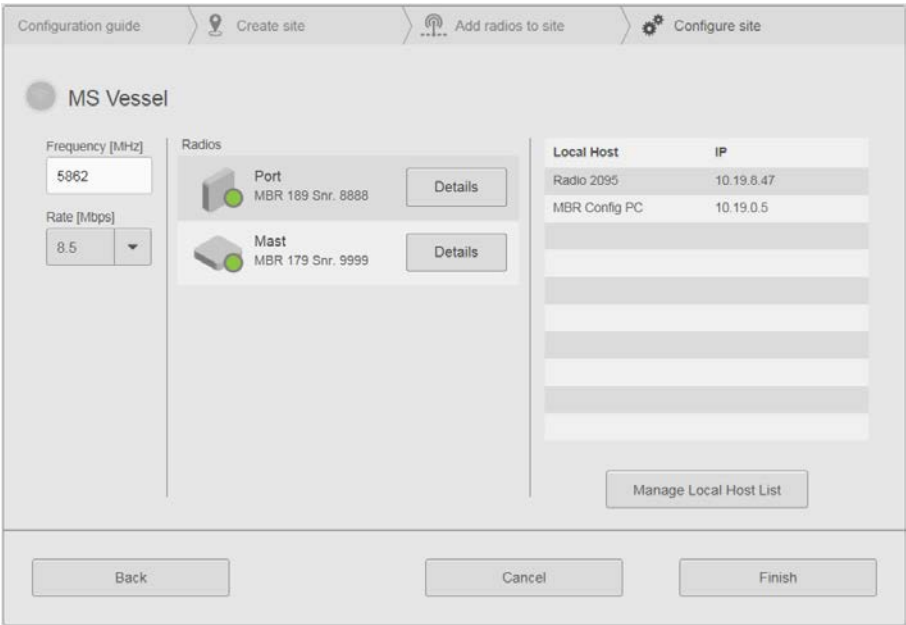

Details

Frequency

This is the operating frequency of the radio site.

Rate

This is the operating data rate of the radio site.

Radios

This is a list of radios which are added to the radio site.

Details

Select the **Details** button to open the radio **Status** box. This dialog box shows the serial number, product version, configured values and diagnostics for the Radio Unit.

Local Host & IP

The **Local Host List** shows the current host name(s) and associated IP addresses in the Local Host List.

Manage Local Host List

This button opens the **Local Host List** dialog box. Here you can manage equipment which is connected to the radio site.

Related topics

- [Setting up the radio site for operation, page 21](#)
- [Local Host List, page 45](#)
- [Status, page 46](#)

Local Host List

In the **Local Host List** dialog box you can manage equipment connected to your radio site. It contains a list of equipment where the radio site provides IP connectivity in the MBR network.

How to open

This dialog box is opened from the **Configure site** page.

IP address	Type	Description (Optional)	MAC address
--	Generic	--	<input type="radio"/> MAC
<div>Add</div>			
10.19.8.47	Radio	Radio 2095	<input checked="" type="radio"/>
10.19.0.5	PC	MBR Config PC	<input checked="" type="radio"/>

Details

IP Address

This is the IP address of the equipment you want to add to your radio site.

Type

This is a drop-down list of various metadata information about the equipment which can be useful to add to your radio site. For example computers and motion sensors.

Description

Here you can type a name which describes the equipment you want to add to your radio site. When you type in this box, the **Add** button becomes active.

MAC address

This is the MAC (media access control) address of the equipment you want to add to your radio site. The circle becomes green when a MAC address is found

automatically for the entered IP address. Select the **MAC** button to change or view the MAC address.

Check store MAC

Select this button if you want to recheck the MAC address for every equipment added to the list in order to verify current status on the local network.

Related topics

[Adding or removing equipment, page 28](#)


[Configure site, page 43](#)

Status

The radio **Status** box shows the serial number, product version, configured values and diagnostics for the Radio Unit.

How to open

This box is opened by selecting the **Details** button in the **Add radio to site** page or the **Configure site** page in the step-to-step configuration.

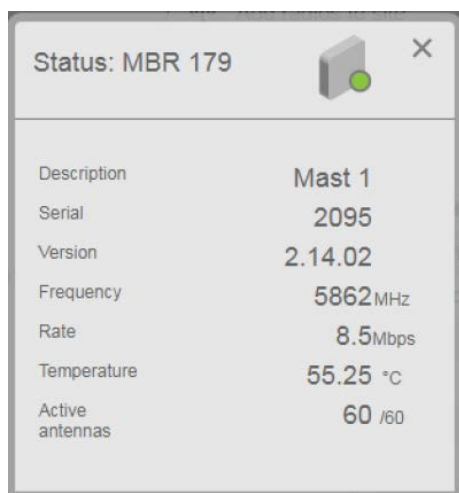

Details

Description

This is the description of the location of the current Radio Unit.

Serial

This is the serial number of the Radio Unit.

Version

This is the software version of the Radio Unit.

Frequency

This is the operating frequency of the Radio Unit.

Rate

This is the configured data rate for the Radio Unit.

Temperature

This is the internal temperature of the Radio Unit.

Active antennas

This is the number of active antenna elements.

Related topics

[Add radios to site, page 42](#)

[Configure site, page 43](#)

[Checking the product version, page 73](#)

Edit network

Edit network allows you to edit the wireless network.

How to open

This dialog box is opened from the **System** menu.

Site	Resource distribution
MS Vessel (You)	50%
MS Boat	50%

Details

Network

This is the name of the current wireless network.

Open resource

It shows the percentage of the bandwidth which is an open resource. Open resource is a contention-based multiple access protocol which allows radio sites to communicate without having a fixed allocated time slot.

Add by site ID

You can add a radio site to the site list of the network by typing the site ID for the remote site.

Site list and resource distribution

They show all sites in the current network with the same network name and the resource distribution between the radio sites.

Resource management

This button opens the **Resource management** dialog box. This is where you can change the resource distribution between the radio sites.

Related topics

[Editing an existing radio network, page 26](#)

[Resource management, page 48](#)

Resource management

Resource management allows you to change the resource distribution between the radio sites in the radio network.

How to open

This dialog box is opened from the **Edit network** dialog box.

Resource management

Superframe length [ms]

50

Open resource [%]

0

Site	Resource distribution [%]	Rate [Mbps]	Bandwidth [Mbps]
MS Vessel (You)	<div><div></div>50<div></div></div>	8.5	4.25
MS Boat	<div><div></div>50<div></div></div>	1.4	0.70

Cancel

OK

Details

Superframe length

This is the length of the repeating superframe of bandwidth allocation in milliseconds.

Open resource

It shows the percentage of the bandwidth which is an open resource. Open resource is a contention-based multiple access protocol which allows radio sites to communicate without having a fixed allocated time slot.

Site list and resource distribution

They show all sites in the current network with the same network name and the resource distribution between the radio sites.

Rate

This is the operating data rate of the radio site.

Bandwidth

It shows the bandwidth of the radio site for the selected resource distribution and the data rate.

Related topics


- [Editing an existing radio network, page 26](#)
- [Edit network, page 47](#)

Join network

The **Join network** dialog box allows you to join an existing MBR network (Maritime Broadband Radio) by typing the network name.

How to open

This dialog box is opened from the **System** menu.

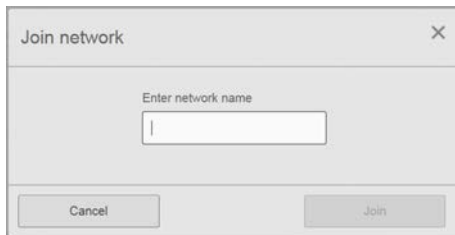

Details

Enter network name

This is the name of the wireless network you want to join. The wireless network name is in upper case.

Related topics


[Joining a wireless network, page 25](#)

Crypto key configuration

The MBR link crypto encrypts the wireless link with the use of 56-bit symmetrical keys. The same crypto key must be entered on all radios in the same wireless network so the radios can communicate with each other.

How to open

Select the **Crypto** button on the **System** menu to open the dialog box.

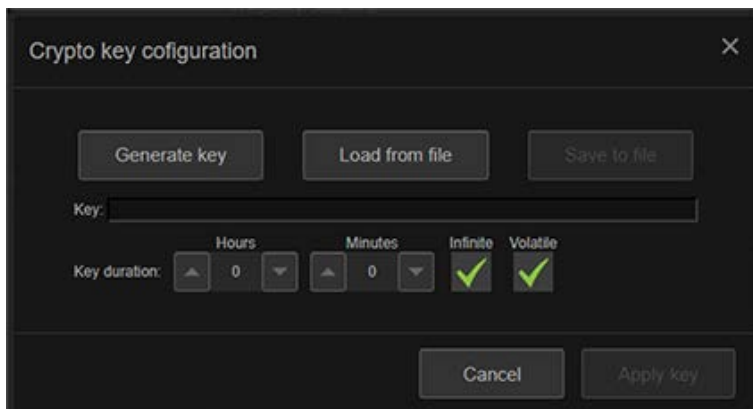

Details

Generate key

Select this button to generate a new crypto key.

Load from file

Select this button if you want to upload a crypto key from a text file.

Key

Here you can type the crypto key manually.

Save to file

Select this option if you want to save a crypto key to a text file.

Key duration

Here you can set a specific duration for the crypto key.

Infinite, Volatile

 
If you select **Infinite**, the key has no expiry date. If you select **Volatile**, the key is not active after the next power cycle.

Related topics

[Enabling the embedded MBR link crypto, page 29](#)

System status

The **System status** shows the status for the local radio site. The status is **Active** when the radio site is configured. The status is **Not configured** when the radio site is not configured.



The **System status** is located to the left in the **Main** view.


The padlock symbol indicates that a crypto key has been enabled.

Related topics

[Checking the status of the MBR network, page 30](#)

Network status

The **Network status** shows the current network name and the frequency of the network. The Network status is located to the left in the **Main** view.

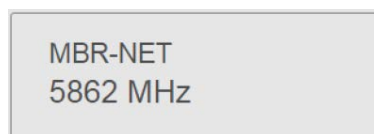

Related topics

[Checking the status of the MBR network, page 30](#)


Individual radio site status

The **Site list** contains information about each radio site in the network. Both for local and remote radio sites.

The **Site list** is located to the left in the **Main** view.


Local radio site

The site name for the local radio site is displayed.
BW indicates the bandwidth resource allocated to the local site. The **Usage** bar indicates the usage of the bandwidth resource.

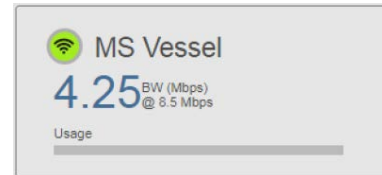

Remote radio site

The site name for the remote radio site(s) is displayed.
BW indicates the bandwidth resource allocated to the remote site. The signal strength bar indicates the signal strength of each local site.

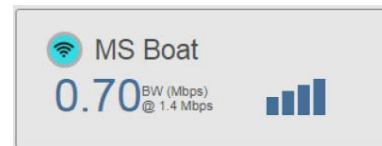

Related topics

[Checking the status of the MBR network, page 30](#)

Installation

Topics

[Preparations, page 53](#)

[Radio Unit power source, page 55](#)

[Installing the Radio Unit, page 55](#)

[Pin layout combined Ethernet and power cable, page 57](#)

[Setting to work summary, page 57](#)

Preparations

Topics

[Mechanical drawings, page 53](#)

[Necessary tools and equipment, page 54](#)

[Radio Unit location, page 54](#)

Mechanical drawings

Outline dimension drawings are included in this manual.

Unless otherwise specified, all measurements are in millimetres. The drawings are not to scale.

Related topics

[Radio Unit dimensions, page 66](#)

[MBR Power Supply dimensions, page 67](#)

Necessary tools and equipment

We assume that you are equipped with a standard set of tools. This tool set must comprise the normal tools for electronic and electromechanical tasks. This includes different screwdriver types, pliers, spanners, a cable stripper, a soldering iron, etc. Each tool must be provided in various sizes. We recommend that all tools are demagnetized to protect your equipment.

Unless otherwise stated, all mounting hardware (such as bolts, nuts, washers, screws etc.) referred to in this document is to be supplied by the customer or the shipyard.

An external computer is required for configuration of the Radio Unit through a web interface. You also need a computer if you want to change the configuration later.

Radio Unit location

Correct location of the Radio Unit is important for the system performance. Consider these factors when installing the unit.

- The Radio Unit shall cover a sector of 360 degrees horizontally. This is the operating area of the Radio Unit.
- The Radio Unit shall not be obstructed by any objects in a sector of 360 degrees horizontally. This is the no-object area. Obstructions in the no-object area will lower the signal margin in the obstructed sector.
- Place the Radio Unit in a location where the operating area is not obstructed. No metallic or non-metallic objects, such as glass, plastic or wood, must be present in the no-object area.
- Place the Radio Unit as high as possible above sea level. A suitable location can be in the top of a mast.
- The Radio Unit produces heat. Place the unit in a location where there is no risk for personnel to get in contact with hot surfaces.

Caution

As the Radio unit can be hot, it is important that, after installation, it is placed in a location where there is no risk for personnel to accidentally come into contact with the unit.

- Use a stable power source with correct voltage.

Related topics

[Installing the Radio Unit, page 55](#)

Radio Unit power source

The Radio Unit connector serves as the power disconnecting device. The Radio Unit must be placed in such a way that it is easy to reach the connector on the power and Ethernet cable.

The Radio Unit can be connected to 24 or 48 V DC. Alternatively, the Radio Unit can be connected to the MBR Power Supply.

The selection of an AC or a DC power source is dependent on the available power output or user preferences. The Radio Unit is approved for both AC and DC input. Whether you use AC or DC input, does not affect the performance of the unit.

The power connection must have a circuit breaker. Recommended current rating for the circuit breaker is 15 A. The MBR Power Supply has a circuit breaker included.

Note

Make sure that all power cables from the Radio Unit to the power source are adequately rated according to the MBR specifications.

Caution

With reference to the IEC/EN 61010-1 safety standard, the required current from the Power Supply Unit to the Radio Unit exceeds the limits set for a Limited Energy Circuit. This requires the use of double insulated power cables. The included combined Ethernet and power cable meets these requirements.

Related topics

[Installation with MBR Power Supply, page 58](#)

Installing the Radio Unit


The Radio Unit is designed to be mounted on a rail or similar. The unit is omnidirectional. The unit must be mounted horizontally.

Context

The Radio Unit is delivered with a mounting kit. The mounting bracket kit will provide galvanic isolation from the vessel structure.

The Radio Unit is connected to external equipment with the Ethernet end of the combined Ethernet and power cable. This cable is attached to the Radio Unit by a connector.

The power supply to the Radio Unit is via this connector. Place the unit in such a way that the connector is accessible.

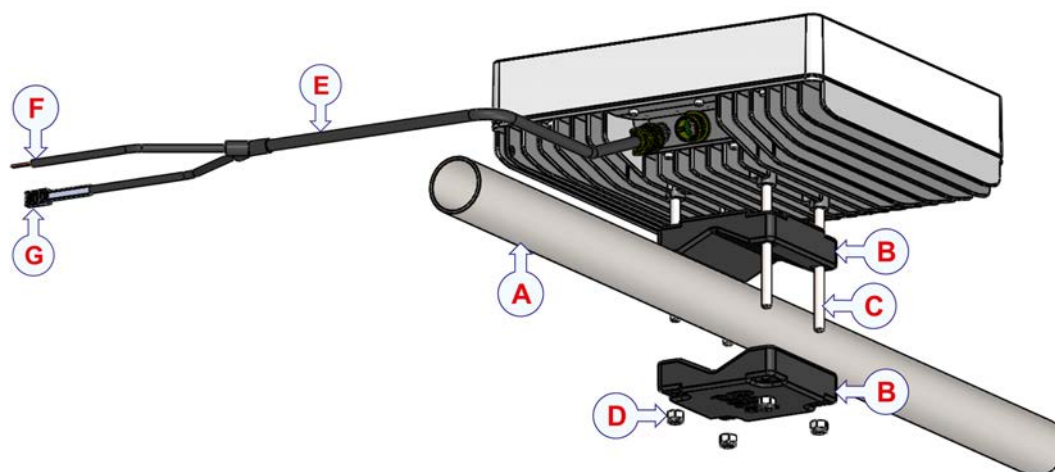

- A** Rail, 30 mm – 75 mm
- B** Mounting bracket
- C** Stud bolts
- D** Nuts and washers
- E** Combined Ethernet and power cable, 10 m/30 m
- F** Connection to power source on vessel
- G** Ethernet connection to user equipment

Procedure

- 1 Insert the stud bolts into the Radio Unit.
- 2 Fasten the stud bolts with an Allen key. 3 mm. Torque 0.1 Nm
- 3 Thread the upper part of the mounting bracket through the stud bolts.
- 4 Place the unit horizontally on the rail.
- 5 Thread the lower part of the mounting bracket through the stud bolts.
- 6 Fasten the mounting bracket with washers and nuts.
- 7 Connect the Combined Ethernet and power cable to the connector on the Radio Unit.
- 8 Run the combined power and Ethernet cable according to the mast structure to the user equipment. Secure the cable with cable ties.
- 9 Connect the Ethernet end of the cable to the user equipment.
- 10 Connect the power end of the cable to a power source on the vessel.

Related topics

- [Radio Unit dimensions, page 66](#)
- [Installation with MBR Power Supply, page 58](#)
- [Radio Unit location, page 54](#)

Pin layout combined Ethernet and power cable

This is the pin layout for the combined Ethernet and power cable from the Radio Unit.

Connector pin	Cable colours	Signal	RJ-45 pin (T-568B)
1	Red	DC+	NC
2	Blue	DC–	NC
Chassis	Green/Yellow	GND	NC
C	Orange/White	ETH Orange/White	1
B	Orange	ETH Orange	2
F	Green/White	ETH Green/White	3
E	Green	ETH Green	6

Setting to work summary

When all hardware units have been installed, and all the cables have been connected, the Radio Unit can be turned on and set to work.

Procedure

- 1 Turn on the Radio Unit.
- 2 Enable contact with the Radio Unit.
- 3 Configure the radio site.
- 4 Join a radio network.

Related topics

[Turning on the Radio Unit, page 17](#)

[Enabling contact with the Radio Unit, page 18](#)

[Defining the IP address on the computer's network adapter, page 19](#)

[Setting up the radio site for operation, page 21](#)

[Joining a wireless network, page 25](#)

Installation with MBR Power Supply

Topics

[About installation with MBR Power Supply, page 58](#)

[Power Supply Unit description, page 58](#)

[Preparing the installation, page 59](#)

[Mounting the MBR Power Supply in a rack, page 60](#)

[MBR Power Supply specifications, page 61](#)

[MBR Power Supply maintenance, page 61](#)

About installation with MBR Power Supply

The Radio Unit can be connected to 24 - 48 V DC. Alternatively, the Radio Unit can be connected to the MBR Power Supply. The MBR Power Supply has AC input.

The MBR Power Supply is not a part of the standard scope of supply. The MBR Power Supply can be purchased from Kongsberg Discovery AS. Kongsberg Discovery AS part no. MBR-E-PSU_00.

Power Supply Unit description

The MBR Power Supply provides power to the Maritime Broadband Radio units. It is designed to fit standard 19" racks. The power supply unit can provide power for two radio units.



The power ON/OFF switch is located behind the lid to the left at the front of the unit. This is also where you access the air inlet filter.

The rear panel of the unit contains power input and terminals for power output.



Preparing the installation

Topics

[Rack requirements, page 59](#)

[Selecting the best location for the MBR Power Supply, page 59](#)

Rack requirements

If the product is delivered without a rack, the power supply unit must be installed in a rack which is already in place on site.

Consider the following to determine whether your rack is suitable for the installation.

- The rack must be securely mounted to the floor.
- The rack must be a standard 19-inch rack.
- The minimum depth of the rack must be 600 mm.
- The rack should have air inlet on top and bottom or ventilation splits on the sides. The rack unit has ventilation of the sides. Forced ventilation may be required if the rack contains several electronic modules.
- The rack must be mounted in such a way that the minimum cable bends are not exceeded.
- The rack must be connected to a grounded outlet.

Selecting the best location for the MBR Power Supply

Consider these factors when installing the unit.

- The unit is designed for indoor installation. The best location is typically in the instrument room or on the bridge.
- The unit fits on rails in a 19-inch rack or console.

- The unit has an internal fan and requires free airflow from the rear and out to the sides. It is recommended that ventilation or air conditioning is provided in order to keep the ambient operating temperature at around 20 °C.
- Avoid placing the unit in locations with heavy vibrations, strong electronic fields (close to transformers) and/or excessive heat.
- Keep the area around the unit free from dust and static electricity.
- All connections to the unit are at the rear of the unit. Available space for cable connections and servicing must be provided.

Mounting the MBR Power Supply in a rack

The MBR Power Supply is designed for mounting in a 19" rack or cabinet. All cabling is from the rear of the unit.

Prerequisites

The rack must be provided by the customer.

Context

Note

The Power Supply Unit has a plastic film on top, and it may have one underneath, to protect the unit from transportation scratches. Remove this film before operation as the plastic film will reduce the heat transfer from the unit and thus cause an increase in the temperature inside the unit.

The Power Supply Unit has an air inlet filter under the lid at the front of the unit. The air inlet filter should be inspected monthly. Clean the filter if necessary.

Procedure

- 1 Find a suitable location for the Power Supply Unit. Typically on the bridge or in the instrument room.
- 2 Remove any plastic film from the unit.
- 3 Place the unit on rails or shelves in a 19-inch rack.
This is to make sure that the unit is supported at the rear. Minimum 10 cm free space is needed behind the unit for connection of cables.
- 4 Fasten the unit with four screws in the front.
- 5 Connect the Power Supply Unit to AC mains.
- 6 Connect the chassis of the Power Supply Unit to vessel ground.

Related topics

[MBR Power Supply dimensions, page 67](#)

MBR Power Supply specifications

Weights and outline dimensions

- **Outline dimensions:**
 - **Height:** 88.1 mm (2U)
 - **Width:** 485 mm (19")
 - **Depth:** 334.75 mm
- **Weight:** 6.4 kg

Power specifications

- **Input voltage:** 100 – 240 V AC
- **Output voltage:** 48 V DC
- **Output current:** 6.3 A (Maximum)

Environmental specifications

- **Enclosure material:** Aluminium
- **Operating temperature range:** –15 °C – 55 °C
- **Storage temperature range:** –20 °C – 70 °C
- **Operating humidity:** Maximum 95% non-condensing
- **Storage humidity:** < 55 %

MBR Power Supply maintenance

Topics

[Cleaning the MBR Power Supply air inlet filter, page 62](#)

[Changing the fuse in the MBR Power Supply power inlet, page 62](#)

[Changing the fuse on the MBR Power Supply circuit board, page 63](#)

Cleaning the MBR Power Supply air inlet filter


The air inlet filter is located behind the lid to the left at the front of the Power Supply Unit. The filter needs to be cleaned regularly. This is to avoid overheating of the unit.

Context

The period between each cleaning is dependent on the air quality where the unit is installed. We recommend that the filter is cleaned or inspected at least every six months. You can also replace the air inlet filter with a new one if it is too dirty. A new air inlet filter can be purchased from Kongsberg Discovery AS.

Procedure

- 1 Push to open the front lid.
- 2 Pull the handle to remove the filter.

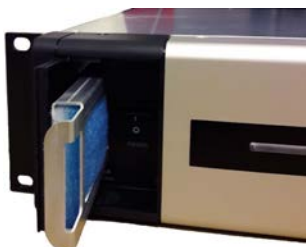

- 3 Clean the filter or replace it with a new one.
Clean the filter by washing it with a mild detergent. Or you can vacuum the filter.
- 4 Close the front lid.

Changing the fuse in the MBR Power Supply power inlet

If the unit does not receive power, it could be because of a blown fuse in the power inlet.

Prerequisites

A spare fuse is present in the power inlet or you have purchased a spare fuse.

Context

The power inlet has two 5 x 20 mm replaceable glass tube fuses. 6.3 A. The fuse type is Nano2. The fuse must be compliant to the safety standard for fuses.

If you have replaced the fuse it is recommended to buy a new spare fuse. Fuses can be purchased from Kongsberg Discovery AS or any third party supplier.



Procedure

- 1 Disconnect the power connector.
Open the fuse holder below the power inlet gently with a screw driver. Within the holder there are two fuses. One which is in use and one spare.
- 2 Remove the innermost fuse and replace it with the spare fuse.
- 3 Close the fuse holder.
- 4 Reconnect the power connector. Turn on the power switch.

Changing the fuse on the MBR Power Supply circuit board

The MBR Power Supply is provided with fuses to protect the circuit boards and modules.

Prerequisites

A spare fuse must be present on the circuit board or you have purchased a spare fuse.

Context

There are four fuses on the power outlet circuit board. Two 2 x 6.3 A fuses and two 2 x 500 mA fuses. The fuse type is Nano2. One spare fuse is supplied for the 2 x 6.3 A fuse.

If you have replaced the fuse it is recommended to buy a new spare fuse. The fuse must be compliant to the safety standard for fuses. Fuses can be purchased from Kongsberg Discovery AS or any third party supplier.


Note

The fuses shall only be replaced by fuses with the same type and rating.

Procedure

- 1 Remove the four front screws which hold the power supply unit to the rack.
- 2 Disconnect the connectors at the rear of the unit.
- 3 Pull the unit out of the rack from the front.
- 4 Unscrew the 10 screws at the top of the unit which hold the lid. Remove the lid.

- 5 Remove the blown fuse. Replace it with the spare fuse.

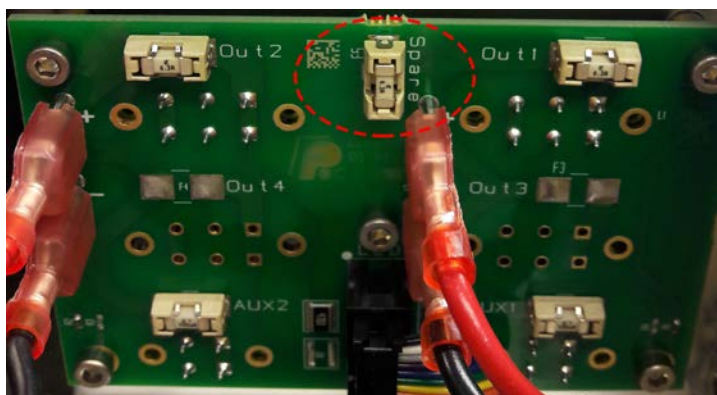

- 6 Replace and refasten the lid.
- 7 Reconnect the connectors. Refasten the unit to the rack.
- 8 Order a new spare fuse when you have used the spare one.

Drawings

Topics

[About the drawings, page 65](#)

[Radio Unit dimensions, page 66](#)

[MBR Power Supply dimensions, page 67](#)


About the drawings

These drawings are for information and planning purposes only.


Unless otherwise specified, all measurements are in millimetres. The drawings are not to scale.

Information may be omitted. Observe the source drawings for additional details.

Radio Unit dimensions

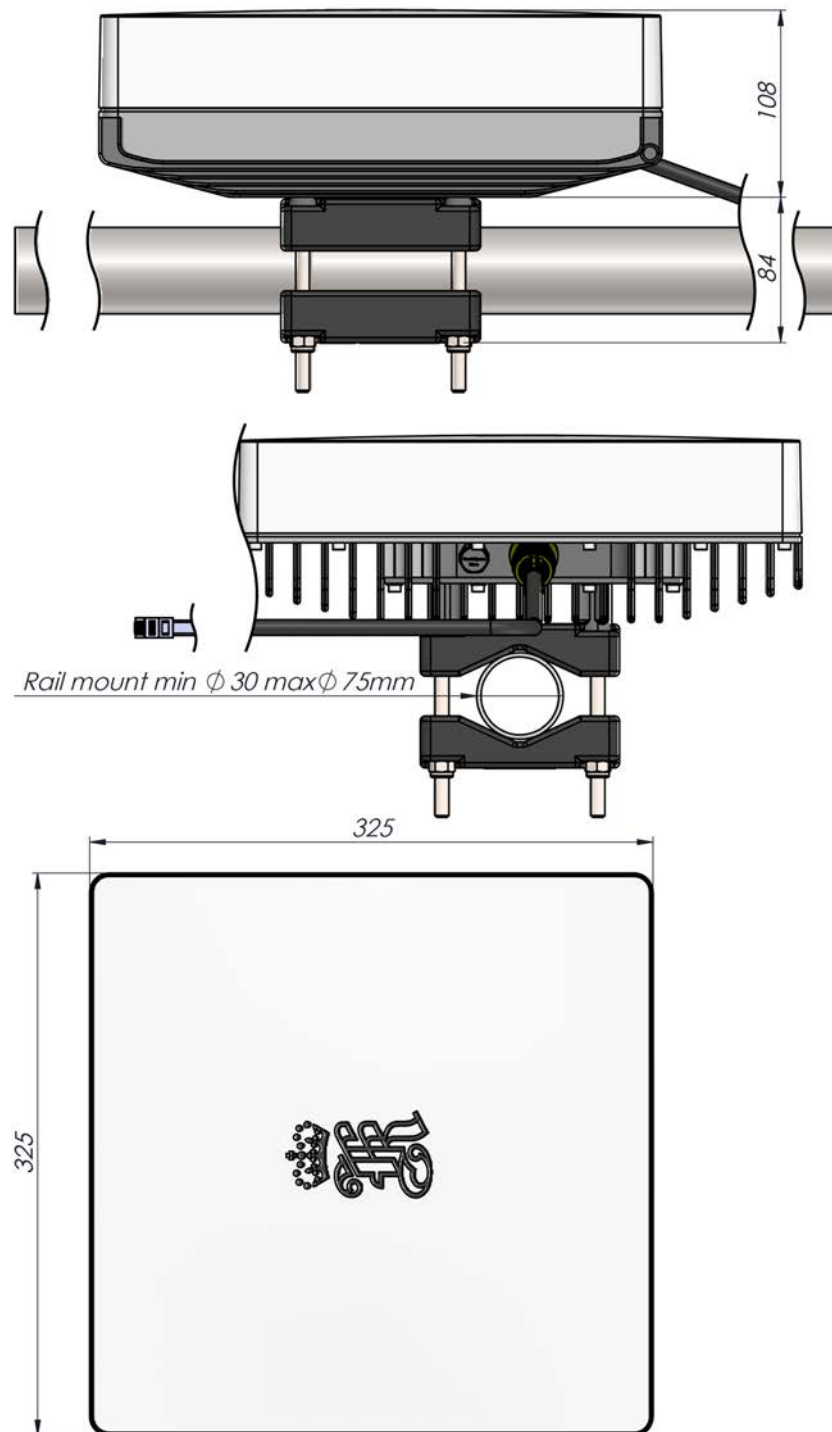


MBR Power Supply dimensions

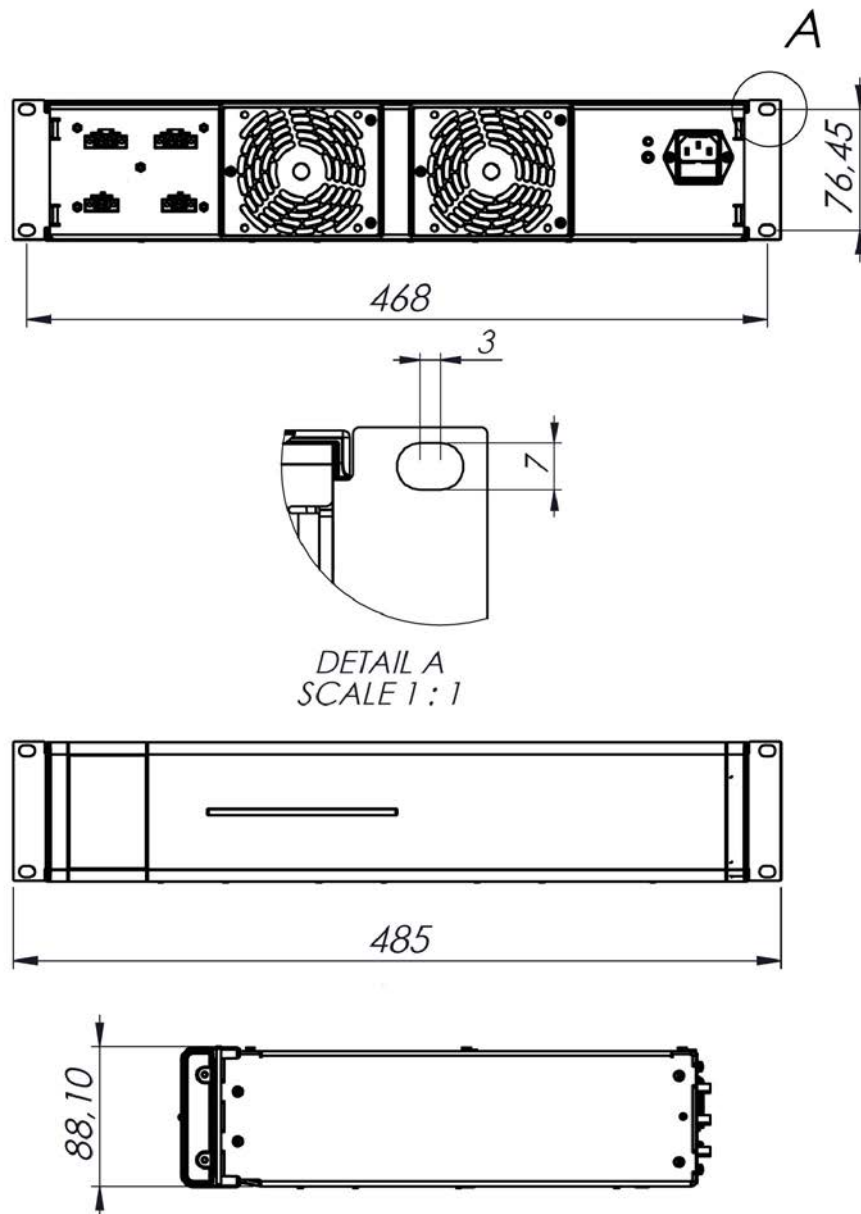

All measurements in mm.
The drawing is not to scale.
Information may be omitted. Observe the source drawing for additional details.

[3156-MA-125] Rev.2
AI

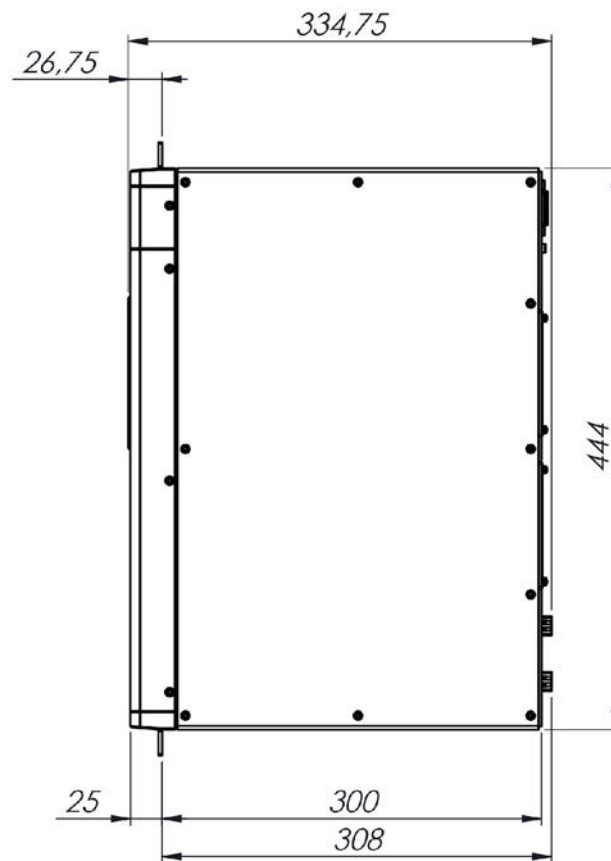

All measurements in mm.
The drawing is not to scale.
Information may be omitted. Observe the source drawing for additional details.

[3156-MA-125] Rev.1
A1

Technical specifications

Topics

[Performance specifications, page 69](#)

[Interface specifications, page 69](#)

[Weights and outline dimensions, page 70](#)

[Power specifications, page 70](#)

[Frequency specifications, page 70](#)

[Environmental specifications, page 71](#)

[Standards and regulations, page 71](#)

[Manufacturer's conformity declaration, page 72](#)

Performance specifications

These performance specifications summarize the main functional and operational characteristics of the MBR 179.

- **User data:** 0.7 – 16.5 Mbps
- **Antenna coverage:** 360 degrees azimuth, omnidirectional

Interface specifications

The system will interface with external systems and sensors via Ethernet.

- **Ethernet/LAN:** 1 Port

Weights and outline dimensions

These weights and outline dimension characteristics summarize the physical properties of the MBR 179.

- **Outline dimensions:**
 - **Length:** 323 mm
 - **Width:** 323 mm
 - **Height:** 111 mm
- **Weight:**
 - **Includes mounting bracket:** 10.9 kg
 - **Without mounting bracket:** 8.85 kg

Power specifications

These power characteristics summarize the supply power requirements for the MBR 179 system.

- **Voltage:** 24 – 48 V DC
- **Mains voltage fluctuation:** $\pm 10 \%$
- **Power consumption:** 210 W (maximum)

Frequency specifications

The radio frequency specifications summarize the frequency specifications for the system.

- **Frequency range:**
 - **Frequency overall tuning range:** 4900 MHz - 5900 MHz
Configurable range for the single 20 MHz channel.
 - **Frequency range ETSI EN 303 276:** 5862 and 5890 MHz
 - **Frequency range FCC part 15.407:** 5735 – 5840 MHz
- **Channel bandwidth:** 20 MHz
- **TX power:**
 - **HW Maximum:** Up to 4 W
 - **ETSI EN 303 276:** Up to 1.25 W
 - **FCC part 15.407:** Up to 1 W

- **Maximum EIRP:**
 - **HW Maximum:** 57 dBm
 - **ETSI EN 303 276:** 52 dBm
 - **FCC part 15.407:** 51 dBm
- **Modulation:** GMSK
- **Antenna gain:** 21 dBi
- **Antenna elements:** 60

This product is in compliance with the standard ETSI EN 303 276. This applies to the frequency channels 5862 and 5890 MHz.

Environmental specifications

- **Operating temperature:** -40 °C - 55 °C
- **Operating humidity:** 20 - 100 % RH
- **Storage humidity:** 20 - 70 % RH
- **Ingress protection (IP) code:** IP66 and IPx7 (connector mated/with cable connected)

Standards and regulations

This product is in compliance with relevant directives and product standards.

- **Radio Equipment Directive (RED) 2014/53/EU:**
 - Electromagnetic compatibility:
 - * ETSI EN 301 843–1
 - * ETSI EN 301 843–7
 - * IEC 60945/EN 60945
 - Radio spectrum:
 - * ETSI EN 303 276
 - Product safety:
 - * IEC 61010–1/EN 61010–1
- **Environmental standards:**
 - IEC 60945/EN 60945
 - DNVGL-CG-0339 (48 V DC)
 - IACS E10 (48 V DC)

Manufacturer's conformity declaration

This product is in compliance with relevant directives and product standards.



KONGSBERG

EU DECLARATION OF CONFORMITY

Manufacturer's name: **Kongsberg Discovery AS**
 Manufacturer's address: **Havnegata 9, N-7010 Trondheim, Norway**

declares that the product:

Product name: **Maritime Broadband Radio, MBR**
 Model number^{*)}: **MBR 179 MK2 and MBR 189 MK2**

is in conformity with the **Radio Equipment Directive, RED, 2014/53/EU** and **RoHS Directive 2011/65/EU**

The following product standards are used for assessment:

Essential requirements	Standards
Health and Safety (Article 3.1(a))	EN 61010-1:2010/IEC 61010-1:2010
EMC (Article 3.1(b))	EN 301 843-1 V2.2.1, EN 301 843-7 V1.1.1
Spectrum (Article 3.2)	EN 303 276 V1.1.1 (MBR) EN 303 413 V1.1.1 (GNSS receiver)

RoHS: To the best of our knowledge, with reference to standard **EN IEC 63000:2018**, the product is compliant with Directive **2011/65/EU** as amended by Commission Delegated Directive **EU 2015/863**.

 
Test references

Technical File: MBR_179_189_MK2_TCF; issued by Kongsberg Seatex AS.

Supplementary information

^{*)} This declaration applies to the MK2 version of the product.

Date and signature
2024-02-06


 Henrik Foss, Product Line Manager

Doc item: 110-0055211/B

Maintenance

Topics

[Checking the product version, page 73](#)

[Updating the system software, page 73](#)

[Cleaning the Radio Unit, page 74](#)

[Repairing the Radio Unit, page 74](#)

Checking the product version

For software updates, or contact with customer support, it is useful to know the product version of the Radio Unit.

Procedure

- 1 On the **System** menu, select **Site** to enter the **Configure site** page.
- 2 Under **Radios**, select the **Details** button for the radio for which you want to see the product version.
Observe that the radio **Status** box appears. Here you can see both the serial number and the product version of the Radio Unit.
- 3 Close the dialog box by selecting **[X]** in the upper-right corner.

Related topics

[Status, page 46](#)

Updating the system software

We recommend that you keep your product updated with the latest software version.

With the newest product software you will be able to enjoy the latest features and functionalities.

You will either be contacted, or receive the software upon request, when updates are available.

Software updates will be made available for download. The software updated package includes the necessary files and procedures you need for update the product software.

Cleaning the Radio Unit

The Radio Unit is designed to withstand the elements. Such as rain, snow and dust. However, to ensure optimal performance you must keep the surface of the Radio Unit clean. Brush off any ice or snow.

Repairing the Radio Unit

The Radio Unit is not designed for repair in the field. All repairs and modifications of the unit, except for installation of new software versions and system setup, must be done by qualified personnel. A failed Radio Unit should be shipped back to Kongsberg Discovery AS or other agreed service point for repair.

Equipment handling

Topics

[Taking delivery, page 75](#)

[Unpacking and handling, page 75](#)

[Storage, page 76](#)

[Disposal, page 76](#)

Taking delivery

When the equipment arrives at its destination:

- Perform an inspection immediately to register any damage that may have occurred in transit.
- If you find any damage, both the insurance company and the shipping agent must be informed immediately.

Unpacking and handling

Care should be taken when unpacking and handling the equipment. A visual inspection should be made to check that the equipment has not been damaged during shipment and that all components and parts are present according to the packing list.

The equipment contains delicate electronic components – handle with care and avoid shocks.

The equipment can be lifted by hand.

Storage


After the equipment in the boxes has been inspected and it has been verified that no damage has occurred, the equipment must be stored in its original packaging until the time of installation. The storage premises must be dry and well protected.

The temperature at the storage location must be within the environmental specifications for the equipment.

Disposal

At the end of the product lifetime, all parts and products must be disposed of in an environmentally-friendly way.

All electrical and electronic parts and components must be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or local authorities. The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. This is a precondition for reuse and recycling of used electrical and electronic equipment. For more detailed information about disposal of your old appliance, please contact your local authorities or waste disposal service.

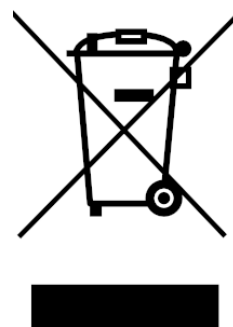

All disposal of mechanical, electromechanical, electronic and chemical waste - including all types of batteries - must take place according to national and international rules and regulations. Observe the relevant Waste Electrical and Electronic Equipment (WEEE) regulations.

The equipment can be returned to Kongsberg Discovery AS if there is no local WEEE collection. The equipment is marked with this waste pictogram.

Index

A		
about		
maintenance	7	
product license	7	
target audience	7	
this publication	7	
Add radios to site dialog box		
description	42	
adding equipment	28	
additional optional items		
not provided with the delivery	10	
additional required items		
not provided with the delivery	10	
air inlet filter		
Power Supply Unit	62	
B		
basic items		
provided with the delivery	10	
box		
radio Status box description	46	
C		
changing fuse		
Power Supply Unit circuit board	63	
Power Supply Unit power inlet	62	
checking individual site status	30	
checking network status	30	
checking system status	30	
choosing display colour palette	31	
cleaning air inlet filter		
Power Supply Unit	62	
cleaning Radio Unit housing	74	
colour palette		
how to choose	31	
configuration		
set up radio site for operation	21	
Configuration guide dialog box		
description	40	
Start button	41	
Configuration Wizard page		
description	40	
Configure site dialog box		
description	43	
conformity declaration		
Radio Unit	72	
connecting		
external devices	55	
Create site dialog box		
description	41	
crypto key		
setting	29	
crypto key configuration dialog box		
description	50	
D		
defining		
IPAddress	19	
Defining the IP address on the network adapter	19	
description		
Add radios to site dialog box	42	
Configuration guide dialog box	40	
Configuration Wizard page	40	
Configure site dialog box	43	
Create site dialog box	41	
crypto key configuration dialog box	50	
Edit network dialog box	47	
Join network dialog box	50	
Local Host List dialog box	45	
Local radio site status dialog box	52	
Local Site view	36	
Network Overview view	34	
Network status dialog box	51	
Power Supply Unit	58	
radio Status box	46	
Remote radio site status dialog box	52	
Resource management dialog box	48	
system	8	
System menu	39	
System Overview view	35	
System status dialog box	51	
diagram		
system	9	
dialog box		
Add radios to site dialog box description	42	
Configuration guide dialog box description	40	
Configure site dialog box description	43	
Create site dialog box description	41	
crypto key configuration	50	
Edit network dialog box description	47	
Join network dialog box description	50	
Local Host List dialog box description	45	
Local radio site status dialog box description	52	
Network status dialog box description	51	
Remote radio site status dialog box		
description	52	
Resource management dialog box		
description	48	
System status dialog box description	51	
dialog boxes		
System menu	39	
dimensions		
Power Supply Unit	61	
Power Supply Unit outline dimensions		
drawing	67	
Radio Unit	66, 70	
display		
colour palette	31	
how it is organised	32	
display organisation	32	
disposal		
of equipment	76	
drawing		
Power Supply Unit outline dimensions		
drawing	67	

MBR 179 Instruction Manual

E

Edit network dialog box	
description	47
editing existing radio network	26
enabling contact with Radio Unit	18
environmental requirements	
Power Supply Unit	61
environmental specifications	
Radio Unit	71
equipment	
disposal	76
how to add or remove	28
storage	76
taking delivery	75
unpacking	75
WEEE waste handling	76
equipment handling	75
Ethernet adapter	
Defining the IP address on the network	
adapter	19
Ethernet and power cable	
pin layout	57

F

FCC identification number	14
frequency	
radio frequency interference	14
specifications	70
functions	
System menu	39
fuse	
change fuse in Power Supply Unit power	
inlet	62
Power Supply Unit circuit board	63

G

guarantee	
restrictions	10

H

handling	
WEEE waste	76
hazard	
radiation hazard	14
health, safety, environment	15
how to	
add or remove equipment	28
change fuse in Power Supply Unit power	
inlet	62
change fuse on Power Supply Unit circuit	
board	63
check individual site status	30
check network status	30
check system status	30
clean air inlet filter on Power Supply Unit	62
clean Radio Unit housing	74
connect external devices	55
Defining the IP address on the network	
adapter	19
edit existing network	26
enable contact with Radio Unit	18

find product version	73
install Radio Unit	55
join a wireless network	25
power the Radio Unit	55
repair Radio Unit	74
set the crypto key	29
set up radio site for operation	21
turn on Radio Unit	17
upgrade the operational software	73
how to open	
System menu	39

I

identification	
FCC	14
individual site status	
how to check	30
information	
support	16
installing	
Radio Unit	55
interference	
radio frequency	14
internet	
network security	15
IPAddress	
defining	19

J

join network	
how to	25
Join network dialog box	
description	50

K

Kongsberg Discovery AS	
support	16

L

license	
product license	7
radio frequency	11
Local Host List dialog box	
description	45
Local radio site status dialog box	
description	52
Local Site view	
description	36
location	
Power Supply Unit	59
Radio Unit	54

M

main items	
provided with the delivery	10
maintenance	7
MBR 179	
system diagram	9
menu	

System menu description	39	technical specifications	61
System menu functions and dialog boxes	39	weight	61
N		Power Supply Unit power inlet	
network		how to change fuse	62
how to edit existing network	26	procedure	
network adapter		adding or removing equipment	28
Defining the IP address on the network		checking individual site status	30
adapter	19	checking network status	30
Network Overview view		checking system status	30
description	34	connect peripheral equipment	55
network security	15	Defining the IP address on the network	
network status		adapter	19
how to check	30	editing existing network	26
Network status dialog box		enabling contact with Radio Unit	18
description	51	how to choose colour palette	31
O		how to find product version	73
open		installing Radio Unit	55
System menu	39	interfacing external devices	55
operating voltage		joining a wireless network	25
Power Supply Unit	61	repairing Radio Unit	74
operation		setting the crypto key	29
joining a wireless network	25	setting up radio site for operation	21
procedures	17	turning on Radio Unit	17
operational principles	32	upgrading the operational software	73
operational software		procedures	
upgrading	73	operation	17
optional items		product	
not provided with the delivery	10	regulations	71
outline dimensions		standards	71
Power Supply Unit	61	product license	7
Radio Unit	70	product safety	15
outline dimensions drawing		product version	
Power Supply Unit	67	finding	73
P		purpose	
page		this publication	7
Configuration Wizard page description	40	R	
pages		rack	
System menu	39	19-inch	59
performance		rack requirements	59
specifications	69	radiation hazard	14
pin layout		radio frequency	
Ethernet and power cable	57	interference	14
power		license	11
specifications	70	specifications	70
power requirements		radio site	
Power Supply Unit	61	setup	21
power source		radio Status box	
Radio Unit	55	description	46
power specifications		Radio Unit	
Radio Unit	70	conformity declaration	72
Power Supply Unit		dimensions	66
air inlet filter	62	environmental specifications	71
description	58	how to clean	74
environmental requirements	61	how to enable contact	18
how to change fuse on circuit board	63	how to repair	74
location	59	installing	55
outline dimensions	61	outline dimensions	70
outline dimensions drawing	67	power source	55
power requirements	61	power specifications	70
		select location	54
		turning on	17
		weight	70
		regulations	

MBR 179 Instruction Manual

product regulations	71	of equipment	76
Remote radio site status dialog box		summary	
description	52	setting to work	57
removing equipment	28	supply voltage	
repairing		Power Supply Unit	61
Radio Unit	74	support	
required items		Kongsberg Discovery AS	16
not provided with the delivery	10	support information	16
requirements		system	
rack	59	description	8
Resource management dialog box		diagram	9
description	48	System menu	
restrictions		description	39
guarantee	10	functions and dialog boxes	39
RF exposure		how to open	39
safety rules	15	System Overview view	
		description	35
		system software	
		upgrading	73
		system status	
		how to check	30
		System status dialog box	
		description	51
S			
safety		T	
product safety	15	taking delivery	
safety rules		of equipment	75
RF exposure	15	target audience	
scope of supply		this publication	7
basic items	10	technical	
optional items not provided with the delivery	10	specifications	61
required items not provided with the delivery	10	technical specifications	
security		performance	69
network	15	Power Supply Unit	61
setting		this publication	
crypto key	29	about	7
setting to work		purpose	7
summary	57	target audience	7
Setting to work summary	57	this user manual	
size		about	7
Power Supply Unit	61	purpose	7
Radio Unit	70	target audience	7
software		tools	
upgrading	73	installation of system units	54
version	7	turning on	
specification		Radio Unit	17
environmental Radio Unit	71		
power Radio Unit	70	U	
specifications		unpacking	
frequency	70	equipment	75
performance	69	upgrading	
power	70	software	73
Power Supply Unit	61		
radio frequency	70	V	
technical	61	version	
standard items		finding product version	73
provided with the delivery	10	software	7
standard tools		view	
installation of system units	54	Local Site	36
standards		Network Overview	34
product standards	71	System Overview	35
Start button			
Configuration guide dialog box	41		
status of individual site			
how to check	30		
status of network			
how to check	30		
status of system			
how to check	30		
storage			

W

waste
 handling 76
WEEE (Waste Electrical and Electronic
 Equipment)..... 76
weight
 Power Supply Unit 61
 Radio Unit 70

©2024 Kongsberg Discovery AS