

## ALL RIGHTS RESERVED

---

©2016. All rights reserved! No replication allowed!

This handbook is for reference only. Software might upgrade any time, and no further notifications will be announced.

### SAFETY PRECAUTIONS

Please read the following safety guidelines before using the device.

- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Contacts having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- Use cell phone when the signal quality is good.


# TABLE OF CONTENTS

---

<b>ALL RIGHTS RESERVED .....</b>	<b>1</b>
<b>TABLE OF CONTENTS .....</b>	<b>3</b>
<b>1. UNDERSTANDING YOUR DEVICE .....</b>	<b>4</b>
1.1 DEVICE OVERVIEW .....	4
<b>2.INSTALLING CARDS &amp; BATTERY .....</b>	<b>5</b>
<b>POWERING ON/OFF THE DEVICE .....</b>	<b>6</b>
<b>3. SYSTEM GUIDE.....</b>	<b>7</b>
3.1 MAIN SCREEN OPERATING .....	7
3.2 USING YOUR PHONE.....	7
3.3 CALLING .....	8
3.4 MESSAGING.....	8
3.5 CONTACTS.....	9
3.6 BROWSER.....	10
<b>4. HOME SCREEN .....</b>	<b>11</b>
4.1 CUSTOMIZING SCREEN .....	11
<b>5. MULTIMEDIA .....</b>	<b>12</b>
5.1 FILE MANAGER .....	12
5.2 CAMERA.....	12
5.3 GALLERY.....	12
5.4 FM RADIO.....	12
<b>6. APPLICATIONS &amp; UTILITIES .....</b>	<b>14</b>
6.1 CALCULATOR .....	14
6.2 CLOCK .....	14
<b>ENVIRONMENTAL CONCERN.....</b>	<b>15</b>

# 1. UNDERSTANDING YOUR DEVICE

## 1.1 DEVICE OVERVIEW

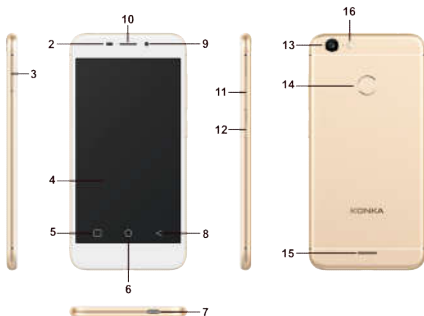

### Position of keys

1. Earphone jack	2. Photoreceptive sensor
3. SIM card slot	4. Touch screen
5. Record recent	6. Home key
7. USB Port	8. Back key
9. Front camera	10. Earpiece
11. Volume	12. Power key
13. Back camera	14. Fingerprint
15. Speaker	16. Flash

## 2.INSTALLING CARDS & BATTERY


---

Please switch off your device before inserting or removing the SIM card and memory card.

### Installing SIM card or Memory card

In your phone there are two SIM card slots; Sim 1 slot can only use SIM card, while sim 2 slot can use both SIM card or memory card.

- Use the pin to open the card slot.
- Insert the SIM card or memory card correctly.
- Push the SIM card to the correct position.

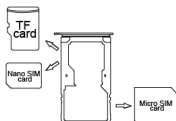

**Notice: Sim 2 card slot CAN NOT insert SIM card and memory card at the same time.**

**Notice: Built-in battery is not removable.**

## **POWERING ON/OFF THE DEVICE**

---

### **Turning On the Device**

After installing the SIM cards and charging the battery, you are now ready to turn on your device.

- Long press the Power Key to turn on the device.
- The first screen that appears is known as the Home/Idle Screen.
- Drag up the unlock icon to release the screen.
- If the screen turns off, then short press the Power Key to turn on the display.

### **Turning Off the Device**










- Long press the Power Key.
- A pop-up window appears, select Power off.

## 3. SYSTEM GUIDE

### 3.1 MAIN SCREEN OPERATING


#### Notification Panel

The table below lists various icons that might appear on the notification Panel of the device.

	Network intensity of SIM card 1 or SIM card 2
	Battery level of the device
	New short message
	Missed call notification
	Headset is plugged in
	USB connected
	Wi-Fi is connected
	Bluetooth is activated
	GPRS network is in use

### 3.2 USING YOUR PHONE

#### Enter main menu

In idle mode press the  key to enter the main menu on the desktop and press the (Home) key to return.


## Enter sub menu

In the main menu click the icon to select the sub menu, press the Back key to return to the previous menu, and press the Home key to return to the Home screen.





## 3.3 CALLING

---

### To Make Calls

If the icon  appears on the screen, then you can make or receive calls.

To make a call, please follow the steps mentioned below:



- Tap , enter the phone number using the on-screen keyboard.
- Tap  to delete a wrong number. Tap and hold it to erase the entire number.
- After entering phone number, tap .
- To end the call, tap .

## 3.4 MESSAGING

---

For using your device for sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service), go to Main Menu and then select Messaging.

### Creating a Message



- Tap  Compose new message.
- In To field; enter the recipient's phone number.
- Type message in the Type to compose field.
- Tap  to Send.

## Receiving and Managing Messages

When you send and receive messages to or from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

### MULTIMEDIA MESSAGE

A Multimedia message or MMS can contain letters, an image, an audio or video file. To create and send a MMS, please follow the steps mentioned below:


- Enter the Main Menu, select Messaging.
- Tap  Compose new message.
- Select Menu > Add subject.
- In the To field, enter the recipient's phone number or email address and enter the Subject.
- To insert a picture or video file, etc, tap .
- To insert text, tap Type to compose, and then enter your message.

## 3.5 CONTACTS

---

You can save information such as name, phone numbers, etc. for each contact listed in your Contacts menu.

### To add a Contact

- Enter the Main Menu select Contacts.
- Tap  add to contacts .
- Store the contact to SIM card or Phone contact.
- You can fill out as many or as little fields as you'd like for the contact.



- Tap Done to save the contact.

## **3.6 BROWSER**

---

The Browser is the tool which enables you to access the Internet.

## 4. HOME SCREEN

---

### 4.1 CUSTOMIZING SCREEN

---

The device features a touchscreen with idle displays and access to utilities at just one-touch. So swipe right or left to navigate through various screens accessing your favorite features without entering the main menu. Each screen can be customized by adding various widgets, shortcuts and folders.

#### **Shortcuts**

In order to add a shortcut on the screen: Long press on the desired application to add on the screen.

#### **Widgets**


Save time with live updates right on Home screen and get all of your personalized updates at one place.

#### **Setting the wallpaper**

You can customize the wallpaper of your Home screen with default wallpaper or with pictures taken from your device.

- Long press the Menu Key > Wallpapers.

#### **Rotating Your Mobile Phone Screen**

- The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.
- On the Home screen, tap  > Settings > Display > Auto-rotate screen to disable this function.

## 5. MULTIMEDIA

---

Your device features various multimedia options, such as Music Player, Camera and Video Player.

### 5.1 FILE MANAGER

---

You can browse, open and manage the data saved in the Device and Memory card by accessing the File Manager sub-menu. The device provides a certain space for users to manage files and supports the T-Flash card. You can use the file browser to conveniently manage various directories and files on the T-Flash card.

### 5.2 CAMERA

---

Your device is equipped with a camera and camcorder that enable you to capture photos and videos.

### 5.3 GALLERY

---

You can view the captured images, recorded video clips, and downloaded images in the Gallery.




The picture folder and video folder will be displayed. Select to view the camera pictures or camera videos. The images or videos will be displayed in thumbnails.

### 5.4 FM RADIO

---

You can use your phone to listen to FM radio stations once the original Headset is plugged into the connector. Please

press the side key to adjust music volume.

Tap  to exit FM radio function. Tap the (   ) to search the channels.

## 6. APPLICATIONS & UTILITIES

---

For your entertainment purpose, your device is provided with several interesting games, applications and utilities. Please ensure that you have GPRS setting in your device to access the applications. Contact your operator for GPRS settings.

### 6.1 CALCULATOR




---

Calculator helps you perform basic arithmetic functions, such as addition, subtraction, multiplication and division.

### 6.2 CLOCK

---

This function gives you an access to the alarm clock.

- Go to  → Clock
- Tap  > tap  to add alarm.



## ENVIRONMENTAL CONCERN

---

We strive to make products that are safe for our consumers as well as the environment. Come join hands with us and make world a better place to live in.

Preserve natural resources for future generations by recycling your phone. The phone contains some metals, when recycled properly; these can be put back into circulation, decreasing the need for new metal mining. Recycling reduces the need for raw materials, saves energy, helps mitigate Global Warming and reduces pollution, reduces waste products in landfills; therefore, preserves natural resources for the future and saves the planet.

Follow some simple steps and contribute towards saving the planet.

### DOs

Recycle your handset and its accessories.

To protect natural resources and to promote re-use of the material, kindly separate batteries from other type of waste.

### DONTs

Do not dispose of your mobile and its battery in fire.

Do not dispose your mobile with regular waste.

Do not overcharge your handset. Remove the charger when battery is full.

Don't trash your phone, instead RECYCLE it.

This logo signifies that this product and/or its constituents should not be disposed off with other household waste.

## Hazards of Improper handling, accidental breakage, damage and /or improper recycling of hazardous elements

If this product is improperly handled, broken or damaged or carelessly recycled or disposed off in the fire, can result in environmental and data security concerns, including the following:

Affect nearly every system in the human body and result in birth defects, brain, heart, liver, kidney and skeletal system damage. They will also significantly affect the nervous and reproductive systems of the human body;

When burned, create cancer-producing dioxins which are released into the air we breathe; If thrown in landfills, may leach into groundwater affecting your local community;

In warm climates, the oxidation of mercury in the environment can be accelerated, leading to the creation of oxidized Hg atoms that are known to be associated with ozone depletion; and Improper recycling additionally results in data security issues, as private electronic information remains on the hard drive, if not properly removed before disposal.

### How to Recycle

Please get your electronic devices recycled only through authorized recyclers, approved by the Pollution Control Board.



We provide a facility of recycling of our products. For details of our collection centers, please visit our website or call our customer care. Help us to GO

GREEN.

Constitution of Hazardous Elements in your Device:

Your device does not contain the following hazardous elements in a proportion higher than the limits provided hereunder: maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers; and maximum concentration value of 0.01% by weight in homogenous materials for cadmium.



**FCC Caution.**

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the handset, including the antenna.

Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components.

Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.