

KONKA MOBILE PHONE

C625

LET THE WORLD ENJOY THE VOICE FROM KONKA


PN:

Improvements and changes may be made to this manual without prior notice.

KNOWING YOUR MOBILE PHONE	1
POSITIONS OF KEYS.....	2
DISPLAY SCREEN.....	2
STATUS ICONS.....	3
BACKLIGHT.....	3
1. GUIDELINE FOR SAFE AND EFFICIENT USE.....	4
1.1 CONDITIONS OF USE & SAFETY	4
1.2 FLIGHT	6
1.3 DRIVING	6
1.4 DANGEROUS AREAS.....	6
1.5 HOSPITALS.....	6
1.6 DISTURBANCE	7
1.7 CHARGER.....	7
1.8 ACCESSORIES.....	8
1.9 BATTERY INFORMATION.....	8
1.10 EMERGENCY CALLS	9
2 GETTING STARTED	10
2.1 FIRST CALL.....	10
2.2 MOUNTING THE SIM CARD	10
2.3 BATTERY AND CHARGING.....	12
2.4 SWITCHING ON/OFF YOUR PHONE	15
2.5 USE OF PASSWORD.....	16
3 GENERAL FUNCTIONS	19
3.1 MAKING CALLS	19
3.2 ADJUSTING THE SOUND VOLUME	20

3.3	ANSWERING CALLS	21
3.4	OPTIONS DURING A CALL	21
4	GUIDE TO MENU OPERATIONS	24
4.1	SMS	24
4.2	PHONE BOOK	28
4.3	CALL HISTORY	32
4.4	GAMES	34
4.5	ORGANIZER	34
4.6	USER PROFILES	36
4.7	SETTINGS	37
4.8	SHORTCUTS	44
5	APPENDIX	46
5.1	APPENDIX A: GUIDANCE OF INPUT METHODS	46
5.2	APPENDIX B: MAINTAIN AND TROUBLE SHOOTING	48
5.3	APPENDIX C: INTRODUCTION OF AVAILABLE FITTINGS ..	50
5.4	APPENDIX D: FUNCTION LIST	50

KNOWING YOUR MOBILE PHONE

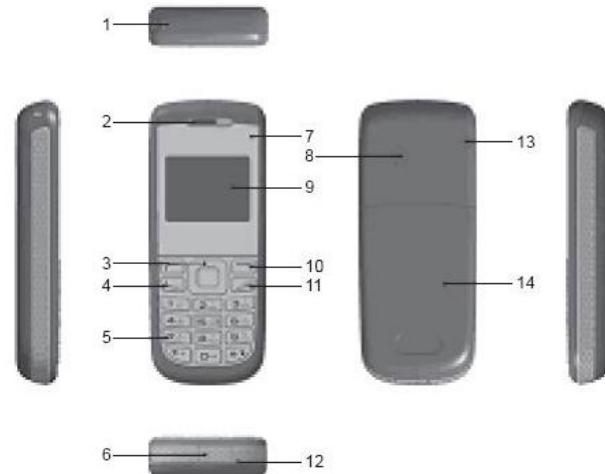

1. Cord hole	8. RF Cover
2. Earpiece	9. Screen
3. Selection key	10. Soft key
4. Pick up key	11. Hang up key
5. Numeric key	12. Microphone
6. Charger and connector	13. Bolt Cover
7. Glass block	14. Battery Cover

POSITIONS OF KEYS

Your mobile phone contains the following keys:

Key	Name	Description
	Pick up key	For dialing or receiving calls. Press it in the standby mode to view call records.
	Hang up key	For ending a call. Press and hold this key to turn on or off mobile phone. Return to the standby mode or cancel the current operation you entered from the "Menu".
	Soft keys	They include the left and right soft keys to execute the operations shown at the bottom of the screen.
	Selection key	For scrolling through the "Menu" or phone book. Press it to move the cursor in the edit status, or enter the appointed function in the standby mode.
	Number keys	For entering numbers, letters, special characters. In the standby mode, press and hold # to start the Mute mode. In the edit window, press # to switch the input method.

DISPLAY SCREEN

Your mobile phone has only one display that includes three parts:

- First line displays status icons, which indicate signal strength, remaining power of the battery, etc.

- Middle lines display text and graphic, including numbers, text and animated icons.
- Last line displays the functions currently assigned to the two soft keys.

STATUS ICONS

	Network signal
	Divert all voice calls
	Keypad lock
	Alarm clock is activated
	Battery status
	Missed call
	New message or messages full

Sound status

	Ringing
	Vibrate
	Vibrate then Ring
	Vibrate and Ring

BACKLIGHT

You can set up the backlight for the display and keypad through options in the menu. If there is no key operation within a given period of time, it will turn off automatically.

1. GUIDELINE FOR SAFE AND EFFICIENT USE

We recommend you carefully read this chapter before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained in this manual.

KONKA reserves the right to make changes and improvements to the mobile phone described in this document without prior notice.

1.1 CONDITIONS OF USE & SAFETY

Conditions of use:

- Your phone is not water-resistant. Keep it dry.
- Do not use or store the phone in dusty, hot or cold areas.
- Do not use chemicals, solvents or detergents to clean the phone.
- Do not paint the phone.
- Minimum and maximum temperatures recommended by the manufacturer are between -10°C and 55°C.
- In order to avoid erasing magnetic records, it is recommended not to leave credit cards or other magnetic storage media in the long term next to the phone.
- Respect privacy: Should your phone allow it, you must respect the

laws and regulations in force in your country regarding taking photographs and recording sounds. It is the user's sole responsibility to ensure that prior authorization is obtained, if necessary, in order to record conversations or take a photograph. The manufacturer, the seller or reseller of your mobile phone (including the operator) disclaim any liability, which may result from improper use of the mobile phone. Switch your phone off in any facility where posted notices require it.

Safety:

- Do not switch on the phone when wireless phone is prohibited or when it may cause interference or danger (hospitals, aero ports and other prohibited areas).
- Do not use the phone at a refueling point, near fuel or chemicals.
- Do not use the phone where blasting is in progress.
- Do not expose your product to flames.
- Do not allow children to use the mobile phone without supervision.
- Keep the phone and all its parts and accessories out of the reach of children.
- Do not throw, drop, knock, shake or try to bend the phone.
- Do not attempt to open the phone. Only qualified person may repair the phone.

1.2 FLIGHT

Turn off your mobile phone before boarding any aircraft to prevent interference with communication systems. It is illegal to use any mobile phone in a plane.

1.3 DRIVING

- In relation to drivers, given to recent studies, use of mobile phones (whether the phone is hand-held or hands-free) constitutes a real risk. Drivers are requested to refrain from using either hand-held or hands-free phones whilst on the move.
- Your phone emits electromagnetic waves when switched on. These waves can interfere with a vehicle's electronic systems. Therefore, do not place your phone on the dashboard or within an airbag deployment area. Check with your dealer or car manufacturer to make sure that the car electronics is well insulated.

1.4 DANGEROUS AREAS

Turn off your mobile phone in a gas station or any area with fuel, chemicals or any other dangerous articles.

1.5 HOSPITALS

Observe the relevant rules and codes of the hospital in using your mobile phone and turn it off near medical facilities. Any radio transmission equipment, including mobile phones, may interfere and affect the operation of medical facilities and other electronic devices.

For any question, please consult doctors or the medical facility supplier.

1.6 DISTURBANCE

Radio devices may disturb the mobile phones. They may affect your mobile phone performance.

1.7 CHARGER

Do not use any accessories and batteries other than those approved by the mobile phone vendor.

- Charger will operate in the temperature range of 0°C to 40°C.
- The charger designed for your mobile phone meets with the standard for safety of information technology equipment and office equipment use. It must be used for this purpose only.
- The manufacturer disclaims any liability for damage caused by the use of other charger.
- Caution: Explosion if battery is replaced by an incorrect type charging.

Technical specifications:

Adapter	Input: AC 100-240 V / 50-60 Hz / 0.15A Output: DC 5.0V / 500 mA Caution: the network voltage is classified as a hazard by the criteria of this standard.
---------	--

1.8 ACCESSORIES

Use only accessories approved by the phone manufacturer for use with this particular phone model. The use of any other types of accessories may damage the product.

1.9 BATTERY INFORMATION

Your phone is powered by a rechargeable battery (DC 3.7V / 550 mAh) which full performance is achieved after two or three complete charge and discharge cycles. When the operating time (standby and talk time), after hundreds of charge and discharge, is noticeably shorter than normal, it is time to replace the battery.

- Use only batteries approved by the phone manufacturer for use with this particular phone model. The use of any other types of battery may damage the product, be dangerous and invalidate any approval or warranty applying to the phone.
- The manufacturer disclaims any liability for damages caused by the use of other battery.
- Always keep the battery between 15 °C and 25°C.
- Use the battery only for its intended purpose.
- Do not short-circuit the battery.
- Do not leave the battery connected to a charger too long, since

overcharging may shorten its lifetime.

- Do not dispose of battery in fire.
- Leaving the battery in hot or cold places will reduce the capacity and lifetime of the battery.
- The batteries could split or leak if incorrectly inserted, opened or exposed to heat.



- Used phone batteries must be disposed of in compliance with current environmental protection regulations.

1.10 EMERGENCY CALLS

Connections in all conditions cannot be guaranteed. Therefore, you should never rely solely on the mobile phone for essential communications such as emergencies. Emergency calls may not be possible on all mobile phone networks or when certain network services or phone features are in use. Check with your local service provider. To make an emergency call: you must switch on the phone, check for adequate signal strength; some networks may require that a valid SIM card be properly inserted in the phone. Then, dial the official emergency number.

2 GETTING STARTED

2.1 FIRST CALL

- Insert a SIM card (first switch off your phone and remove the battery). For relevant detailed guidance on installation, please refer to "2.2 Mounting the SIM Card".
- Charging the battery. Please refer to "Section 2.3 Batteries and Charging the Battery" for details.
- Input the area code and the phone number and press Pick up key.

Note: Before you get started, you must insert a valid SIM card in your phone and charge the battery first.

2.2 MOUNTING THE SIM CARD

Your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (Personal Unlock Key), PUK2 (Personal Unlock Key2) and IMSI (International Mobile Subscriber Identity) and network information, phonebook data, SMS (short messages) and other data are stored in your SIM card.

Note: Please do pay attention that: This model of phone supports the SIM cards of 1.8V and 3V except the SIM card of 5V.

- At present, not all network operators provide PIN2 and PUK2. Please pay attention that the functions that need the above passwords in this phone may be unavailable.
- Please remove or insert the SIM card after you switch off the phone for a few seconds.

- Please carefully handle the SIM card, scraping or bending the SIM card may damage it easily.
- Please store your phone and the SIM card and other tiny components of the accessories in a proper place and keep them out of children's reach.

Warning: Before you insert or remove the SIM card, please switch off your phone. Otherwise it may damage the SIM card.

2.2.1 Mounting

- ① Press and hold the Hang up key to turn off your mobile phone before removing the battery.



- ② Keep the SIM card facing the phone and align its dent with the dent of the SIM card slot. Slide the SIM card into the slot carefully.



- ③ Re-attach the battery.



Note: If you insert the SIM card improperly or the SIM card is damaged, “Insert SIM” will be displayed on the LCD after you switch on your phone. Remove the SIM card and check the right way to insert it, and then insert it in the phone again.

-If it displays that the SIM card is damaged, please send it to the network operator for repair.

-If it displays that the SIM card is permanently locked, please consult your network operator.

2.3 BATTERY AND CHARGING

2.3.1 Battery Status

Your phone can monitor and display relevant information on battery level.

- ① Under normal condition, you can view remaining level of the battery from the battery icon on the upper right corner of the LCD.
- ② When the battery level is low, “Low Battery” will be displayed on the LCD. If you have selected Alert Tone – Warning Tone of any profile in Profiles, the phone will sound alert tone.
- ③ While charging the battery, the battery icon repeatedly fills until the battery is fully charged.
- ④ The phone is equipped with 550mAh (li-ion) battery, and the expected standby time is 180~250 hours and the talk time is 2.0~2.5 hours.

Note: Actual standby time and talk time depend on the use condition of the phone, local network environment, SIM card and actual settings of the phone.

2.3.2 Tips on the Battery

Please don't put your battery in the environment where the temperature is too high or low; if so, it will affect the service life of the battery and decrease standby time of the battery. The service life of the battery is limited; after you use it for a period of time, it is suggested that you should replace with KONKA's original battery in time if you find that the performance of the battery tends to decrease.

Note: Do not leave the battery on the battery charger being charged too long time (less than 12 hours), and remove the battery as early as possible after the battery is fully charged to prevent the battery from getting damaged or dangerous situations from occurring.

2.3.3 Using the Travel Charger

You can use the travel adapter to charge the battery through the phone.

When you need to charge the battery, install the battery in the phone.

- ① Connect the connector of the travel adapter to the input/output jack of the phone.
- ② Plug the travel adapter into a proper AC wall outlet.
- ③ While charging, the battery icon repeatedly fills until the battery is fully charged.
- ④ When charging is finished, the battery icon stops changing. Pay attention that you should press the snap fastener on both side of the connector when disconnect the connector of the travel adapter from the input/output jack of the phone.

Note: If the battery voltage is too low to power on the phone, the battery icon will take longer time to change while charging.

-You can switch your phone on or off while it's being charged.

Warning: You must ensure that the standard voltage and power of the place where you are match the rated voltage and power of our travel adapter.

2.3.4 Precautions on Using the Battery

- Before you remove the battery, please ensure that you switch off your phone.
- Please carefully use the battery. If you use metallic objects (such as coins, clips, etc.) to connect the anode (+) and cathode (-) of the battery, it might causes short circuit and may damage the battery and metallic objects. If you remove the battery from the phone and put it in your bag, you should note that don't let the metallic objects (such as your key) contact the anode and cathode of the battery at same time.
- Do not throw the battery into fire, nor use the battery in the place where the temperature is extremely high.
- Do not dismantle or modify the battery.
- Do not put the battery in the place where there is strong mechanical shock, nor use hard object to strike the battery.
- You should keep the battery in cool and dry place; never put the battery in the place at high temperature (over 60 centigrade) and you should keep the battery away from direct sunshine.
- If you find any strange odor or the battery is overheated, you should stop using it.
- If you find that the battery has any crack, deformation or other types

of damage, or the electrolyte leaks out, you should stop using the battery immediately.

- If the electrolyte leaked out contacts your skin or clothes, you should immediately use soap and clean water to clean it; if you inadvertently let the electrolyte come into your eyes, you should thoroughly wash your eyes with clean water and go to the hospital immediately.
- Only use KONKA approved batteries in charging to avoid hurt due to incorrect charging.
- Never use the lithium battery when the temperature is very low; you can't obtain maximum standby/talk time at low temperature.
- Do not clean the battery with water or organic solvent, nor dip it into water.
- If you don't use the battery for a long time, please fully charge the battery before you store it.
- For used batteries, it is suggested that you should return them to mobile phone manufacturers or put them into the specified public used batteries recycling area; never mix them with other rubbish or discard them randomly.

2.4 SWITCHING ON/OFF YOUR PHONE

- Press and hold Hang up key for a few seconds to switch your phone on. Startup animation appears on the LCD.
- If you are required to input phone password, input the password and press "OK" soft key. Before the phone leaves factory, the phone password is preset to **1234**.
- If you are required to input PIN, input PIN and press "OK" soft key. Your SIM card and PIN are supplied by your network operator.
- Enter idle screen.

- Press and hold Hang up key for a few seconds to switch your phone off.

2.5 USE OF PASSWORD

Your mobile phone and SIM card have multiple passwords. These passwords are helpful to prevent others from using your mobile phone and SIM card without your permission. When you are required to input any password referred below, first input correct password (displayed in “**”), then press “OK” soft key. If you input wrong numbers, please first press “Clear” soft key to delete wrong input, then input correct numbers. You can change PIN, PIN2 and phone password with function list “Settings->Security Settings->Change Password”.

2.5.1 Mobile Phone Code

The phone password is phone lock, mobile phone password, which is used for preventing others from using your phone without your permission. Generally, the mobile phone password is preset by the manufacturer. The default phone password is **1234**. If phone lock is activated, you will be required to input phone password when you switch on your phone.

2.5.2 PIN

PIN (Personal Identification Number, 4-digit to 8-digit) is used for preventing your SIM card from unauthorized use. PIN is generally supplied with the SIM card by your network operator. If the PIN Check feature is activated, then you will be required to input PIN each time you switch on your phone. If you input wrong PIN three times in succession, the SIM card will be locked; please follow the operations below to unlock it.

- ① Input correct PUK as prompt on the display to unlock the SIM card.

- ② Then input new PIN and press "OK" soft key.
- ③ When you are required to input the new PIN again, input it and press "OK" soft key.
- ④ If the PUK is correct, then the SIM card will be unlocked and the PIN will be reset.

Warning: If you input wrong PIN three times in succession, the SIM card will be locked and you need to use PUK to unlock it. PUK is usually kept by the network operator.

2.5.3 PUK

PUK (Personal Unlock Key, 8-digit) is used for unlocking locked PIN. Usually PUK is supplied with the SIM card by the manufacturer. If not, please contact your network operator who offers you services. If you input wrong PUK ten times in succession, the SIM card will be invalid and you will need to contact your network operator for changing new SIM card.

2.5.4 PIN2

PIN2 (4-digit to 8-digit) is supplied with the SIM card, which is used for setting "Call Cost", "Fixed Dial" and other functions. Please contact your network operator to affirm whether your SIM card supports these functions. If you input wrong PIN2 three times in succession, the PIN2 will be locked; only after you input correct PUK2, the PIN2 can be unlocked. Please follow the operations below to unlock it.

- ① Input correct PUK2 as prompt on the display to unlock PIN2.
- ② Then input new PIN2 and press "OK" soft key.
- ③ When you are required to input the new PIN2 again, input it and press "OK" soft key.

2.5.5 PUK2

PUK2 (Personal Unlock Key 2, 8-digit) is used for unlocking locked PIN2. Usually PUK2 is supplied with the SIM card by the manufacturer. If not, please contact your network operator who offers you services. If you input wrong PUK2 ten times in succession, you will be unable to apply the functions that need PIN2; if you want to apply these functions, you need to contact your network operator to change a new SIM card.

2.5.6 Barring Code

To activate call barring, you need a barring code.

The code comes with your subscription of this network function and can be obtained from your network operator.

3 GENERAL FUNCTIONS

3.1 MAKING CALLS

- In idle screen, input the area code and phone number and press Pick up key to make a call.
- You can press Hang up key to end a call.

3.1.1 Making International Calls

Press “*” key twice. The “+” sign appears on the screen. Enter the country code, area code and phone number, and then press the Pick up key.

3.1.2 Making Calls to An Extension Number

After entering the main number, press “*” key three times to get “p” or four times to get “w”, then enter the extension number and press the Pick up key

3.1.3 Correcting Wrong Inputs

Press the Right Soft key to delete the last character on the screen. Hold the Right Soft key to clear all.

3.1.4 Calling a Number from the Phone Book

Method 1:

- ① Scroll to the phone book by pressing the Right Soft key. To search the entry you want, press the number keys to enter the first

character of the name, then press Up or Down of the Selection key to find the name.

- ② Press the Pick up key to call the selected number.

Method 2:

- ① On the standby screen, press the left soft key to select the phone book.
- ② Select "Search Entry" to find the number you want and then press the Pick up key to call the selected number.

3.1.5 Re-dialing a Last Called Number

- On the standby screen, press the Pick up key to display the call records.
- Your phone will display the numbers of the received calls, dialed calls and missed calls. Press Up or Down of the Selection key to select a number.
- Press the Pick up key to call the selected number.

3.1.6 Speed Dialing

- In the dialing list of "Settings->Phone Setup->Speed Dial->Set Number", you can edit entries of speed dialing.
- After you set it to "On", you can long press the Numeric key 2-9 corresponding to the numbers in speed dialing list to make calls.

3.2 ADJUSTING THE SOUND VOLUME

During a call, you can press the Up/Down Key of the Selection key to adjust the earpiece volume.

3.3 ANSWERING CALLS

- When you receive a call, the phone rings or vibrates.
- Press the Pick up key or Left Soft key to answer the call.
- Press the Hang up key or Right Soft key to end the call.

Note: If the caller can be identified, the caller's phone number will be displayed (if the number has been stored in the phonebook of your phone, the caller's name and phone number will be displayed.). If the caller can't be identified, it only displays the caller's number. When you use the function list or phonebook, you can also answer a call.

3.4 OPTIONS DURING A CALL

Your phone provides a number of control functions that you can use during a call.

3.4.1 Call Waiting

If your network supports the call waiting service and the service is activated, you can hear the call waiting tone if you receive another call during the conversation.

To answer another call during the conversation:

- Press the Pick up key or Left Soft key to answer the incoming call. The first call (ongoing call) will be held automatically. See "Hold/Switching".
- Press the Hang up key or Right Soft key to reject the incoming call and continue the current call.
- Press the Left Soft key to hold the ongoing call and answer the incoming call.

3.4.2 Hold/Switching

When you have a call on hold and another one in progress:

- Press the Left Soft key to select Swap to hold the ongoing call and answer the held call.
- Press the Left Soft key to select End Single to disconnect or hold the ongoing call. Press the Hang up key to end the ongoing call.
- Or you can press Left soft key to select End All to end both current call and the call on hold.

3.4.3 Call Hold

If the network supports call holding, you can make another call at the same time you have a call in progress:

Method 1:

- Directly input the phone number or press Left soft key to transfer the phone number you want to call from the phonebook, or press Left soft key to select New Call to input the phone number, then press Pick up key to make the second call.
- And the first call (in progress) will be automatically put on hold.

Method 2:

- Press Left soft key to select mute to hold current call.
- And then start making another call.

After the call is answered, one call is in progress and the other one is on hold; you can switch between the two calls, refer to "Hold/Switch" for details.

3.4.4 Mute/Un-mute

With this function, you can turn off/on the microphone of the phone and other microphones connected. "Mute" function can prevent others from hearing your voice.

During a call, you can press Left soft key to enter "Option→Mute" to enable or disable mute function.

3.4.5 Other Options during a Call

During a call, you can enter the Phone Book, SMS, and other functions; please refer to Menu Guidance for details.

4 GUIDE TO MENU OPERATIONS

The functions available in this model of mobile phone are listed below and it briefly describes each function. If you want to view these functions, refer to "Appendix D: Function List".

4.1 SMS

- In idle screen, press left soft key to enter the menu and scroll to "SMS" by pressing Left/Right key or Up/Down key of the Selection key.
- Press "select" soft key to enter this function.

Short Message Service (SMS) is a kind of network service which provided by the network operator. If you want to send short messages, you need the number of short message service center (you can get the number from your network operator).

4.1.1 Write Message

Press "#" key to switch input methods when editing message.

- Input messages. You can press "*" key to insert the special symbol in input mode.
- Press "Option" to select the following options:

Submit: Send messages.

Save and Send: Send and have the message saved in outbox.

Save: Have the message only saved to outbox.

Send By Group: Send messages to one group.

Use Template: You can use template messages.

Exit: Exit from option

4.1.2 Inbox

When receiving new short messages or short message box is full, the screen will display  status icon; if the short message box is full, you will not be able to receive new messages, please delete some of the messages.

- Select “Inbox”, the screen will display the message in the inbox, the one with  is the unread message.
- Press “OK” soft key to read the current message.
- Read messages, press “Option” to select the following options:

Delete: Delete the message.

Reply: Reply to sender.

Forward: Forward or edit the original text message.

GET Number: Extract all phone numbers and save them to SIM card or phone or dial directly.

4.1.3 Outbox

- Select “Outbox”, the screen will display the message in the Outbox.
- Press “OK” soft key to browse the current messages.
- Read messages, press “Option” to select the following option:

Please refer to “*Write Messages*” for operation details.

4.1.4 Sent-Box

- Select “Sent-Box”, the screen will display the message in the Sent-Box.
- Press “OK” soft key to browse the current messages.
- Read messages, press “Option” to select the following option:

Please refer to “Write Messages” for operation details.

4.1.5 Draftbox

- Select “Draftbox”, the screen will display the message in the Draftbox.
- Press “OK” soft key to browse the current messages.
- Read messages, press “Option” to select the following option:

Please refer to “Write Messages” for operation details.

4.1.6 Report-Box

- Select “Report-Box”, the screen will display the message in the Report-Box.
- Press “OK” soft key to browse the current messages.
- Read messages, press “Option” to select the following option:

Please refer to “Write Messages” for operation details.

4.1.7 Use Template

Ten template messages are saved in the phone and users can edit or

delete them. After deleting, the template section will become blank.

4.1.8 Message Settings

You can set the default information about SMS properties with the function.

Delivered: You can set ON/Off

Preferred Storage: The default location for Message Saving is SIM card.

Expire: You can set time of Expire.

SC Address: You can save or modify the Short Message Center number required by message sending; the number can be obtained from the network operator.

4.1.9 Delete message

Delete the message.

4.1.10 Memory Status

Check the percentage of short messages stored in SIM card in the total capacity.

4.1.11 Voice Mail Server

Press Up/Down keys to select “Voice Mail Server” in the “Messages” menu, press “OK” to enter.

Connect to Voice: You can hear messages in the voice mailbox with the function.

Setting: Input or modify the number of voice mailbox.

Note: The service offered by the network resembles the message machine which enables the caller to leave word when you can not or not willing to answer the phone. Your phone number of the voice mailbox is saved in the phone. Long press on the numeric key 1 to dial the number of the voice mailbox in the idle mode after the voice mailbox number is set. Please contact the network operator for details.

4.1.12 Broadcast Message

The network service enables you to receive various text messages, such as weather or transportation. Few network provides such service across the world, please refer to the network operator for details.

Read Message: Press Up/Down keys to select the message.

Receive Mode: Turn on or off the Cell Broadcast.

Channel Setting: Select the Broadcast Channel. You can selectively receive the broadcast messages.

Show: You can Turn on or off.

Languages: Select the required language to display the broadcast message.

Note: Whether language can support or nor depends on the network operator.

4.2 PHONE BOOK

You can store up to 300 phone numbers in the memory of the mobile phone; for SIM card, the number of phone numbers that can be stored in the SIM Card depends on capacity of the SIM Card. The phone numbers stored in the phone and SIM card can be taken as a uniform phonebook when you search for phone numbers.

4.2.1 PhoneBook View

With this function, you can quickly locate the number of the person you wish to speak to. You can enter the initial letter of the person's name and entries which begin with this letter will be displayed in the middle lines of the LCD; you can press the Selection key Up or Down to browse the entries, then you can press the Pick Up Key to make a call.

4.2.2 Search Entry

You can find the phone number you need in the phone book by applying this function. In idle screen, press "Menu" soft key to select "Phone Book" and press Up/Down key of the Selection key to select "Search Entry", then you can operate as follows:

- In "Name" box, input all letters of the name or you can input the initial letters of the name.
- Press "Option" soft key to select "Search", and then press "OK" soft key, all entries that meet the requirement will be listed. You can press Up/Down key of the Selection key to browse all entries, then you can press Pick up key to make a call.
- For each entry, you can perform following operations by pressing "Option" soft key:

Edit: Edit this entry.

Send SMS: Send a short message to this number.

Delete: Delete this entry from the phonebook.

Copy: You can copy entries in the SIM card to the phone or entries in the phone to the SIM card, i.e. Phone-SIM Copy.

Move: If this entry is saved in the SIM card, it will be moved to the phone with this operation; on the contrary, it will be moved to the SIM card.

IP Dial: If IP dial has been set, an IP prefix number will be added in the front of the number and an IP call will be made (see "IP number" in call setup); otherwise, a common call will be made.

4.2.3 Add New Entry

With this function, you can add new entries to the phonebook. You can add them to the SIM card or the phone, specific operations are as follows:

- Select "Add New Entry" in the phonebook menu, and then select "To SIM" or "To Phone".
- If you select "To SIM", press "OK" soft key; after you edit names, press "Done" and Up/Down key of the Selection key to input "Number", then select "Save".
- Select "To Phone" and press "OK" soft key; First input the name, and press "Edit" soft key; this mobile phone offers you Multitap ABC Input Method (ABC), Multitap abc Input Method (abc), Numeric Input Method (123), eZi Text ABC Input Method (eZi ABC), eZi Text abc Input Method (eZi abc), etc. Refer to "Appendix A: Guidance of Input Methods"; then press "Options" soft key and select "Done" soft key.
- Then press Up/Down key of Selection key to select the information items you want to input the phone Number..
- If you input wrong characters, press "Clear" soft key to clear final characters you input. If you want to delete all characters you input, you can press and hold "Clear" soft key for a few seconds.
- Finally, press "Done" soft key to complete adding new entries.

Note: When editing E-mail address, press "#" key to switch input methods.

4.2.4 Copy

With this function, you can copy the phonebook entries between the phone and SIM card.

Note: If the storage capacity for the phonebook in the phone is different from that for the phonebook in the SIM card, the phonebook with smaller storage capacity shall prevail during copying.

4.2.5 Move

With this function, you can move the phonebook entries between the phone and SIM card.

Note: If the storage capacity for the phonebook in the phone is different from that for the phonebook in the SIM card, the phonebook with smaller storage capacity shall prevail during copying.

4.2.6 Delete

With this function, you can completely delete all contents in the phonebook of the phone or the SIM card.

4.2.7 Caller Group

This function allows you to set group name, associate sound and member list.

4.2.8 Memory Status

- Display the used space and total space of phonebook in the phone and phonebook in the SIM card.

Note: After you switch on the phone and it find the network, you view the phonebook immediately and "Processing" is displayed on the LCD, it means that the phonebook is under initialization, please view the phonebook after a few seconds.

4.3 CALL HISTORY

In the idle mode, press left soft key to enter the menu and select "Call History", or press to view Call Logs.

4.3.1 Missed Calls

You can view the latest missed calls with the function.

- Enter the function, press Up/Down keys to select one phone number.

Press "Option" conduct the follow operations:

Delete: Delete the item from the list of missed calls.

Save: Save the selected numbers to SIM card or the phone.

Edit: Edit the selected number and save it to SIM card or the phone.

Dial: Dial the selected phone number.

IP Dial: IP Dial the selected phone number.

Write message: Edit message and send it to the number.

Black List: Join the Black list

4.3.2 Received Calls

You can view the latest received calls with the function. You can delete, save, dial or edit the received call selected by you after entering the function, please refer to "Missed Calls" for details.

4.3.3 Dialed Calls

You can view the latest dialed calls with the function. You can delete, save, dial or edit the selected call after entering the function, please refer to "Missed Calls" for details.

4.3.4 Delete Call Log

You can remove all records of missed, dialed or received calls with the function.

4.3.5 Call Time

With this function, you can view the call time for the last call, total sent and total received calls and reset all time.

- **Last call time:** The last call time can be checked.
- **Total Sent:** Total call time can be checked.
- **Total Received:** Total time for received calls can be checked.
- **Reset All Time:** Reset the counters.

4.3.6 Call Cost

You can check Last Call Cost, Total Cost, Reset Cost, Max Cost and set Price Per Unit.

- **Last Call Cost:** You can check last call charge.
- **Total Cost:** You can check the upper limit on call charge.
- **Reset Cost:** You can check and modify the call rates. PIN2 code is required when modifying.
- **Max Cost:** You can check and modify total call charges. PIN2 code is required when modifying.
- **Price Per Unit:** You can check and modify the upper limit on call charge. PIN2 code is required when modifying.

Note: The function depends on SIM card, some SIM cards do not support the function, PIN2 is provided by the network operator; please contact the network operator for the PIN2.

4.4 GAMES

You can play the games.

Note: Game menu includes Start Game, Game Audio, Best Grades and Game Help.

4.5 ORGANIZER

4.5.1 Alarm

This mobile phone supplies three alarms to you, you can set up them as you required. If you did not start up the alarm, there will be no icon ahead, a “ √ ” mark will be ahead after starting up. Choose the Edit soft key, enter into the function of setting the alarm:

- Select On.
- Set the time of activating alarm.

- Choose the way of ringing you need: Once, Everyday, Days (this can be finished by pressing the down key and then activating).
- Press the Done soft key.

Note: when an alarm is ringing, if you choose Snooze or don't operate to prevent ringing, the alarm will default that you did not hear the ring; five minutes later, it will ring again; if you are still like before, every five minutes it will ring to prompt you.

4.5.2 Calculator

This mobile phone provides you the function of calculator; you can plus, minus, multiply and divide. The using steps as follows:

- Input the first number: when "0" appears on the screen, please input the first number you want to count (press "#" key to input the decimal point).
- Input operator: those up, down, left, right of the direction keys and OK soft key correspond to the sign of +, -, *, /, = separately.
- Input the second number.
- Calculate the Result: Press OK soft key, the result will appear on the screen.
- Count On: If you use the existing result to count, you should press the left/right keys or up/down keys of the direction key to input the operator, then input the second number.
- Clear: Press clear soft key. Clear according to the existing input situation. If you have got the result, clear it to "0". If you are inputting the operand or operator, clear the current one only.

Quit this function: Press the return soft key. If there is no return key on the screen, press the clear soft key to quit step by step.

4.5.3 Stopwatch

You can use the Stopwatch.

4.5.4 To Do List

Press the Left Soft key to add new memo.

- Set the date of activating the To Do List.
- Set the time of activating the To Do List.
- Input the note text of the To Do List.
- Start up the alarm ..
- Press the Done soft key.

Select a memo, you can View, Add, Edit Task, Delete Task and Delete All as required.

4.5.5 STK Service

This service is provided according to the SIM card service which provided by the network operator.

4.6 USER PROFILES

4.6.1 General

Activate

Tone Setup: Includes Incoming Call, Alarm, Power On, Power Off, Message Tone, and Keypad Tone. You can choose the built-in ring tones, or the tones composed by yourself.

Volume: Includes the volume setting of Ring Tone .

Alert Type:

- Ring: Just ringing, no vibration.
- Ascending: Select ascending.
- Vibration Only: Just vibrating, no ringing.
- Vibra and Ring: Vibrating and ringing.
- Vibra Then Ring: Ring after vibration.

4.6.2 Meeting

The detailed operation has been shown in the “General”.

4.6.3 Outdoor

The detailed operation has been shown in the “General”.

4.6.4 Indoor

The detailed operation has been shown in the “General”.

4.7 SETTINGS

Press “Menu” soft key in idle mode. Press Left /Right or Up/Down key to select “Settings”. Press “OK” soft key to enter the function.

4.7.1 Phone Setup

Time and Date:

Set Time/Date: Set time and date.

Set Data Format: Set Time format and Date format.

Schedule Power On/Off: With this function, you can set the time for automatically turning on or off your phone. To use this service, you have to activate it first, and then set Power On or Off and set the time.

Note: please disable the Schedule Power On function before you aboard the plane.

Language: Select language for display text.

Input Methods: Set the default input method for wording editing.

Greeting Text: When set to ON, greetings can be displayed when Power ON.

Speed Dial: When set ON, 8 sets of numbers available for you to set for quick dial (corresponding numeric key 2 ~numeric key 9) ,Long press on the corresponding numeric key in the idle interface to dial the corresponding phone number.

Dedicated Key: You can define the shortcut function of Up, Down, Left, Right of direction key as you like, press the corresponding key to enter the specified function in idle mode.

Shortcuts: Use this function you are allowed to set shortcuts, after finished, return to the main menu to enter into the sub-menu of Settings, set some one to be the function of Shortcuts during setting Dedicated key (selection key) of Phone Setup. On the idle screen, you can press the corresponding direction key to go to the function menu speedily.

4.7.2 Display Setup

Wallpaper: Set the Wallpaper.

Luminance Adjust: Set the Luminance of LCD.

Contrast: Adjust the contrast of LCD.

LCD Backlight: Set the time of Backlight.

4.7.3 Call Setup

Caller ID: You can select the system presetting provided by the network operator to hide or send the number. The default setting by the factory is Set By Network.

Note: It has something to do with network, so select "Hide ID" probably causes the failure to dial. Please test it to ensure that everything is ok with talk over the phone before use the function.

Call Waiting:

- **On:** When activating the function, the mobile phone will be connected with network. After a while, the network will response by sending the message to OK your operation. If you start Call Waiting, you will receive the alarm from the network if someone calls you when you are talking over the phone, and the phone number of the caller will appear on the screen.
- **Off:** If you cancel the function, you will not receive the alarm from the network if someone call you when you are talking over the phone.
- **Query Status:** You can inquiry with the network about the current status with the function.

Call Divert: The network service allows the incoming call to transfer to another phone defined by you. Enter Call Setting, select Call Divert and press OK to enter the function.

- **Divert All Voice Calls:** When activate the function, all incoming calls will be diverted to the defined number. Select Activate or Deactivate, then the phone will connect the network, after a while, the network will response and advise the operation result.

- **Divert If unreachable:** When activate the function, the incoming call will be diverted to the defined number if not reachable. Select Activate or Deactivate, then the phone will connect the network, after a while, the network will response and advise the operation result.
- **Divert If No Answer:** When activate the function, the incoming call will be diverted to the defined number if no answer within the specified time. Select Activate or Deactivate, then the phone will connect the network, after a while, the network will response and advise the operation result.
- **Divert If Busy:** When activate the function, the incoming call will be diverted to the defined number when busy. Select Activate or Deactivate, then the phone will connect the network, after a while, the network will response and advise the operation result.

Note: The fore-said four divert operations:

- **Activate:** Activate it after inputting the divert number.
- **Deactivate:** Cancel the function.
- **Query Status:** Inquire with the network about the current status of some divert function. The phone will contact the network, after a while, the network will response and inform you of the result.
- **Cancel All Divert:** Cancel various divert with the function, i.e. set all divert functions Deactivate. Select the function, then the phone will connect the network, after a minute, the network will response and advise the operation result.

Call Barring:

You can bar the calls with the function. The network bar password provided by the network operator is required for you to set the function. You will be advised if the password is not correct. After OK the option, select Activate or Deactivate, you will be required to input the bar

password, then the phone will contact the network, after a while, the network will response and informs you of the result.

- **Outgoing Calls:**

All Calls: When set it Activate, you cannot make phone call.

International Calls: When set it Activate, you can dial the international long distance calls.

International Except Home: When set it Activate, you only can dial the local call when you are abroad or dial the country where the network provider is.

- **Incoming Calls:**

All Calls: When set it Activate, you can not receive any phone call.

When Roaming: When set it to Activate, you cannot receive the incoming call when you are out of service.

Note: The fore-said five barring operations:

- **Activate:** Activate it after inputting the barring number.

- **Deactivate:** Cancel the barring function.

- **Query Status:** Inquire with the network about the current status of some barring function. The phone will contact the network, after a while, the network will response and inform you of the result.

- Cancel All: Cancel the call barring, network barring password provided by the network operator is required to cancel call barring.

- Change Barring PW: Modify the barring password with the function. Input the original barring password when modifying.

Call Time Reminder:

The function enables you to duly end talk to save call cost by prompt. The optional prompt types are "Off", "Single" or "Periodic"; No prompt when set OFF; When set Periodic, you are required to select a numerical value 45,50, and 55 seconds, the phone will automatically ring one time at the time before every full minute.

Connect Tone: Set On/Off.

Auto Redial:

Start or close the auto redial function. When set ON, the phone will automatically redial after a while if you fail to reach the receiver. The auto redial can be done for 10 times at best, during which you can not dial any other call, press Cancel to end the auto redial.

IP Dial:

Activate: Activate selected IP number.

Edit: Edit IP number.

Black List: Phone fire wall function, automate to refuse incoming calls, not notification any message.

Status: The status of fire wall, there OFF and ON.

Black List Number: Entering your black number.

4.7.4 Network Setup

Please contact the network operator for the following network service.

You can set it at Automatic or Manual to select the network (Auto is recommended). When selecting Automatic, the phone will make the preferential selection according to the network in which SIM card belongs to. When selecting Manual, you are required to select the

same network as the registered network with the network operator by SIM card for your use.

4.7.5 Security Setup

Some related setup options to security use are provided.

- **SIM Lock:**

Enter PIN: Enter the right PIN. When set SIM Lock at ON, you are required to enter PIN for each Power-On, PUK (Personal Unlock key) is required when you fail to enter the right PIN for three times. PUK is used to unlock and modify the locked PIN. Please contact the network operator if you are not provided with PUK or lost PUK.

- **Phone Lock:**

You can lock or unlock the phone; enter the password to activate or deactivate the phone lock; when the phone is locked, you will be required to enter the phone password for each Power-On. 4-8 figures for the phone password.

- **Auto Keypad Lock:**

You can lock/unlock the phone keyboard.

- **Fixed Dial**

If your SIM is eligible for this function, you can fix the dials. If the function is activated, the phone numbers in fixed dial list cannot be dialed. PIN2 is required for the function. Network support is required.

Note: PIN2 is not required before the phone is switched off if you enter PIN2 after the phone is switched on. Therefore, please switch the phone off and switch it on again after your setting if you do not expect others to change the status of fixed dial.

- **Change Password:**

You can change PIN, phone lock password with the function.

- Steps with PIN as follows:

The original PIN is required before changing PIN.

Enter the new PIN. 4-8 figures for PIN.

Enter a verified PIN

- Steps with PIN2 as follows:

The original PIN2 is required before changing PIN2.

Enter the new PIN2. 4-8 figures for PIN2.

Enter a verified PIN2.

- Steps with Phone Lock Password as follows:

The current phone password is required before changing the phone password.

Enter the new phone password.

Enter a verified password.

4.7.6 Restore Factory Settings

Enter “Settings” to select “Restore Factory Settings”, enter the phone password as prompted and press OK. All settings can be restored to factory settings with the function.

Note: Default password is“1234”.

4.8 SHORTCUTS

You can set shortcuts with this function. After you have finished, return

to the main menu to enter into the sub-menu of Settings, set some one to be the function of SHORTCUTS during setting Dedicated Key (Selection key) of Phone Setup. On the idle screen, you can press the corresponding direction key to go to the function menu speedily.

5 APPENDIX

5.1 APPENDIX A: GUIDANCE OF INPUT METHODS

This phone provides the input method of Multitap ABC Input Method (ABC), Multitap abc Input Method (abc), Numeric Input Method (123), eZi Text ABC Input Method (eZi ABC), eZi Text abc Input Method (eZi abc), etc. which can be used in editing phonebook, short messages, memos, greets, alarms and other text application.

5.1.1 The icons of input methods

After entering kinds of edit windows (including edit phonebook, short messages. etc.), the icons of Numeric and English inputs are:

- The input method of Numeric appears as: "123".
- The input method of Multitap ABC appears as: "ABC". The input method of Multitap abc appears as: "abc".
- The input method of eZiText® Smart ABC appears as: "eZi ABC".
- The input method of eZiText® Smart abc appears as: "eZi abc".

5.1.2 How to switch the input methods

- Press  key to switch the input methods.

e.g.: If the current input is eZi ABC, the screen will show "eZi ABC", press  key, enter into the input of eZi abc, the screen will show "abc".

5.1.3 Numeric、Multitap ABC and Multitap abc Input Methods

- **Numeric**

When the icon of input method is “123”, press the number keys to input the numbers directly.

- **Multitap ABC and Multitap abc**

When the icon is “ABC” or “abc”, repeatedly press the number keys (2 ~ 9) on which show the letters you required, until the letters appear in the text area. Press once the first letter on the number keyboard can be inputted, twice the second appears, and press in the same way.

Note: when in the way of Multitap and Numeric input, if blank is required, please switch to the method of Multitap ABC and Multitap abc first, then press “0” key to input blank.

5.1.4 How to Input Special Symbols

If you want to input special symbols, such as “, . ! ? = < >”, etc. When editing, please refer to the following steps: Press left soft key to enter option menu for the “Insert Symbols” in “Input method” or press to display symbols. Press the Up/Down, or Left/Right key of selection key to move the cursor in the symbol table, and then press Left Soft key to choose one symbol, or press Right Soft key to cancel the symbols selection.

5.2 APPENDIX B: MAINTAIN AND TROUBLE SHOOTING

5.2.1 Nurse and Maintain

Your phone is excellently designed and masterly-technics, so it should be well nursed. The suggestion as follows will help your phone to spend the guarantee safely and to be used for a long time.

- The mobile phone and all the parts and fittings should be kept out of children's reach.
- Keep it dry. Far away from rains, wetness, liquors and any other substances that may erode the electronic circuit. Don't use or deposit your phone at the place full of dust to avoid damaging the moving parts.
- Do not put the phone at the place of high temperature. High temperature may decrease the life of electronic circuit, damage the battery, and some plastic parts.
- Do not put the phone at the cold places. When in hot environments (to the normal temperature), the phone inside will form humidity, which may damage the electronic circuit.
- Do not use the corrosive chemicals, cleanser or heavy scour to clean the phone. With soft towel dipping into little soap water to wipe it.
- If your phone or any fitting can not work normally, please send them to the professional service department. There the workers will help you, and maintain if necessary.

Please cherish our lives, hand the waste and old products to the legal disposer to handle appropriately.

5.2.2 Troubleshooting

If you have abnormal feel when operating your phone, please recover the reset settings first and refer to the following troubles and the solutions. If you still can not solve them, please contact the service center or seller.

Troubles	Solutions
Can not answer or dial call	Make sure that the phone flip has been opened Make sure that the battery is still available. Make sure the signal intensity is high enough. Make sure the own number function in the call setting is system preset or number sending. Make sure the line switch in call setting is the system preset line. Make sure that whether you have set up call barring or fixed dialing and any other safety function. Make sure whether you have set up call divert. Make sure whether you have inserted the proper SIM card correctly.
Low voice	Make sure whether the volume has been set too low.
No ring	Make sure whether you have set up the vibration. Make sure whether the ring volume is too low Leave noise place. Make sure whether you have set up call divert.
LCD unclear	Make sure whether the contrast has been set too low.

5.3 APPENDIX C: INTRODUCTION OF AVAILABLE FITTINGS

5.3.1 Travel Charger

Used in traveling when charge is required.

Note: Please use dedicated KONKA accessories.

5.4 APPENDIX D: FUNCTION LIST

1 SMS

- 1.1 Write Message
- 1.2 Inbox
- 1.3 Outbox
- 1.4 Sent-Box
- 1.5 Draftbox
- 1.6 Report-Box
- 1.7 Use Template
- 1.8 Message Settings
- 1.9 Delete message
- 1.10 Memory Status

- 1.11 Voice Mail Server
- 1.12 Broadcast Message
- 2 Phone Book
 - 2.1 PhoneBook View
 - 2.2 Search Entry
 - 2.3 Add New Entry
 - 2.4 Copy
 - 2.5 Move
 - 2.6 Delete
 - 2.7 Caller Group
 - 2.8 Memory Status
- 3 Call History
 - 3.1 Missed Calls
 - 3.2 Received Calls
 - 3.3 Dialed Calls
 - 3.4 Delete Call Log
 - 3.5 Call Time
 - 3.6 Call Cost
- 4 Games
- 5 Organizer
 - 5.1 Alarm
 - 5.2 Calculator

- 5.3 Stopwatch k
- 5.4 To Do List
- 5.5 STK Service
- 6 User Profiles
 - 6.1 General
 - 6.2 Meeting
 - 6.3 Outdoor
 - 6.4 Indoor
- 7 Settings
 - 7.1 Phone Setup
 - 7.1.1 Time and Date
 - 7.1.2 Schedule Power On/Off
 - 7.1.3 Language
 - 7.1.4 Input Methods
 - 7.1.5 Greeting Text
 - 7.1.6 Speed Dial
 - 7.1.7 Dedicated Key
 - 7.1.8 Shortcuts
 - 7.2 Display Setup
 - 7.2.1 Wallpaper
 - 7.2.2 Luminance Adj

- 7.2.3 Contrast
- 7.2.4 LCD Backlight
- 7.3 Call Setup
 - 7.3.1 Caller ID
 - 7.3.2 Call waiting
 - 7.3.3 Call Divert
 - 7.3.4 Call Barring
 - 7.3.5 Call Time Reminder
 - 7.3.6 Connect Tone
 - 7.3.7 Auto Redial
 - 7.3.8 IP Dial
 - 7.3.9 Black List
- 7.4 Network Setup
- 7.5 Security Setup
 - 7.5.1 SIM Lock:
 - 7.5.2 Phone Lock:
 - 7.5.3 Auto Keypad Lock:
 - 7.5.4 Fixed Dial
 - 7.5.5 Change Password:
- 7.6 Restore Factory Settings

8 SHORTCUTS

5.5 RF EXPOSURE INFORMATION AND STATEMENT

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types C625 (FCC ID: UT3KK625) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.625 W/kg and when properly worn on the body is 0.268 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or

more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help