

KONKA

R5

User manual

UNDERSTANDING YOUR DEVICE

DEVICE OVERVIEW

R5 is a smart phone, **Android Version 6.0.**



Position of keys

- | | |
|------------------|-------------------|
| 1. Earphone jack | 2. Front camera |
| 3. Volume | 4. Touch screen |
| 5. Back key | 6. Home key |
| 7. Record recent | 8. Earpiece |
| 9. USB Port | 10. Power key |
| 11. Back camera | 12. Battery cover |
-

13. Speaker

14. Flash

 
INSTALLING CARDS & BATTERY

Please switch off your device before inserting or removing the SIM card and memory card.

Installing SIM card or Memory card

In your phone there are two SIM card slots; Sim 1 slot can only use Micro SIM card, while sim 2 slot can only use Nano SIM card.

- Open the battery cover and battery.
- Insert the SIM card or memory card correctly.
- Push the SIM card to the correct position.

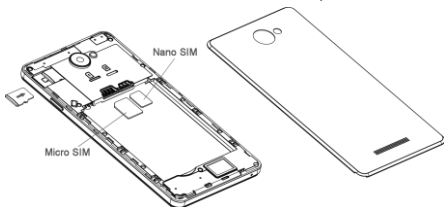

POWERING ON/OFF THE DEVICE

Turning On the Device

After installing the SIM cards and charging the battery, you are now ready to turn on your device.

- Long press the Power Key to turn on the device.
- The first screen that appears is known as the Home/Idle Screen.
- Drag up the unlock icon to release the screen.
- If the screen turns off, then short press the Power Key to turn on the display.









Turning Off the Device

- Long press the Power Key.
- A pop-up window appears, select Power off.

MAIN SCREEN OPERATING

 
Notification Panel

The table below lists various icons that might appear on the Notification Panel of the device.


	Network intensity of SIM card 1 or SIM card 2
	Battery level of the device
	New short message
	Missed call notification
	Headset is plugged in
	USB connected
	Wi-Fi is connected
	Bluetooth is activated

USING YOUR PHONE


Enter main menu

In idle mode press the  key to enter the main menu on the desktop and press the Home key to return.


 


To view recently used APP

Touch the  view the recent operation record. Drag the horizontal to delete the record.



To Make Calls

If the icon  appears on the screen, then you can make or receive calls.

To make a call, please follow the steps mentioned below:

- Select phone.
- Tap , enter the phone number using the on-screen keyboard.
- Tap  to delete a wrong number. Tap and hold it to erase the entire number.
- After entering phone number, tap .
- To end the call, tap .

Creating a Message

- Tap  compose new message.
- In "Type name or number" field; enter the recipient's phone number.
- Type message in the "Type text message" field.
- Tap  to send.

ALL RIGHTS RESERVED

©2016.All rights reserved! No replication allowed!

This handbook is for reference only. Software might upgrade any time, and no further notifications will be announced.

SAFETY PRECAUTIONS

Please read the following safety guidelines before using the device.

- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Cell phone can interfere with the functioning of medical devices such as hearing aids or pacemakers. Contacts having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/ headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- Use cell phone when the signal quality is good.

KONKA

Artisan's Spirit

Official Website



www.konkamobile.com/en

Shenzhen Konka Telecommunications Technology Co., Ltd

All Right Reserved ©

FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules.

Operation is subject to the condition that this device does not cause harmful interference.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.