

STK-7039RG




无线游戏手柄

适用于N-S / Lite / OLED / Android / IOS 13.0+ / PC

使用说明书

V1.1

按键功能介绍

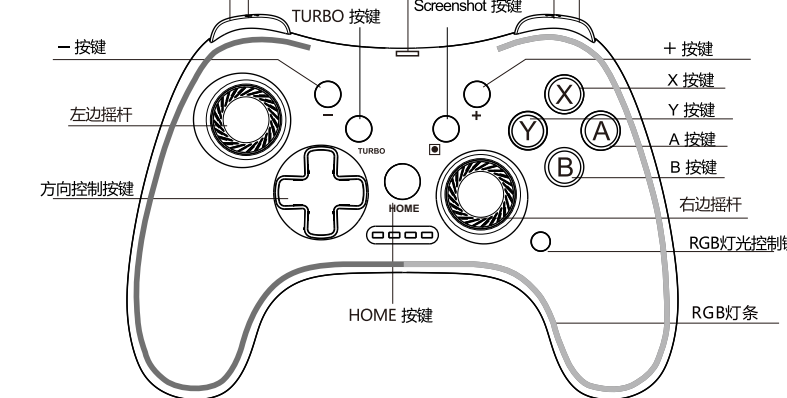

按键功能介绍

休眠模式&唤醒

关机

RGB 灯光控制

N-Switch连接模式



N-Switch连接模式

马达振动调节及指示

操作模式及开机方法

安卓游戏手柄模式




安卓游戏手柄模式

Xbox Wireless Controller 模式:适用IOS13.0+,安卓系统

PC 有线游戏手柄模式

Turbo / Auto 功能设置

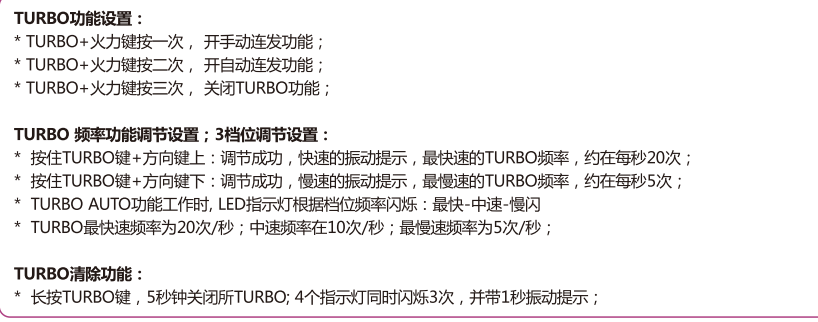


Turbo / Auto 功能设置

出厂水平校准

摇杆校准

升级及手柄高级功能设置

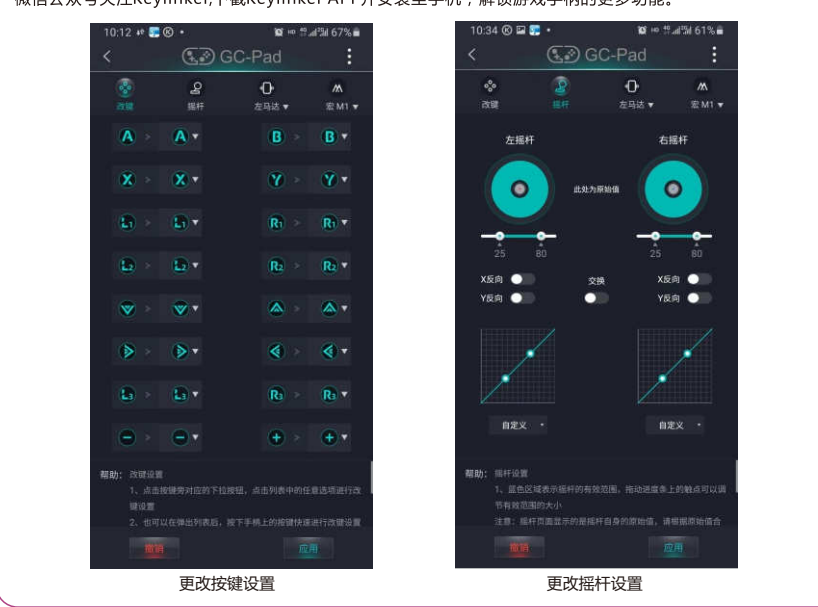


升级及手柄高级功能设置

升级游戏手柄

手柄规格

质保说明

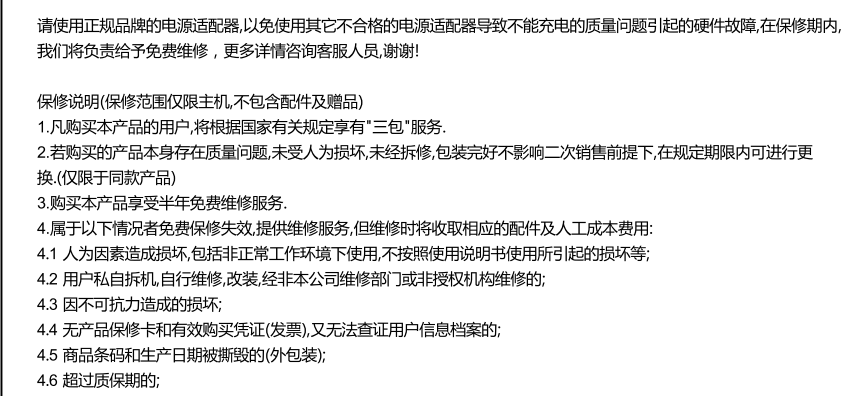

质保说明

注意事项

STK-7039RG




Wireless Controller

For N-Switch / Android / IOS 13.0 / PC

USER MANUAL

V2.1

Key Function Instruction

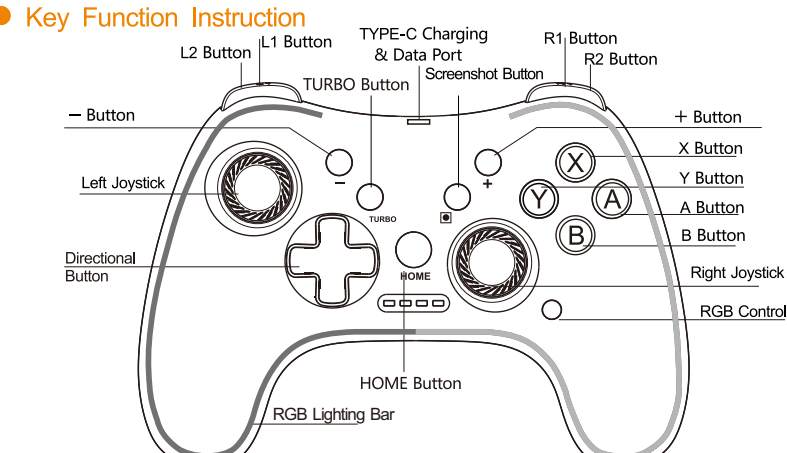


Key Function Instruction

RGB Lighting Control

Controller Mode & Operation

N-S Controller Mode

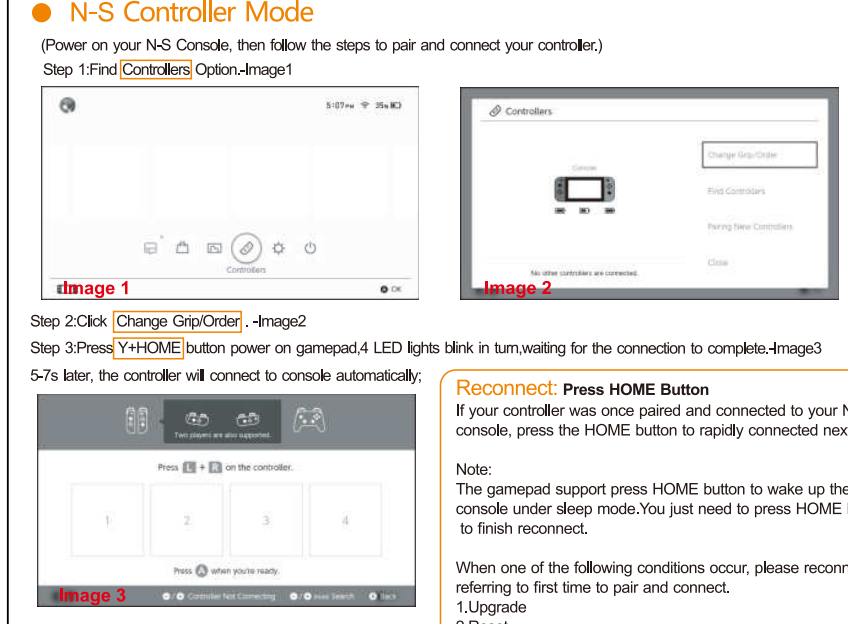


N-S Controller Mode

Adjust Joystick Sensitivity & Dead Zone

Specification

Update

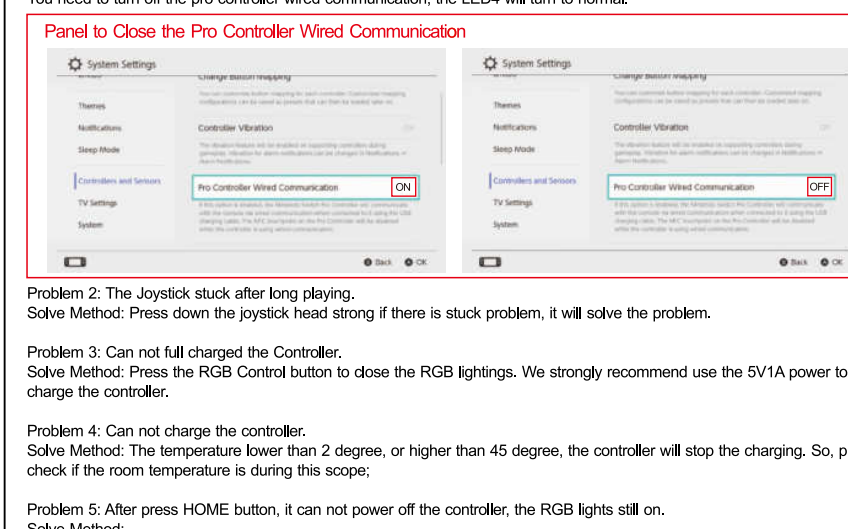


Update

Adjust Joystick Sensitivity & Dead Zone

Specification

Factory Motion Controls Calibration

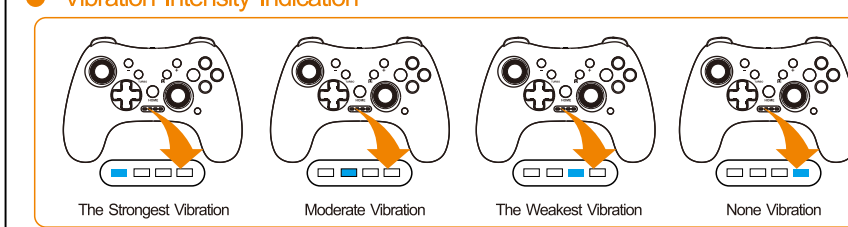


Factory Motion Controls Calibration

Calibrate Control Sticks

Sleeping Mode & Reconnect

Power Off

Adjust Vibration Intensity

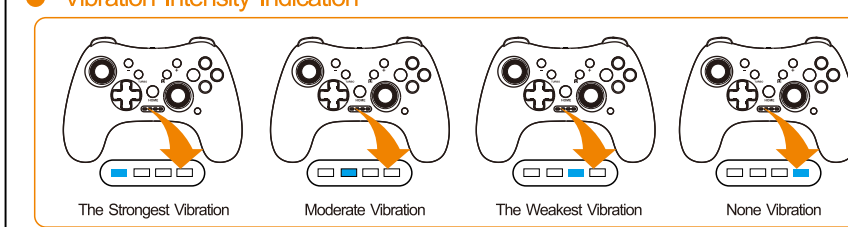


Adjust Vibration Intensity

Turbo / Auto Function

Charging Indication

Android Game Controller Mode

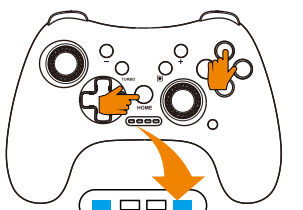


Android Game Controller Mode

PC Wired Controller Mode

Xbox Wireless Controller Mode for PC, Android & IOS13.0 above


FAQ

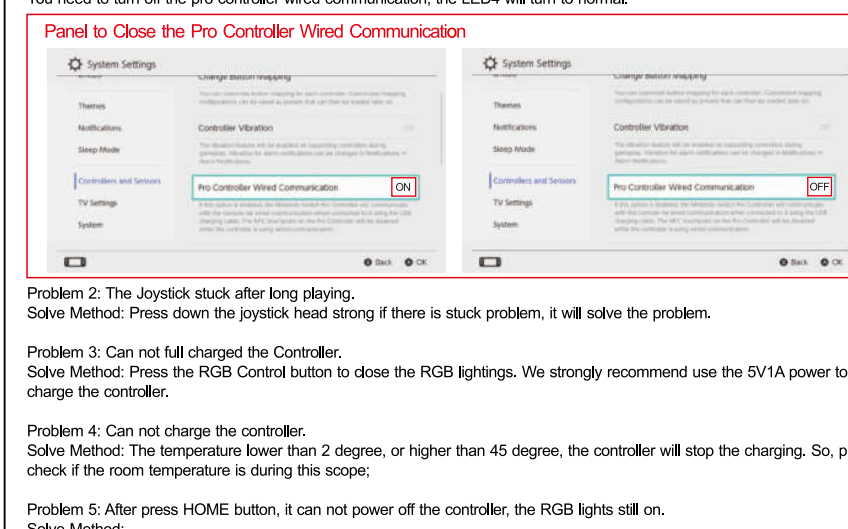

FAQ

Panel to Close the Pro Controller Wired Communication

FCC Information and Copyright

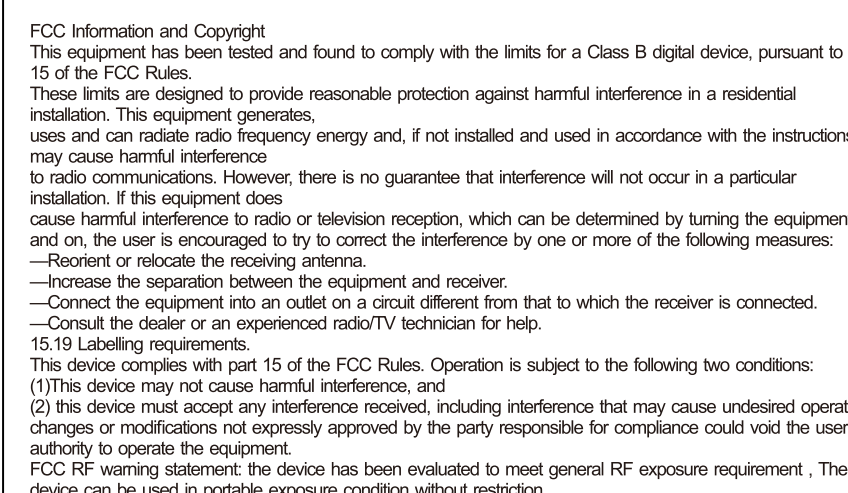

FCC Information and Copyright