

KEY FEATURE

- This is the air-ground dual-use GYRO helicopter with 5 channels, novelty design and in reason structure, performance stability with high quality. Let you not only could enjoy run the R/C car but also if yhelicopter. 2. Super wide data control, capacity IC control, fast exact reaction, make you exact control
- 3.Make of high strength plastic and metal material, with anti throw ability, flying stability.
- 4. Adopt newest 2.4G auto frequency matching technology, you can fly with your friends, not interrupt each other.
- 5.Particular air-ground dual-use function and light control function.
- 6. With start and weak power dual protection function, make helicopter flying more safety

and long life.

Welcome choice KOOME product, for your easy operate this helicopter, please read through the whole instruction Manual before starting to play your helicopter, keep and retain this information for further reference.

SAFETY PRECAUTIONS

- SATE TYPRECAUTIONS

 1. Small parts could hurt children to avoid such risk, keep it away from children.

 2. Don't leave the toy near a heat source such as fire or heater.

 3. Make sure you and other people keep 1.2 meters away from the helicopter while you start for flight to prevent it flying, landing or crashing on or near your head, your body and any other people.

 3. Always keep your eyes on the flying helicopter.

 4. Always keep your eyes on the flying helicopter.

 5. Adways keep your eyes on the flying helicopter.

 6. Adult guidance is recommended when child fly this helicopter.

 6. Adult guidance is recommended when child fly this helicopter.

 6. An on-rechargeable batteries are not to be recharged, transmitter need 6°1.5 V AA non-rechargeable batteries are not to be feecharged. The supply terminals are not to be short-circuited.

 7. The supply terminals are not to be short-circuited.

 7. The supply terminals are not to be short-circuited.

 7. The supply terminals are not to be short-circuited.

 
 7. The supply terminals are not to be short-circuited.


 7. The supply terminals are not to be short-circuited.

 7. The supply terminals are not to be short-circuited.

MEASURE AND TECHNOLOGY PARAMETER

ove bl		Stabilizer Mode conversion	Automatic demo		
PAF	RTLIST	Po	wer instructions		
	Body high: 17cm	Flying time: about 7 minute Running time on ground: about 13 minute	GYRO included, 2.4G antenna module included		
	Body width: 15cm	Body weight: about 216g	R/C semidiameter: more than 50m		
	Body length:20cm	Main propeller diameter:34cm	Charging time: 90-120 minute		



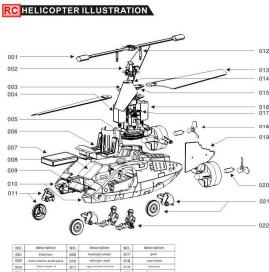

NO.	description	NO.	description	NO.	description
001	Stabilizer	009	headlight shade	017	gear
002	main rotation shaft parts	010	left/right shell	018	rear blade
003	Maintifest A	011	right wheel module	019	receiver
004	Head motor	012	Connection chain	020	Tail motor
005	main gear	013	main blade	021	left wheel module
006	seat	014	up bearing seat	022	soldier
007	battery	015	blade locker		
800	windshield	016	Rear motor		

Caution: The user is cautioned that changes

 
the user's authority to operate the equipment

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to corody with the limits for a Class Ridicital device, nursuant to part 15 of the FCC Rules These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause hamful inferience to radio communications. However, there is no guarantee that no effective many and the particular installation. If this equipment does cause hamful inferierence to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

 Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.



about 40minutes. Note: when LED on transmitter flash, it means battery power is not enough.
Please replace with new battery.

 
Set switch to "OFF" when charging, full charge need

FLIGHT CONTROL

1. Place the helicopter on the ground away from people, animal or others obstacle 2. Set transmitter switch to on, LED flash, push power sick to top and let it back to end, indicator light keep lighting, you can starf fly your helicopter 3. Set helicopter switch from 'OFF' to 'O'M', tall light and searchlight light up. LED flashing quickly, place helicopter on floor seconds, you can starf fly your helicopter. 4. Gently push the throttle up to take off your helicopter.



FLIGHT MODE Flight mode please set the switch to "flight mode" if you ready to fly it



Fly forward: push direction stick up, helicopter head adown and fly forward.



Fly backward: release direction stick, helicopter head upward and fly backward.





Fly right: Push left stick to right helicopter fly to right

LIGHT CONTROL

er on/off headlight

AUTO PLAY

- and mod, push left stick (accelerograph) to middle position and press auto play key, now it In running on ground mod enter into auto play mode.
- 2. Then shift to fly in the air mode to auto fly. 3. When finish auto fly, it hold on in air and waiting control.
- (warning: in auto play mode only can control left stick up and down, if control other keys will stop this mode

STUCK/ WEAK POWER PROTECTION

nd enter into protection state, this Sluck protection: when the helicopter meet stuck on flying, it will stop and enter into protection state, this time, you just need to repower on it and frequency matching again to recover. Weak power protection: when power exhaust, helicopter control system will auto protect battery, stop propeller power supply, this time, you need to recharge it

MAINTENANCE

- Clean the toy surface with soft cloth.
 Don't dispose the toy in sunshine or heat.

- 2. Don't dispose the toy in sunshine or neat.
 3. Don't immerse the toy in water, avoiding damage the electronic circuit.
 4. Please power off helicopter and transmitter after flying.
 5. Batteries are to be removed from the toy when not in use in long-term.
 6. New and alkaline batteries are recommended for use to obtain best and maximum
- New and an answer.

 New and a few and

EXAMINE AND REPAIR PROCESS

EXAMINE AND REPAIR PROCESS						
trouble	reason	trouble shooting				
Helicopter not reaction	battery exhaust	recharge helicopter 3h				
Emitter indicator	emitter power weak	replace now batteries				
flash (can not control)	Frequency matching fail	check whether helicopter normal and matching again				
Helicopter not	Helicopter power weak	recharge it				
reaction (can not control) headlight lighting or flash	frequency matching fail	Repower on it and make frequency matching (power off emitter, then power off helicopter, then repower on helicopter, helicopter headlight flash and repower on emitter, when emitter indicator stop flash and keep lighting means frequency matching success, this time you can fly (i).				
When helicopter Keep one side flying	stick be pushed to side when emitter checking	Frequency matching again: be sure right stick on middle position and left stick uprightness down				

WARNING

- It is your duty to make sure other one safety and not lead to possessions loss when flying.

- to possessions loss when flying.

 Strictly following introduction manual to assemble and debugging your helicopter and Keep hands. hair and loose clothing away from the propeller when power switch is turns on to avoid helicopter broken and people hurting.

 Our company and dealers will not burden any duty for any loss and people hurt which cause by improper operation.

- and people hurt which cause by improper operation.

 Not suitable for people who under if years old,

 Not suitable for people who under if years old,

 Sasemble and control it,

 assemble parts should be by adult.

 Small parts included, don't put into munth to avoid to hoking risk.

 Don't play it on street or nearby water to avoid hurt.

 To mord choking risk, keep the packing malerial away from children.

 To mord choking risk, keep the packing malerial away from children.

 To mord choking risk, keep the packing malerial away from children.

 The mord choking risk is the pack packing malerial away from children.

 The mord children risk is the packing malerial away from children are in the packing malerial away from children and the packing malerial away from the packing
- Only specified power source could charge the battery box.
 Only use original charge to recharge.
 Only use original charge to recharge.
 Could ficharge to force clean it.
 Don't aim the antenna to others or yourself face, eyes to
 work the country of the country of

- - fire or heat. Batteries are to be removed from the toy when not in use in
 - Interest are to be reintoyed from the doy when for his self-long-term.

 The colors and contents may vary from illustrations on introduction manual and packing.

 Keep and retain the introduction manual for further reference