 


料号：
 项目：H876-05
 品名：说明书
 版本：V1

更新日志


图档识别



图档比例: 1:1

技术要求

- 1.尺寸：655x108mm，折后95mm
- 2.材质：100g书纸
- 3.印刷：单黑印刷
- 4.工艺：
- 5.公差：±1mm
- 6.备注：

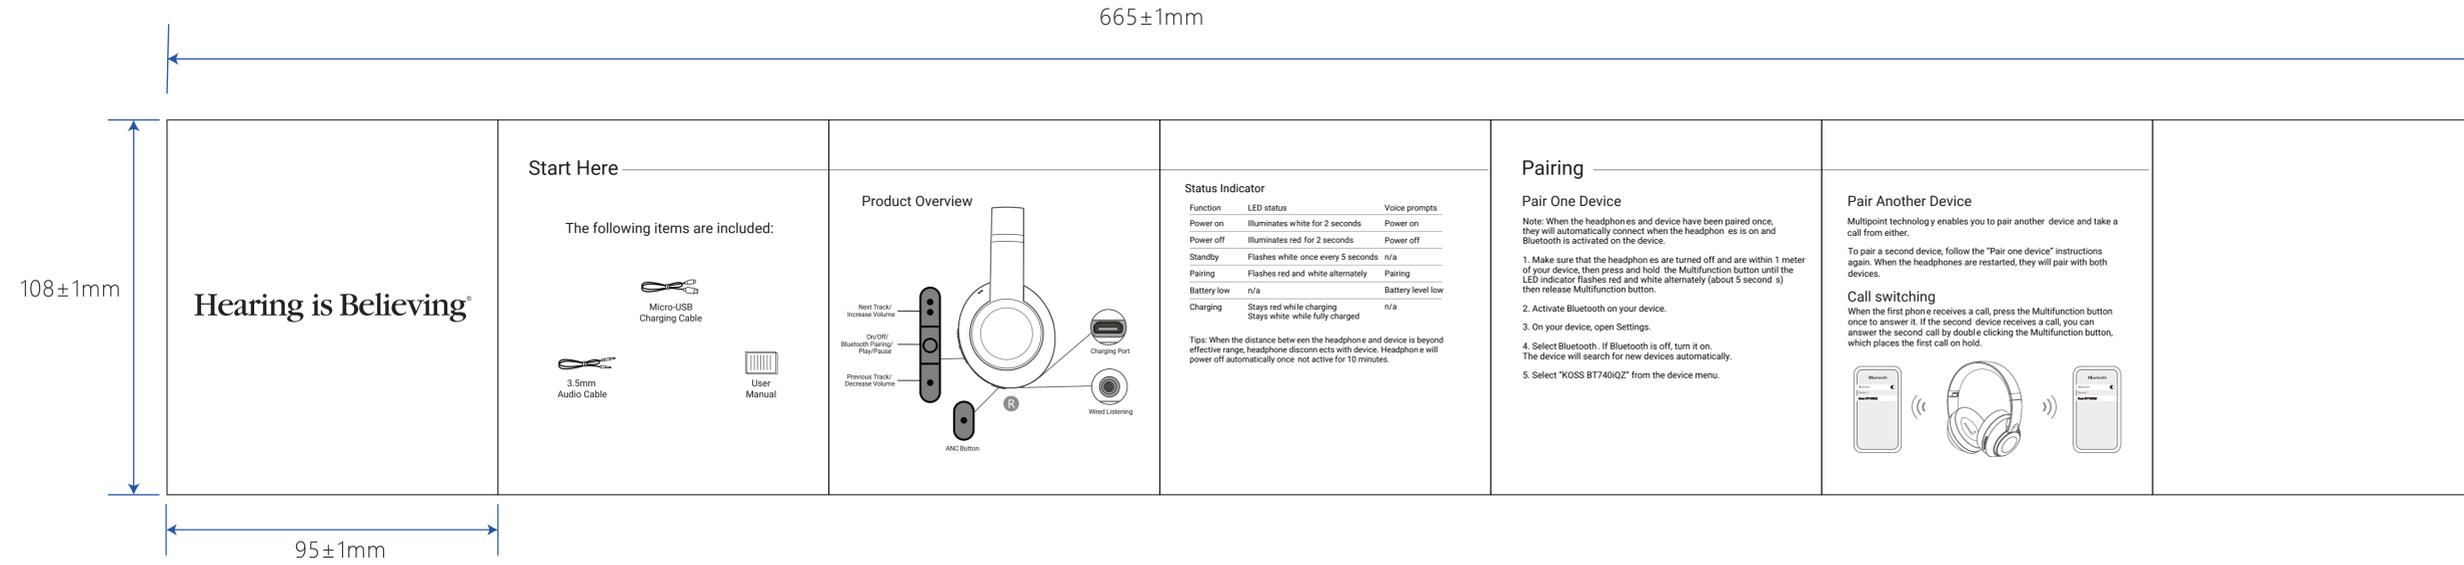

<p>Call</p> <p>Answer a call Press the Multifunction button once.</p> <p>Reject a call Press and hold the Multifunction button for 2 seconds.</p> <p>End a call Press the Multifunction button once.</p> <p>End current call and answer new call When a new call rings during a call, press the Multifunction button once to answer the new call and end the current call simultaneously.</p> <p>Place current call on hold and answer new call When a new call rings during a call, double press the Multifunction button to answer the new call and place the current call on hold.</p> <p>Reject the new call on hold the current call If new call comes in during active call/long press the Multifunction button for 2 seconds to reject the new call and keep the active call</p>	<p>Switch between the headphones and device Press the Multifunction button for about 2 seconds during a call to switch to the mobile phone. Redo this operation to switch back to the headphones.</p> <p>Calling with voice assistant (Device support needed) In standby mode, double press the Multifunction button, wait for device prompt, and tell the device to dial the name of a stored contact.</p>	<p>Music</p> <p>Music Play/Pause Press Multifunction button once to play / pause music. (Some devices may require you to start a media player first.)</p> <p>Next Track/Previous Track Long press the Volume + for 2 seconds once to skip Next Track. Long press Volume - for 2 seconds once to skip Previous Track.</p> <p>Volume Up/Volume Down Short press the Volume + to incrementally increase the volume. Short press the Volume - to incrementally decrease the volume.</p> <p>Note: Media player is needed to support this functionality.</p>	<p>Basic Operation</p> <p>Charging It takes 2.5 hours to fully charge headphones. The red indicator light is always on during charging. The red light will go out immediately after unplugging the charging cable. When fully charged, the red light goes out and the white light stays on.</p> <p>Note: The lifetime of the battery will be significantly reduced if your headphones are left uncharged for a long period of time. We recommend that you recharge your headphone at least once a month.</p>	<p>Active Noise Cancellation (ANC)</p> <p>When powered on and/ or connected to device via audio cable</p> <p>ANC LOW: Long press ANC button for 2 seconds ANC HIGH: Longpress ANC button again for 2 seconds ANC OFF: Long press ANC button again for 2 seconds</p> <p>Ambient Sound</p> <p>When ANC is ON AMBIENT SOUND ON: Short press the ANC button AMBIENT SOUND OFF: Short press the ANC button again</p>	<p>FCC Statement</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates electromagnetic energy and, if not installed and used in accordance with the instructions, may cause harmful interference with other radio communications. However, there is no installation. This his equip ent generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipm ent off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure statement. The device can be used in portable exposure condition without restriction.</p>	<p>Safety and Care</p> <p>Using earphone at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised that you keep volume levels moderate to low at all times for your safety.</p> <p>Do not use while driving a car, cycling, operating machinery, or performing other activities that require you to hear surrounding sounds.</p> <p>Do not use headphones during a thunderstorm, the headphones may not work properly under those conditions, and may increase the risk of being hit by lightning.</p> <p>Headphones may not work properly in high temperatures or high humidity conditions.</p> <p>Do not use any corrosive cleaner/oil to clean the headphones.</p> <p>If the headphones comes in contact with liquid s, quickly wipe away. If submerged in water, do not turn the headphones on until completely dry. Tips: Submersion in liquid voids the warranty.</p> <p>Keep the headphones and packaging out of reach of children.</p>
--	---	--	--	---	--	---

注：所有材料必须满足ROHS2.0、REACH及CA65最新环保测试要求

设计/制作：清子



审核/批准：

本资料所载之图案及文字均为科奈信科技有限公司的智慧财产。任何未经授权的影印，转写或照相之复制行为，将受到智慧财产权保护法之追究。