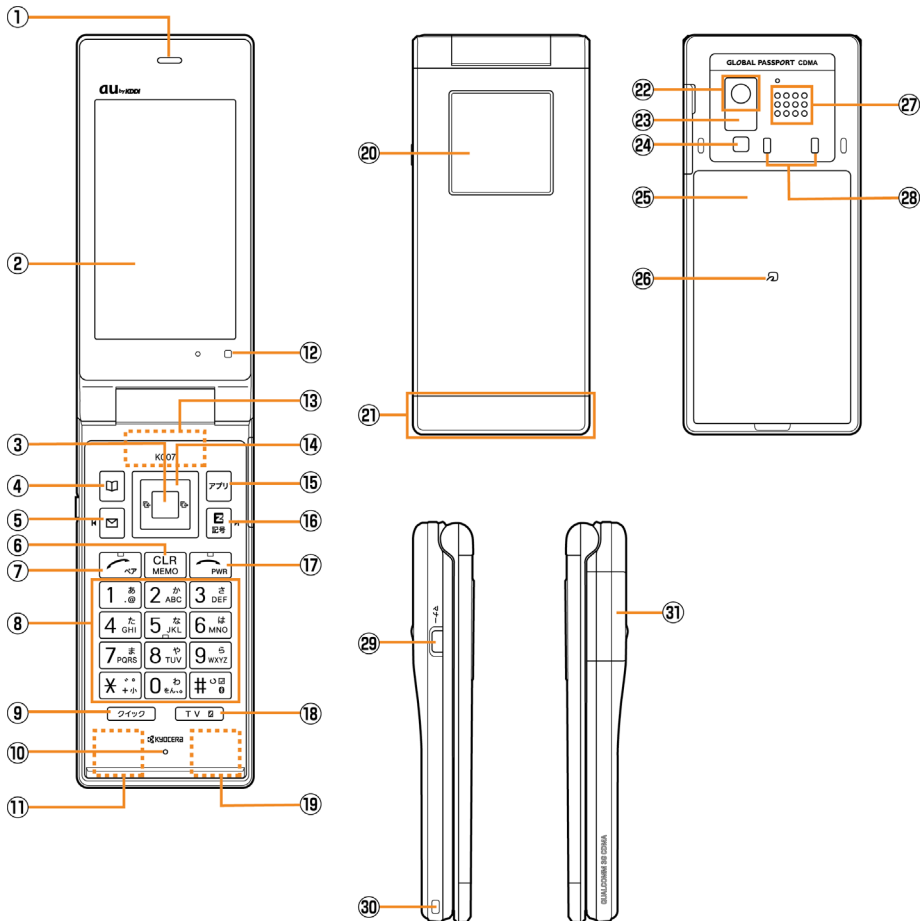 


Operating Instructions

Name & Function of Parts




- | | |
|----------------------------------|------------------------------------|
| ① Earpiece | ①⑦ Power/End key |
| ② Main Display | ①⑧ TV key |
| ③ OK key | ①⑨ Built-in antenna(for Bluetooth) |
| ④ Address book key | ②⑩ Sub Display |
| ⑤ Mail key | ②⑪ Illumination |
| ⑥ Clear /Memo key | ②⑫ Camera lens |
| ⑦ Answer/Pair key | ②⑬ Infrared port |
| ⑧ Number keys | ②⑭ Flash/Camera start indicator |
| ⑨ Quick key | ②⑮ Battery pack/cover |
| ⑩ Microphone | ②⑯ FeliCa mark |
| ⑪ Built-in antenna(Sub antenna) | ②⑰ Speaker |
| ⑫ Optical sensor | ②⑱ Charging terminals |
| ⑬ Built-in antenna(Main antenna) | ②⑲ Manner key |
| ⑭ Cursor key | ③⑰ Strap hole |
| ⑮ Application key | ③⑱ External connection jack/cover |
| ⑯ EZ key | |

■ Power saving during standby

In order to minimize the power consumption, the K007 display turns automatically to power saving mode when key operation is stopped for a while.
The indication restores with key operation.



key

In this manual, the point at which to press the  key is indicated as shown below.


Example) Press  or  → 

Getting Ready to Make a Call

 
1. Charging with the AC Adapter

The battery charger can be charged by directly inserting the AC Adapter connector into the external connection terminal on the K007 Main Unit.




 

2. Turning the power on

Press and hold  or more than one second.


 
◆Turning the power off

Press and hold  for more than one second.

Switch to English

1. Press  on the standby screen.
2. Select "機能設定" and press  (選択).
3. Press  .
4. Select "English" and press  (Set).

Displaying your own phone number

1. Press  on the standby screen.
2. Press  to display your au telephone number.

Making a Call


 
1. Enter the phone number you want to call on the standby screen.


Area code - Local code - Subscriber's number.

<Example> 03-0001-XXXX


Always include the area code, even when calling to a number in the same area you are in.

 
If you enter a wrong number:

- Press  briefly - the last dialed digit will be deleted.
- Press and hold  - the entire phone number will be deleted.

2. Press  to make a call.


Making an International Call


1. Enter the phone number you want to call using the following pattern on the standby screen.
International dial code - Country code - Area code - Subscriber's number
2. Press  to make a call.
<Example> to call United States, number 212-123-XXXX in the USA.


	Operation	Explanation
1	Pressing "005345"	Access code
2	Pressing "1"	Country code of United States: 1
3	Pressing "212"	Area code ※ : 212
4	Pressing "123-XXXX"	Subscriber's number: 123-XXXX
5	Press 	The following operation is the same as the normal telephone operation.

※ When the first number of the area code is "0", press the area code number without "0".

Adjusting the receiver volume

1. During a call, press .

 




: Volume level raised.

: Volume level lowered.

Answering a call

1. The ringer tone sounds/vibrator buzzes, and the incoming call lamp flashes.
2. Press  to answer the call.

An incoming call can also be answered by pressing any of the

        keys.


If you do not answer the call or the caller disconnects before the call is answered,

"  Missed Call X " will be displayed. (A number appears in the "X".)

Entering characters

This is the method of entering names for registering address book and writing mail.

1. Press  (Char.Type).
2. Select the entry mode you want.

漢字	"Kanji", "Hiragana" entry mode (full size)	1234	"Number" entry mode (half size)
カナ	"Katakana" entry mode (full size)		"Pictographs" entry mode
ｶﾞｶﾞ	"Katakana" entry mode (half size)	Sym	"Symbol" entry mode
AB.ab	"Alphanumeric" entry mode (full size)	Face	"Face marks" entry mode
12	"Number" entry mode (full size)		
ABCD. abcd	"Alphanumeric" entry mode (half size)		

[Assignment of characters and key functions]

Characters are assigned to each key as shown below. Press a key repeatedly to cycle through characters assigned to that key.

Entry mode key	Kanji・Hiragana 漢字	Katakana カナ・カタカナ	Alphanumeric AB・ABCD	Alphanumeric ab・abcd	Number 12・1234
1 あ	あいうえおあいうえお	アイウエオアイウエオ	.@-_/ : ~ 1	.@-_/ : ~ 1	1
2 か	かきくけこ	カキクケコ	ABC2	abc2	2
3 さ	さしすせそ	サシスセソ	DEF3	def3	3
4 た	たちつてとつ	タチツテトツ	GHI4	ghi4	4
5 な	なにぬねの	ナニヌネノ	JKL5	jkl5	5
6 は	はひふへほ	ハヒフヘホ	MNO6	mno6	6
7 ま	まみむめも	マミムメモ	PQRS7	pqrs7	7
8 や	やゆよやゆよ	ヤユヨヤユヨ	TUV8	tuv8	8
9 り	らりるれろ	ラリルレロ	WXYZ9	wxyz9	9
0 お	わをんわ、。ー・～！？ (space)	[カナ] ワラン、。ー ー・！？(space)0 [カタカナ] ワラン、。ー ー・！？(space)0	[AB] [ab] 0(space)! ? , ' " _ . - [ABCD] [abcd] 0(space)! " # \$ % & ' () * + , - . / : ; <=>?[^\`~ { } ~		0
* かな	(before confirm) ` (Voiced Sound symbol) ° (Semi-voiced Sound symbol) Switches lowercase/uppercase (after confirm) 、。ー・～！？(スペース)		(before confirm) Switches lowercase/uppercase (after confirm) . , - ! ?		.
# かな		(before confirm)Reverse toggle of entered characters (after confirm)line change			line change

Remarks:

- “～” can be inputted only when inputting full-sized characters.It changes to “~”when inputting half-sized characters.
- It is not likely to be able to change line on the input of part of character screen.
- Inputting voiced sound symbol/semi-voiced sound symbol or switching uppercase/lowercase can be done by pressing # after inputting the character.
(A list of Pictographs, Face marks, and Characters is displayed if you press it after the inputted character is set.)

< Example > つ → っ → づ → っ ハ → バ → パ → ハ a → A → a

Registering in the Address Book

You can register frequently used phone numbers and E-mail addresses.
Up to 1000 addresses can be registered in the address book.

■ Registering in the address book

1. Press and hold for more than one second on the standby screen.

The screen to register a contact is displayed.

2. Enter the item you want.


















Select the icon of the item you want by  and press  (Select) to enter it.

As for the items you can enter, see "Items to register in the address book".

3. Press (Reg) .




■ Items to register in the address book

The following data can be put in the address book.




Basic	 Name	Up to 12 full size (24 half size) characters.
	 Reading	Up to 24 half size characters. Registered automatically after "Name" is entered.
	 Phone No.1~3	Up to 32 digits. Selecting from 7 Phone number types.
	 E-mail Address 1~3	Up to 64 half size alphanumeric characters. Selecting from 6 E-mail address types.
	 Group	You can classify it into 20 classes for managing.
	 Image	An image stored in the data folder is selected.
	 Call Img Dsp	You can set the display of the registered image.
	 Obtain GPS Info	Up to 66 byte.
Set	 Incoming Call	Setting the action (ringer, lamp) for voice call reception.
	 E-Mail Receive	Setting the action (ringer, lamp, ring time) for E-mail reception.
	 C-Mail Receive	Setting the action (ringer, lamp, ring time) for C-mail reception.
	 Secret Setup	Setting not to display the content of the address book.
Other	 Blood Type	Selecting from 4 blood types and "No Settings".
	 Birthday	Inputting date of birth.
	 Star Sign	Selecting from 13 constellations and "No Settings".
	 Address	Up to 40 full size (80 half size) characters.
	 Memo	Up to 40 full size (80 half size) characters.

Calling from the Address Book





Saved phone number in the Address Book can be loaded and a call is placed to that number.


















1. Press  on the standby screen.
2. Use  to scroll through and display the name you want.
3. Press .

Creating and Sending E-Mail

1. Press  on the standby screen.
2. Use  to select "Create New" and press .


Icons

-  : " Address" to which you send E-Mail  : " Text" which is the mail contents.
 : " Subject" of E-Mail
 : " Attachment" of E-Mail




3. Use  to select " [Address] " and press  (Select).
4. Press  (Select).
5. Use  to select "Direct Input" and press  (Select).
6. Enter the address and press  (OK).
7. Press  (OK) .
8. Use  to select " [Subject] " and press  (Select).
7. Enter the subject and press  (OK).
8. Use  to select " [Text] " and press  (Select).
9. Enter the body sentences and press  (OK).
10. Press  (Send).

Reading Received C-Mail

■ When you receive C-Mail








The message " [C-Mail] # " appears when receive new C-Mail.

The received C-Mail is stored in the Inbox.

1. Use  to select " [C-Mail] # " and press  (OK) .
Received C-Mail is displayed.

■ Reading C-Mail from the Inbox


C-Mail can be read from the Standby Screen when any now-read mail read again.


 
1. Press and hold  for more than one second on the standby screen.
2. Use  to select " Inbox" and press  (Select) .
3. Use  to select the folder including the C-Mail to read and press  (Select) .
4. Use  to select the C-Mail to read and press  (View) .

Using the EZweb Service


1. Press  on the standby screen.
2. Select " Top Menu/Search" and press  (Select).

To access information sites (sites that provide information):

Select the desired information site, and press  (Select).

- Pressing  returns the display to the previous display. Holding down  for a longer time returns you to **au one Top**.

Pressing  exits EZweb.

you can scroll the display up and down by pressing .

List of Basic Setup

■ M0 Profile

Mode No.	Function	Description
M0	Profile	Displaying own phone number and E-mail address

■ M1 Time / Toll / Sub

Mode No.	Function	Description
M11	Inquire Tool	Inquiring the call charge
M12	Call Time / Tool	Confirming the last call time and charge
M121	Voice Call	Confirming about voice call
M122	Voice Call(OS)	Confirming about voice call(overseas)
M13	Tool Display	Displaying estimated charge after call
M14	Tool Rate	Setting the multiplication of charge
M15	PCSit ViewerRate	Confirming the last charge about PC Site Viewer
M16	Subscription	Connecting the site for various application

■ M2 Sound/Vib/Lamp

Mode No.	Function	Description
M21	Incoming Setup	Setting for reception
M211	Incoming Call	Setting for voice call reception
M212	E-Mail Receive	Setting for E-mail reception
M213	Unreg E-Mail	Setting for unreg E-Mail reception
M214	Message Receive	Setting for message reception
M215	C-mail Receive	Setting for C-mail reception
M216	NewsFlash Receive	Setting for NewsFlash reception
M22	Machi-Uta Setup	Setting for Machi-Uta
M23	Operation Tone	Setting for operation tone
M231	Keypad Tone	Setting key-in confirm tone volume
M232	OK Tone	Setting OK tone volume
M233	NG Tone	Setting NG tone volume
M234	Opening Tone	Setting sound/ volume of opening tone
M235	Closing Tone	Setting sound/ volume of closing tone
M236	RechargeStartTn	Setting recharge start tone volume
M237	RechargeComp.Tn	Setting recharge complete tone volume
M238	Wake-Up Tone	Setting wake-up tone
M239	Power OFF Tone	Setting power OFF
M24	Earphone Setup	Setting for earphone
M241	Earphone Type	Setting of kind of earphone
M242	Sound Output	Setting at output destination of earphone
M243	Auto Answer	Setting for answering calls automatically
M25	Lamp Setup	Setting for various lamp
M251	Talking Lamp	Setting for lamp while talking
M252	Information Lamp	Setting for Information lamp
M253	Mail Send Lamp	Setting for Mail Send lamp

M254	Close Lamp	Setting for Close lamp
M255	Event Lamp	Setting for Event lamp
M256	Birthday Lamp	Setting for Birthday lamp
M257	RechargeStartLamp	Setting for RechargeStartlamp
M258	RechargeComp.Lamp	Setting for RechargeComp.lamp
M26	Key Illum. Setup	Setting for Key Illumination
M261	Incm Call Illum.	Setting for Incm Call Illum.
M262	Outg Call Illum.	Setting for Outg Call Illum.
M263	Mail Sending Illum.	Setting for Mail Sending Illum.
M264	Wake-Up Illum.	Setting for Wake-Up Illum.
M265	Power OFF Illum.	Setting for Power OFF Illum.
M266	Open Illum.	Setting for Open Illum.
M267	Event Illum.	Setting for Event Illum.
M268	Birthday Illum.	Setting for Birthday Illum.
M269	Information Illum.	Setting for Information Illum.
M260	Talk Start Illum.	Setting for Talk Start Illum.
M26**	EZweb Start Illum.	Setting for EZweb Start Illum.
M26#	Infrared Illum.	Setting for Infrared Illum.
	Bluetooth Illum.	Setting for Bluetooth Illum.
	Camera Shoot Illum.	Setting for Camera Shoot Illum.

■ M3 Screen Display

Mode No.	Function	Description
M31	Main Display	Setting Main display
M311	Standby Screen	Setting image to display on standby screen
M312	Information Setup	Setting information to display on standby screen
M313	Mail Sendg Scrn	Setting image to display while sending mail
M314	Mail Rcvg Scrn	Setting image to display while receiving mail
M315	EZ Connect Scrn	Setting image to display while connecting to EZweb
M316	Graphic Stand	Setting image to display while charging
M32	Sub Display	Setting Sub Display
M321	Clock	Setting clock of Sub display
M322	Lighting Time	Setting lighting time of Sub display
M323	Font Color	Setting font color of Sub display
M33	Disp. Lighting	Setting lighting of display and keys
M331	Main Display Light	Setting lighting of main display
M332	Key Light	Setting lighting of keys
M333	Recharging Display	Setting lighting of recharging display
M34	Font Size	Setting character size
M331	Input Size	Setting character size for input
M332	Mail Display	Setting character size for mail display
M333	EZweb Display	Setting character size for EZweb display
M334	Address Book	Setting character size for address book
M335	History	Setting character size for history
M336	Phone No.	Setting character size for phone number
M35	Set Language	Setting the English/Japanese display
M36	Power Saving Mode	Setting low-power consumption for increasing the life of battery

■ M4 Privacy/Rstr

Mode No.	Function	Description
M41	Security Lock	Locked setting
M411	Auto Lock	Setting auto lock
M412	Close & Lock	Setting Close & Lock
M413	FeliCa Lock	Setting FeliCa lock
M414	AddresBookLock	Setting addres book lock
M415	Rem. Ctrl Lock	Setting remote auto lock
M42	User Restrict	Restricted user's setting
M421	Dial Restrict	Disabling dial-up calls
M422	EZweb Restrict	Restricting EZweb access
M423	PCSiteViewerRstr	Restricting the start of PC Site Viewer
M424	Mail Restrict	Restricting mail access
M425	EZapps Restrict	Restricting EZappli access
M426	MediaTuner Rstr	Restricting MediaTuner
M427	Secret Mode	Setting Secret
M43	Incom ing Reject	Rejecting designated unwanted phone numbers

M431	Specified No.	Rejecting Incoming form specified numbers
M432	ID Unset	Rejecting Incoming form ID Unset
M433	Payphone	Rejecting Incoming form payphone
M434	Not Support	Rejecting Incoming form Not Support
M435	Unreg Adres Bk	Rejecting Incoming form numbers not registered in Address Book
M436	Reject All	Rejecting all Incoming calls while roaming abroad
M437	Save Incm History	Set whether to save or not to save in incoming history
M44	Change Lock No.	Changing lock number
M45	Reset	Various resets
M451	Learning Reset	Initializing the character memory
M452	Function Reset	Initializing all functions
M453	Memory Reset	Initializing all memories
M454	EZapps Reset	Initializing the EZapplis
M455	All Reset	Initializing all functions and memories
M46	Caller ID	Announcing your number to the other party
M47	PIN Code Setup	PIN code setting
M471	Change PIN Code	Changing PIN code
M472	Need/No Setup	Setting whether to input PIN code when powered ON or using au certificate
M48	Cert. Setup	Certificate setting
M481	Cert. Disp	Displaying downloaded certificate in detail
M482	Confirm Disp	Setting whether to display check screen when sending certificate
M483	Root CA	Setting to display Root Certificate
M49	Emer. Position	On emergency call, location information notified to emergency can be viewed
M40	Incoming Display	Setting to display while incoming call

■ M5 User Support

Mode No.	Function	Description
M51	Input	Setting for the character input
M511	User Dictionary	Registering words in the list
M512	Edit Phrase	Editing phrases
M513	Edit Face Mark	Editing Emoticon
M514	Input Setup	Setting for the input prediction
M515	D/L Dictionary	Registering the dictionary downloaded from EZweb
M516	Write Now Setup	Setting for Write Now
M52	Emission OFF	Restricting call and transmission functions
M53	Network	Setting for network service
M531	Play Voice Mail	Listening to messages
M532	Voice Mail1	Setting the answering message service 1
M533	Voice Mail2	Setting the answering message service 2
M534	Voice Mail OFF	Stopping the answering message service
M535	Change Ans. Msg	Recording/Confirming/Changing response messages
M536	Eng. Guidance	Switching to English language guidance
M537	Jpn. Guidance	Switching to Japanese language guidance
M538	Call Waiting ON	Setting call waiting service
M539	Call Waiting OFF	Stopping call waiting service
M54	Prior new Ntc	Displaying pop-up when interrupted during other function
M55	Clock	Setting autonomous working
M551	Auto Time Adj	Setting auto time set
M552	Auto Power On	Setting auto power ON
M553	Auto Power Off	Setting auto power OFF
M56	BlogUp	Setting BlogUp
M57	Open & Anser	Setting for Open & Anser
M58	No.Append Setup	Registering prefix or area code memory
M581	Prefix Setup	Registering prefix
M582	AreaCodeMemory	Registering area code memory
M59	Data Comm/USB	Exchanging data connecting phone to PC
M591	Conn. Environment	Checking connection
M592	Ext.Mem.TransMd	Exchanging microSD data with external device
M593	USB Setup	Setting operation when connecting USB cable
M594	USB Charge	Setting for USB charge
M50	Maintenance	Updating software or checking for failure in the phone
M501	Software Update	Beginning to update
M502	Check Menu	checking for failure in the phone
M503	StatsDataSending	Setting status data sending of au phone

■ Guide Function (M#)

Mode No.	Function	Description
M#	Guide Function	Displaying the operation instructions for functions other than M functions
M#1	Operation Guide	Displaying the operation instructions for functions
M#2	Top Icon Guide	Displaying explanation of top icon on screen
M#3	au Online Manual	Connecting to EZweb au Online Manual and check the operations

Specifications

Weight:	approximately XX g (including battery pack)
Continuous talk time:	approximately XX minutes ★
Continuous standby time:	approximately XX hours ★
Dimensions (H/W/D):	approximately XX mm x XX mm x XX mm ※

※ The height and depth are the dimensions when the telephone is folded.

★Used Japan

●The continuous talk time and continuous standby time are the average values of when the signals can be received normally while the telephone is in the standstill status.

The operation time may be reduced to utmost half due to charging conditions, temperature, and other operation environment conditions, signal condition at the location of use, function setting, roaming area.

FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.



FCC RF EXPOSURE INFORMATION

Warning! Read this information before using your phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The

design of this phone complies with the FCC guidelines and these international standards.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.59 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.59 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna. All beltclips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

Turn off your phone before flying

You should turn off your phone when boarding any aircraft. To prevent possible interference with aircraft systems, U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.