



# ***DRAFT*** ***User's Guide***

*for the 7135 smartphone  
by Kyocera*



**KYOCERA WIRELESS CORP.**

10300 Campus Point Drive

San Diego, California 92121 U.S.A.

Visit us at [www.kyocera-wireless.com](http://www.kyocera-wireless.com)

For accessories, visit [www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store)

**82-B7926-1EN, 002**

## **FCC/IC Notice**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6Watts per kilogram (W/kg). Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.89 W/kg and when worn on the body at the waist is 0.34 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

## **Warning**

Use only Kyocera Wireless Corp. approved accessories with Kyocera Wireless Corp. phones. Use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

To comply with FCC radiation exposure requirements, use of this device for body-worn operational configurations is limited to accessories tested and approved by Kyocera Wireless Corp. Other accessories used with this device for body-worn operations must not contain any metallic components and must provide at least 22.75mm separation distance

including the antenna and the user's body. Other belt-clips, holsters or similar accessories that have not been tested for body-worn SAR may not comply with FCC RF exposure limit and should be avoided.

### **Caution**

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and user's authority to operate the equipment.



ACN 093 453 037

Kyocera is a registered trademark of Kyocera Corporation. QCP is a trademark of Kyocera Wireless Corp. Graffiti and HotSync are registered trademarks and Palm and the Palm Computing platform logo are trademarks of Palm, Inc., 3Com Corporation, or its subsidiaries. Eudora is a registered trademark of the University of Illinois Board of Trustees, licensed to QUALCOMM Incorporated. Apple and Macintosh are registered trademarks of Apple Computer, Inc. Other product and brand names may be trademarks or registered trademarks of their respective owners.

Copyright © 2000, 2001 Kyocera Wireless Corp. All rights reserved. Printed in the United States of America.

Portions of this document are Copyright © 1998 3Com Corporation or its subsidiaries. Reprinted with permission.

**82-B7926-1EN, 002**

June 6, 2002

## Contents

---

Welcome .....	1	From the Main Menu .....	16
User's Guide .....	1	From the Launcher screen .....	16
Reference Guide.....	1	Sending a Preformatted Text Mes- sage.....	17
CD-ROM.....	1	Using Main Menu Items.....	19
Web site .....	1	Entering information .....	21
If you already use a Palm handheld	2	Basic Graffiti characters .....	22
Icons.....	2	Using the Applications Launcher .	23
Palm Desktop .....	2	Using the Address Book .....	25
Transferring data .....	2	Using Call History.....	26
What to do first .....	3	Using the Date Book.....	27
To install the battery .....	3	Using Memos .....	28
Introducing the Kyocera 7135 .....	7	Receiving messages and voice mail .....	31
8		Using Speed Dial.....	32
Turning the phone on and off .....	8	If you know the Speed Dial number .....	33
Features.....	8	If you need to look up the Speed Dial number .....	33
Checking status—the status bar ...	9	Using the Kyocera MP3 Player ...	35
Checking status—the LED.....	10	Kyocera MP3 Player Contents ...	35
Using the screen .....	11	Transferring audio files from your	
Calibrating the screen .....	11		
Making calls .....	12		
To find a contact using the keypad	12		
Receiving calls .....	4		
Receiving and Sending Messages	15		


computer to your Kyocera 7135 . . .	35	mance . . . . .	59
Using File Manager . . . . .	37	Replacing the battery . . . . .	59
To use File Manager . . . . .	37	Where to find help . . . . .	61
Using WWW . . . . .	39	Your service provider . . . . .	61
Overview of menus and navigation icons . . . . .	39	Your phone documentation . . . . .	61
Using the To Do List . . . . .	40	Kyocera technical support . . . . .	61
Using Voice Dial . . . . .	41	Accessories . . . . .	62
Creating voice memos . . . . .	42	Phone safety . . . . .	63
Adjusting sounds . . . . .	44	Radio frequency (RF) energy . . . . .	63
Setting up preferences (this section being revised) . . . . .	47	Exposure to RF energy . . . . .	63
Setting up network connections . . .	49	Medical devices . . . . .	63
Using Data/Fax mode . . . . .	50	Pacemakers . . . . .	63
Beaming information . . . . .	52	Hearing aids . . . . .	64
Resetting the phone . . . . .	53	Other medical devices . . . . .	64
Synchronizing your phone with a computer . . . . .	55	In health care facilities . . . . .	64
Phone care . . . . .	57	Avoiding potentially unsafe areas . . .	64
Phone . . . . .	57	Posted facilities . . . . .	64
Antenna . . . . .	58	Aircraft . . . . .	64
Battery . . . . .	58	Vehicles . . . . .	65
Caution . . . . .	58	Blasting areas . . . . .	65
Tips for improving battery perfor-		Potentially explosive atmospheres . .	65
		Air bags . . . . .	65



## Welcome

---

Your Kyocera 7135 gives you the integrated features of a CDMA digital telephone and a Palm handheld with a color display in one device. To learn about your new phone, refer to the following resources:

**User's Guide**—This guide takes you on a quick tour  **On** of the phone's major features. Each procedure begins with a graphic that tells you whether the phone should be on or not. Each procedure ends by telling you where to find more information.

**Reference Guide**—For detailed information, insert the CD-ROM in your computer and open the **Reference Guide** or visit Kyocera-Wireless Corp. at [www.kyocera-wireless.com](http://www.kyocera-wireless.com).

**CD-ROM**—On the CD-ROM, you'll find the Kyocera 7135 desktop (to install it, see page 55). You'll also find third-party software for sending email, browsing the Internet, using web clipping services, using File Manager, and using your MP3 player, etc. For help with these applications, contact their source. For example, if you need help with Eudora®, go to the Eudora web site ([www.eudora.com](http://www.eudora.com)).

**Web site**—You can download the latest versions of all phone documentation at [www.kyocera-wireless.com](http://www.kyocera-wireless.com).

---


**Important:** Before using your phone, become familiar with the phone care and safety considerations starting on page 57.

---

## If you already use a Palm handheld

---

If you already use a Palm handheld, you'll find the Kyocera smartphone very familiar. Many Palm applications are the same; some have been enhanced to integrate them with the telephone's features.

**Icons**—Most icons and buttons are identical to those on your Palm handheld. Only a few icons have changed. The Calculator icon has been replaced with the Dialer  icon. Tap this icon to open the on-screen Dialer. You'll find the Calculator on the Applications Launcher screen. Also, the Messages and WEB browser buttons have changed.

**Palm Desktop**—You do not need to reinstall the Palm Desktop from the CD-ROM. The Kyocera smartphone can use your existing Palm Desktop.

**Transferring data**—You can transfer the data from your existing Palm device to your new Kyocera smartphone. Before you do so, be sure to read "Transferring information between Palm devices" in Chapter 4 of the **Reference Guide** for several recommended methods.

*Do not simply synchronize your new phone to copy the data. Some important settings on the phone will be changed if you do so. Additionally, since every Palm handheld device must have a unique name, serious synchronization problems may occur if you synchronize two Palm devices with the same user name.*

---

See Chapter 4, "Transferring Information," in the **Reference Guide**.

---



## What to do first

---

### To install the battery

 
The battery for your new phone is delivered partially charged. Before using the phone for the first time, you must install and fully charge the battery.

1. With the phone turned off, use the stylus or your finger to open the battery compartment on the lower back of the phone. Lift off the battery compartment cover.
2. Slide the battery into the compartment with the Kyocera label facing you. The end of the battery with four copper-colored depressions goes toward the top of the phone.
3. Apply gentle pressure until the battery snaps into place. Then replace the battery cover by inserting the top of the battery cover first. Apply gentle pressure to the bottom of battery cover to snap it closed.






### To connect the cable for synchronizing and charging the battery

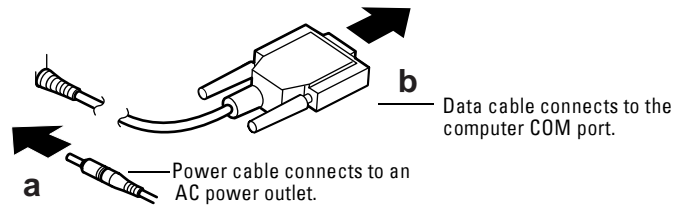1. Insert the small round plug of the power cable (a) into the base of the 7135. Plug the other end of the power cable into a wall outlet.



2. To connect the cable to your computer, first turn off the computer.
3. Plug the data cable from the phone (b) into a serial communications (COM) port on your computer. The cable requires a dedicated port; it cannot share a port with an internal modem or other device.
4. Turn on the computer.
5. The message "Phone is charging" appears on the screen. Wait until the message "Charging is complete" appears.

The battery icon in the upper-right corner of the screen tells you whether the phone is:

- Charging  (the icon is animated)
- Partially charged 
- Fully charged 

---

**IMPORTANT: Charge the battery completely before first use.**

If the battery is totally drained, it may take 2-3 hours to charge the first time. After the first time, it is not necessary to recharge the battery fully; you can use the phone with a partial charge.

---




**To recharge the battery**

You can safely recharge the battery at any time, even if it has a partial charge.

**Turning your phone on for the first time**

Wait until the battery is fully charged before using your phone for the first time.

1. Open the flip. Press and hold  for a few seconds. You see the message "Powering on" on the screen.
2. Follow the procedures on the screen to select a language. Your Kyocera 7135 has 3 language choices: English, French, and Spanish. Tap **OK**.

**Note:** Check with your service provider about language options in your area.

3. Follow the procedures in the welcome screens to calibrate the screen and Graffiti writing area. If the welcome screens do not appear, see “Calibrating the screen” on page 11.

 
---

**For more information:** If the phone does not turn on, see “Where to find help” on page 61. To install the Kyocera 7135 desktop software on your computer, see “Synchronizing your phone with a computer” on page 55. For more information on the battery, see Chapter 1, “Introducing the Kyocera 7135,” in the **Reference Guide** on the CD-ROM.


---

## Introducing the Kyocera 7135

- ① **Backlight button**—Press the button to turn the screen on and off. Press and hold the button to turn the backlight on and off.
- ② **Antenna**—Extend during calls.
- ③ **LED** (light-emitting diode)  
Green = Home area  
Amber = Roaming  
Red = No signal
- ④ **Stylus**—Slide the stylus out of its slot. Hold it like a pen to write on the screen. NEVER USE A PEN, PENCIL, OR OTHER SHARP OBJECT ON THE SCREEN.
- ⑤ **Headset jack**—Plug the headset cable in here.
- ⑥ **Data port**—Plug the data cable in here.
- ⑦ **Power port**—Plug the power cable in here to recharge the battery.
- ⑧ **Infrared port**—Point the infrared port at other devices for beaming data.
- ⑨ **MP3 Port**—Plug the MP3 cable in here to download songs to your phone.

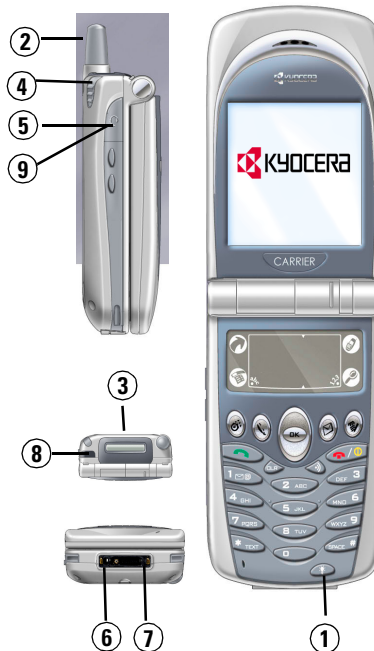

### **Turning the phone on and off**

To turn your phone on or off, just press and hold  for a few seconds until “Powering On” or “Powering Off” appears on the screen.

The Kyocera 7135 is designed to conserve battery power. When you are not actively using it, the screen “goes to sleep” (both when the flip is open and when it is closed). If you aren’t sure whether the phone is on, open and close the flip or check the LED. The LED flashes slowly when the phone is on. (The color of the LED indicates service area; see page 7.)

### **Features**










Whether the phone is on or off, the organizer “wakes up” when you open the flip. It displays the last application you used unless the Dialer is selected.


If you aren’t sure whether the phone is on, open and close the flip. The status bar appears at the top of the screen. Also, when the phone is on, the LED flashes slowly.

When you are not using the phone or the organizer applications, the screen goes blank after a few minutes to save power. To activate the screen, press any key, press the backlight, touch the screen, or close and open the flip.

### Checking status—the status bar

The status bar at the top of the screen provides the following information when the phone is on.

-  The phone is operating in CDMA digital mode. If this icon isn't present, the phone is either in analog mode or there is no service.
-  The phone is operating in Voice Privacy or Internet Security mode, or the phone is locked.
-  The speakerphone is enabled.
-  The phone is outside of its home area (roaming).
-  This icon shows the current signal strength. The more lines you see, the stronger the signal. When this icon appears, you can make and receive calls. If the signal strength is very low, you may not be able to complete a call.
-  The phone is not receiving a signal. You cannot make or receive calls. Wait a little longer or move to an open area.
-  A call is in progress.
-  You have a text message, voice mail, or page.
-  When in conversation, your phone is operating with enhanced CDMA voice privacy (if available from your service provider).

 This icon shows how much power remains in the battery. The more black bars you see, the greater the charge.

### Checking status —the LED

The LED indicates the following states:

- **Green**—Home. The phone is on and in its home area. The light flashes slowly when you are not making a call, it flashes 3 times per ring when you receive a call, and it shines without flashing during a call.
- **Amber**—Roaming. The phone is on and in roaming mode. The light flashes slowly when you are not making a call, it flashes 3 times per ring when you receive a call, and it becomes solid during a call.
- **Red**—No signal available. The phone is on and searching for a signal.
- **Rapid red flashes**—Alerts. The LED flashes 5 times for incoming messages or voice mail. It flashes 3 times for all other types of alerts.
- **No light**—The phone is off.



 



## Using the screen

The screen is touch-sensitive. Use the stylus to open applications and make selections.



**Calibrating the screen**—If the screen is unresponsive, follow these steps.

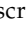1. Open the flip. With the stylus, tap  to view the Applications Launcher.
2. Tap the Prefs  application.
3. Tap the  in the upper-right corner of the screen. From the picklist, tap **Digitizer**. Follow the instructions on the screen.

When calibration is complete, you may tap  to go to another application.

---





See Chapter 13, "Security," in the Reference Guide on the CD-ROM.

---






## Making calls

---


### To dial a call on the keypad

1. Extend the antenna. Check the signal strength icon.
2. Press the keys to enter the phone number. Then press .  
If you make a mistake, press  to remove the last digit you pressed.  
Hold  down to clear all digits.
3. To end your call, press .


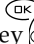 



### To make a call from the Address Book

1. Press the Address Book  key to open the Address List.
2. Use the navigator  to scroll up or down to select the contact you would like to call.
3. Press  and .
4. To end your call, press .



### To find a contact using the keypad

1. Press the Address Book  key.
2. Using the keypad, press the first letter of the name you are searching for. For example, the 2 key is equivalent to *A*, *B*, or *C*. If you press the 2 key once, the letter *A* appears in the Find window. If you press the 2 key twice, the letter *B* appears. Press keys rapidly.




Wait a moment. The cursor moves one position to the right.

3. Press the key for the second letter of the name you are searching for. Enter as many letters as you wish.
4. Your Kyocera 7135 will find all entries beginning with the letters you have selected. Use the navigator key  to scroll up or down to highlight your selection.
5. When the contact you want to call is highlighted, press . If there are multiple numbers for this person, use the navigator key  to highlight the one you want to call.
6. Press .
7. To end your call, press .

#### **To make a 3-way call**

1. While on a phone call, dial the third party and press .
2. When the second call is connected, press .

#### **To make a call from the recent calls list**

1. From the main phone menu, press .
2. Use the navigator key  to scroll up or down to select the phone number/contact you wish to call and press .



### **To make a call using speed dial**

After you have assigned a speed dial location to a contact, press and hold the number on your keypad until you see the contact's name appear on your screen.

For information on setting up Speed Dial, see **Using Speed Dial** in this user guide.

### **Receiving calls**

#### **To answer a call**

1. Open the flip.
2. Press .
3. To end your call, press .

**Note:** To automatically answer a call when opening the flip on your phone, use your stylus to tap the Phone Prefs icon. In the upper-right corner, select Flip Settings. Use your stylus to check the desired box.

---

See Chapter 2, "Making and Receiving Calls," in the Reference Guide.

---

## Receiving and Sending Messages

---

### To receive a message

When a message is received, your Kyocera 7135 will notify you.

1. Press the OK key in to highlight and select **View**.
2. The message is displayed.



The Options menu offers several choices, including:

**Reply**—Open the flip to continue. The **Outgoing Message** screen is displayed with the address of the sender inserted in the **To:** field. Enter your message text and tap **Send**.

**Erase**—Erases the message.



**Save**—Saves the message to the **Saved** folder.

 
**Sender**—Displays sender information if available.

**Forward**—Open the flip to continue. The **Outgoing Message** screen is displayed with the message text in the **Message** field.

## Sending a Message

### From the Main Menu

1. Use the navigator key  to scroll down to select Messages and press . Continue with Step 3 below.

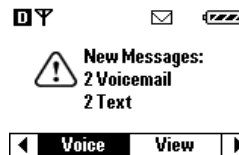

### From the Launcher screen

1. Using the stylus, scroll down and tap on **Messages**.



2. At the Messages screen, tap **New**.