

Safety Precautions

- The precautions must be observed at all times since they contain information intended to prevent the bodily injury or damage to property.
- The following describes the meaning of safety symbols and signal words.

■ Pictographs

DANGER

Indicates that death or serious bodily injury may result directly and immediately from improper use.

WARNING

Indicates that death or serious bodily injury may result from improper use.

CAUTION

Indicates that bodily injury and/or result from improper use.

■ Symbols

Don't

Indicates that it is prohibited.

No disassembly

Indicates that it must not be disassembled.

No wet hands

Indicates that you must not touch it with wet hands.

No liquids

Indicates that it must not be used near water, which means that you must not let it become wet.

Do

Indicates that it is an instruction-based compulsory conduct (must be acted).

Unplug

Indicates that you must unplug the power cord from the outlet.

■ Precautions for the Device, Battery Pack, Adapter and UIM (au IC-Card) (Common)

This product is designed to operate with AC adaptors limited to 6.2V, 1.5A maximum.

DANGER

- Use the battery pack and adapter specified for the device. Failure to observe this precaution may cause fire, burns, injury or electric shock.
- Do not use, keep or leave the devices in locations subject to high temperatures, such as near fire, indirect sunlight or inside a car on a hot day. Doing so may cause fire, burns, or injury.
- Make sure to turn off the devices and stop charging before you get close to the places like a gas station where a flammable gas is generated.
Doing so may cause the gas to ignite. Turn off the power, when you use Osaifu-keitai at a gas station (if the IC card lock is set, turn the power off after the lock is released).
- Do not throw the device into fire.
Doing so may cause the device to ignite, explode, overheat or leak.
- Do not put the devices in a microwave oven or pressurized container. Doing so may cause fire, burns, injury or electric shock.
- Do not disassemble or modify the equipment.
Doing so may cause fire, burns, injury or electric shock.
- Do not place electrically conductive objects (wires, pencil leads, etc.) in contact with the external jacks. Do not insert those materials inside the terminal.
Doing so may cause fire, burns, injury or electric shock.
- Do not throw the devices or expose it to strong shocks.
Doing so may cause fire, burns, injury or electric shock.
- If something unusual happens, such as unusual odor, overheating, discoloration or deformation during use, charge or storage, be sure to:
 - Unplug the power cord from the power outlet or the cigarette lighter socket.
 - Turn off the power.
 - Remove the battery pack.
 - Contact your nearest au shop or Customer Center.

WARNING

- Electricity is in a state, and please do not touch the connection terminal in a physical part including a hand and the finger.
- Please do not charge it in the state that the OASY1 gets wet with. It causes trouble, the fire by the shortstop of an electric shock and the electronic circuit. The trouble by the charge at the age of the water wet is out of the guarantee, and repair is not possible.
- OASY1 is a model having a waterproofing function, but please stop use by any chance when liquids such as the water enter the main body of OASY1 inside from an outside connection terminal cover, a battery cover. It causes fever, ignition, the trouble when I just use it.
- When you drop and damaged OASY1, please contact au shop or the visitor center.
- Keep the device out of young children's reach.

A young child may try to swallow it or suffer injury.

- Do not leave the device in humid, dusty or hot places.

Doing so may cause fire, burns or electric shock.

CAUTION

• If you touch the warm part of these devices for a long period of time, it may cause redness, itch, skin irritation or low temperature burns depending on your constitution or physical condition.

- Do not leave the device on a slope or unstable surface.

The devices may fall and cause injury.

• Do not touch for a long time the apparatus (separate sale) for charge of OASY1, a battery pack, the designation that is in condition that a power supply is supplied from the outside. It causes the low temperature burn.

• Do not put it in the side of a corrosive medicine and the place where the corrosive gas is generated. It causes the disappearance of internal data by the trouble.

- Do not bend the UIM (IC-Card) or place a heavy object on it.

Doing so may cause malfunction.

- Do not damage, scratch, unnecessarily touch, or short-circuit the IC.

Doing so may cause data loss or malfunction.

- Do not injure the IC (metal) part of the au IC card.

Doing so may cause malfunction.

- Do not allow the UIM (IC-Card) to get wet or leave it in places of high humidity.

Doing so may cause a malfunction.

• When you play games or music with an earphone/microphone connected to the device, adjust the volume properly.

Too large a volume may lead to defective hearing. Also, hearing difficulties may cause an accident.

■ Precautions for the Device

DANGER

- Be careful when using the device while driving.

A penalty may be imposed for holding a mobile phone while driving.

When you need to receive a call, tell the caller that you will call back later using hands-free functions, then pull off the road before using the phone.

- Do not turn on the light against the car drivers, etc.

Doing so may interfere with driving and cause a traffic accident.

• Before using your devices in a vehicle, ask the manufacturer or sales agent whether the operation of the vehicle can be affected by radio waves.

In some types of vehicle, using the devices may interfere with the operation of the vehicle's electronic equipment. In this case, stop using the devices immediately.

- Please turn off your device when inside an airplane.

- Radio waves emitted by the device may adversely affect implanted pacemakers and ICDs when used in close proximity.

1. A person with an implantable cardiac pacemaker or defibrillator should use or carry the device at a distance more than 22 cm from the site of implantation.

2. Turn off the power in crowded places such as peak-hour trains if implanted electronic medical devices may be in use near you.

3. Take care of the following inside hospitals.

- Do not take your devices into an operating room, intensive care unit (ICU), or coronary care unit (CCU).

- Turn off the power inside hospital wards. If the Auto power function is set, make sure to disable the function before turning off the power.

- Turn off the power even in hospital lobbies, waiting rooms, and corridors if electronic medical devices may be in use near you.

- For use inside medical institutions, please follow the instructions given at individual locations

4. Electronic medical devices other than implanted pacemakers and ICDs may also be used outside hospitals. Users of electronic medical devices are advised to ask the manufacturer whether these instruments can be affected by radio waves.

- Please turn off the power near electronic equipment that contains high-precision mechanisms or handles delicate signals.

The terminal may interfere with the operation of sensitive electronic equipment.

* Electronic equipment to watch out for: Hearing aids, implanted cardiac pacemakers, ICDs and other electronic medical devices; fire alarms, automatic doors, and other automatically controlled apparatus.

Users of implanted cardiac pacemakers, ICDs, and other electronic medical devices are advised to ask the manufacturer or sales agent whether or not these devices can be affected by radio waves.

- Confirm neighboring security when you do a call, an email, photography, game or internet , watch TV and listen to music. It causes a fall, the traffic accident when you use it without confirming security.

- Be careful about volume, when you use an earphone (separate sale). When it is hard to hear neighboring sounds, it causes the accident.

- When thunder is heard outside, stop using the devices immediately. Turn off handset and do not touch it. Failing to do so may attract lightning and cause electric shock. When thunder is heard, stop using the devices and move to a safe place such as inside a building.

WARNING

- ISW11K is not complete waterproofing. When it is for use without protecting contents listed in "waterproof attention" of follows 1-4 and P.xx - xx, it causes ignition, fever, an injury, an electric shock, the trouble.

1. Do not make use (including the key operation) underwater.
2. Do not soak it in a liquid except fresh water, the tap water of the normal temperature.
3. Do not hit a strong water current more than rule (IPX5, IPX7)(P.xx), and do not sink it for a long time underwater.
4. Do not put it on sandy beaches.

- Do not turn on the light near a person's eyes.

The light may affect eyesight. Also, this may dazzle or surprise him/her and cause injury.

- Do not direct the infrared data port towards your or another person's eyes.

Doing so may cause eye injury.

Do not direct the infrared data port towards consumer equipment with infrared devices during infrared communication.

Doing so may cause malfunction of the infrared devices and result in an accident.

- If ISW11K is broken, be careful with the broken parts and any exposed the device parts. However, touching broken or exposed parts may cause injury.

- If you have a weak heart, take precautions when setting the Vibrator or Ring volume. Failure to observe this precaution may affect your heart.

- In a dark room, do not stare at the blinking of the strong light and light of the screen. There is the person who extremely rarely wakes up symptoms such as the loss of muscle cramp and the consciousness when they watch the screen which they receive stimulation of strong light, and repeats blinking. Please talk about the one with such an experience with a doctor by all means beforehand.

- Do not hit the lens of the camera with direct rays of the sun for a long time. By the collecting action of the lens, it causes ignition, the fire.

- Keep the external connector (earphone/microphone terminal) cap closed when not in use.

Doing so may cause malfunction due to dust or water getting in.

CAUTION

- Never use the remodeled au telephone. When you use a remodeled apparatus, it conflicts with Wireless Telegraphy Act.

The au telephone catches the technical standard conformity proof of specific radio facilities based on the Wireless Telegraphy Act, and, as the proof, "a skill proper mark" is displayed by the tablet seal of the main body of au telephone.

When you take off the screw of au telephone and remodel the inside, technical standard conformity proof becomes invalid. Because you conflict with Wireless Telegraphy Act when technical standard conformity proof uses it in the state that became invalid, I ask to be never used.

- Before using the device, make sure that no metal objects (such as pins) are stuck to the earpiece or speaker. Failing to do so may result in a metal object causing an ear or head injury, etc.

- Do not swing the device by its strap or other parts.

The device may strike you or others around you, resulting bodily injury.

- Do not hear it at the direct megavolume that or you use an earphone (separate sale), and stimulates an ear successively for a long time. you may have a bad influence on a hearing ability.

- Do not let magnetic cards, etc. come close to the devices.

The magnetic data in cash cards, credit cards, telephone cards, floppy disks, etc. may be erased.

- ISW11K ambient temperature 5 degrees Celsius - 35 degrees Celsius (but the use that is temporary if is 36 degrees Celsius - 40 degrees Celsius is possible.) Use it in the range of 35% - 90% of humidity. When I become clear with trouble by the use at the extremely hot place more than ranges and a cold place, I do not have the repair by the guarantee.

- Use a phone after tearing the protection sheet of display off. It causes the injury when you use it with putting it. In addition, please warn it not to cut fingers when you tear it off either.

- Do not pull up microSD forcibly. It causes trouble, the inside data disappearance.
- Do not use microSD anything other than a designation product. It causes trouble, the inside data disappearance. Please inquire whether you see this book P.XX about the au designation product to au shop or the visitor center.
- The Bluetooth® function of OASY1 acquires authorization according to Japan and FCC standard. The use of the Bluetooth® function may be limited in some country / area. When you use it abroad, please confirm the conditions such as laws and regulations of the country / area.
- When you felt abnormality to skin, you stop use promptly, and please talk with a dermatologist. Depending on constitution, the physical condition of the visitor, you may produce an itch, a rash, a rash.

■ Precautions for the Battery Pack

Read the separate manuals supplied with the device and adapter carefully.

DANGER

- Do not let (+) and (-) of the battery pack short-circuit. It causes an explosion, ignition, the fever.

- Do not place metal items such as wires in contact with the charging terminals.

Also, do not carry or store the battery with metal items such as necklaces.

Doing so may cause the battery pack to ignite, explode, overheat or leak.

- Check the orientation of the battery pack before attaching it. If you have difficulty attaching it to the device, do not put excessive pressure on the battery.

Failure to observe this precaution may cause the battery pack to ignite, explode, overheat or leak.

- Do not puncture the battery pack, hit it with a hammer or step on it.

Doing so may cause the battery pack to ignite, explode, overheat or leak.

- Do not solder it directly, and do the resolution, remodeling. The liquid in the battery jumps out, and it gets into eyes and causes accidents such as the loss of eyesight and an explosion, ignition, the fever.

- If the battery pack leaks or emits an unusual odor, stop using it immediately and move it away from any flame or fire. The battery fluid is flammable and could ignite, causing a fire or explosion.

- Do not touch with wet hands.

WARNING

- The battery pack does not have waterproofing performance. Do not allow the devices to become wet with liquids, such as water, drinking water or pet urine. Do not use or charge the wet battery pack.

Doing so may cause the battery pack to ignite, explode, overheat or leak.

- When an internal liquid gets into eyes, please be treated for the doctor promptly after having washed it with pure water enough without rubbing it. you might go blind when you leave it unattended.

CAUTION

- When an internal liquid attaches to skin and clothes, please wash it away with pure water enough promptly. It becomes the cause that skin gets a rash.

- Do not throw away the unnecessary battery pack with general garbage. Please cooperate with the collection of the battery pack which became unnecessary to plan environmental protection and the utilization of resources. I collect the used battery pack in au shops.

- Do not tear off a seal wound around a battery pack. It causes the trouble.

■ Precautions for the Adapter

DANGER

- If the battery fails to charge in the specified time, stop charging immediately.

Failing to do so may cause overheating, rupturing or fire.

- Do not touch the adapter when you see lightning or hear thunder.

Doing so may cause electric shock.

WARNING

- Use the specified voltage and current. Using the adapters with incorrect voltage may cause fire, burns or electric shock.

AC Adapter : AC100V-240V .

- When you insert a designated AC adapter in an outlet, do not let metal strap or accessories touch a power supply plug. It causes ignition, a fire, an electric shock, the injury.

Failure to observe this precaution may cause fire, burns or electric shock.

- Please insert the power supply plug surely to the root of an outlet or the cigar writer socket. When a plug is incomplete, it causes ignition, a fire, fever, the electric shock.

- The adapter does not have waterproofing performance. Do not allow the devices to become wet with liquids, such as water, drinking water or pet urine. Do not charge in the wet condition.

- Do not touch with wet hands.

- At the humid place including the bathroom, never use it. It causes an electric shock and the trouble.

- Do not charge the wet battery pack.

- Do not cover with cloth and futon and wrap it during charge. It causes ignition, the fire.

- Do not do the how to use more than the rating of an outlet and the wiring appliance. It causes ignition, a fire, the fever.

- Do not put heavy objects on the power cord of the adapter.

Doing so may cause fire, burns or electric shock.

- Unplug the adapter from the power outlet or cigarette lighter socket before cleaning it. Also, wipe off any dust on the plug.

Failure to observe this precaution may cause fire, burns or electric shock.

- Do not leave the devices dusty.

Doing so may cause fire, burns or electric shock.

- Always grasp the plug when unplugging the adapter from the power outlet or cigarette lighter socket. Do not pull the cord itself.

Failure to observe this precaution may cause fire, burns or electric shock.

- Failure to observe this precaution may cause fire, burns or electric shock.