

Smart Watches

Quick Use Guide

Please read this manual carefully before use for proper installation and quick use.
Due to product upgrades, some functions may be adjusted, please prevail in kind.

The Product Features

- Sports Mode
- History
- Compass
- Environment
- Stopwatch
- Heart Rate
- Calendar
- Alarm
- Settings
- Bluetooth

 
一、 Watch Introduction

1, The Key Instructions



- **Power key:** long press 2 ~ 3 seconds to start / turn off, short press to off the screen.
- **Function keys:** long press to increase and keep the screen brightness, long press again to reduce the brightness. In the intercom interface.

2, The Screen Display

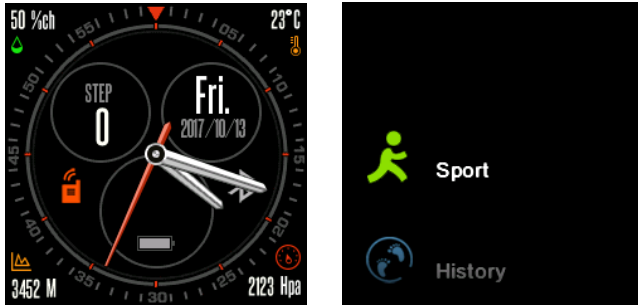

- **Main interface:** interface icons are humidity, temperature, clock, step, system date, battery logo, the following for the elevation, pressure.
- **Main Menu:** Standby Slide the screen to the left to enter the main menu (the default is the first intercom), slide up and down the screen to switch to other main menu, slide the screen to the right to exit.
- **Function menu:** In the main menu interface, click on the screen to enter the corresponding function menu, slide the screen to the right to exit.

二、 Operating Instructions

1, Watch Pre-charge



As shown in the letter with a thimble of the charging base fastened to the back of the watch, note the positioning direction of the thimble, then connect the charging cable, the other end connected to the charger or computer USB interface, start charging, The battery for about an hour can be filled.


Note: During charging, the charging icon will scroll until it stops full.

1, Watch Boot

The watch to get outdoors or a good place where the signal is good, long press the boot button for 2 to 3 seconds, the boot screen appears, into the boot state


三、 The Menu Function

1, Standby Interface Operation

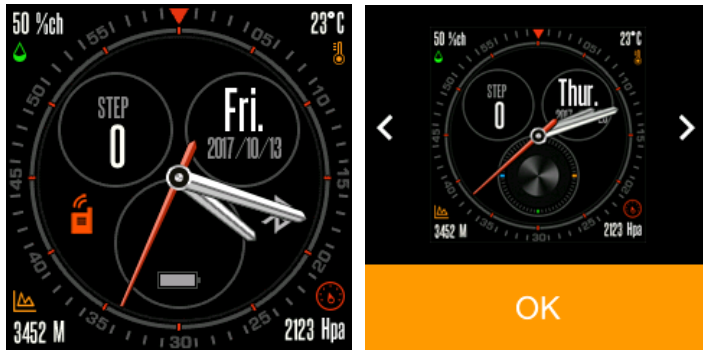


- Long press the screen appears clock dial, there are several different styles of dials to choose from
- Long press the function key can improve and maintain the screen brightness, long press again can reduce the brightness, And within the specified time without the operation into the off screen
- Long press the power key, turn off the watch.
- Swipe the screen to the left to enter the main menu interface.
- Boot state, quickly flip the arm (wrist), you can light up the screen.

2, The Menu Interface Operation

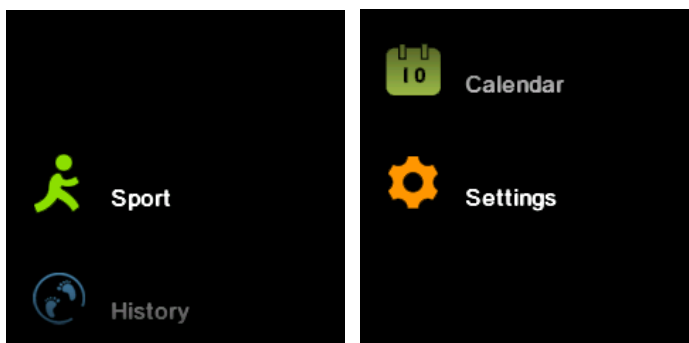

- Main menu interface, slide up and down the screen, you can switch to other main menu.
- Select a main menu, click on the screen, you can enter the appropriate application interface.
- Press and hold the function key to increase and maintain the screen brightness
- Slide the screen to the right to return to the standby screen


3, Sport interface

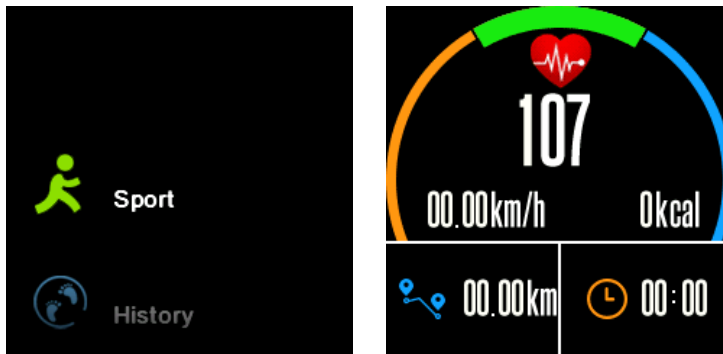

- Slide the main menu up and down and click on the sport icon to enter the preparation interface
- sport state, the data will change, at any time to record the current movement of the value, including the center of the screen heart rate data, movement speed, consumption of calories, the lower movement distance and movement time.
- Long press the function key to improve and maintain the screen brightness, press again to reduce the brightness and can enter the state.
- Slide the screen to the right to return to the standby screen.

Note: Heart rate data need to open heart rate function to show.

 4, The Sport Data Interface

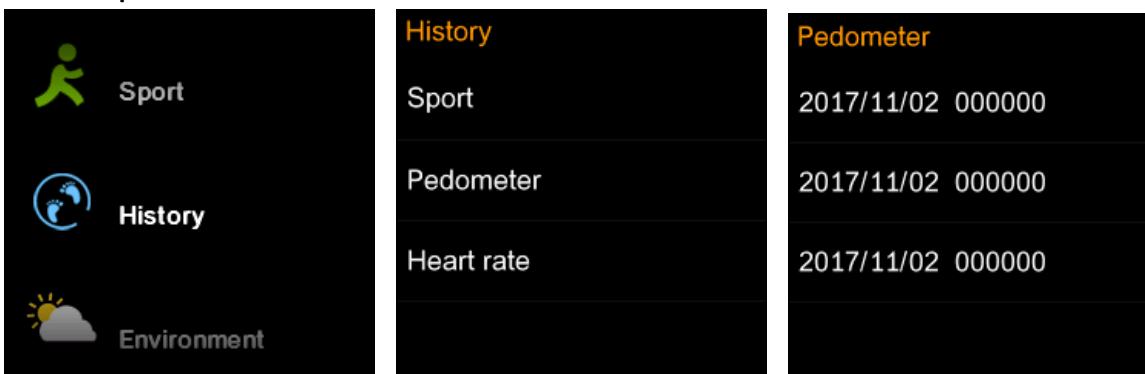


- Slide the main menu up and down and click the sport data icon to enter the data classification interface
- Click a classification option to enter the data list interface.
- Click on a time record to view details
- The movement data is displayed on the screen in the order of the time list.
- Slide the screen to the right to return to the standby screen.

5, Compass Interface




- Slide the main menu up and down and click the compass icon to enter the application interface.
- When the application interface appears to calibrate the prompt icon, according to the direction of the arrow, draw 8 shapes in the air, when calibration is completed, the compass indicator screen displayed, N letter on behalf of the North Pole, S letter represents the Antarctic direction
- Slide the screen to the right to return to the standby screen.

 6, Environment Display

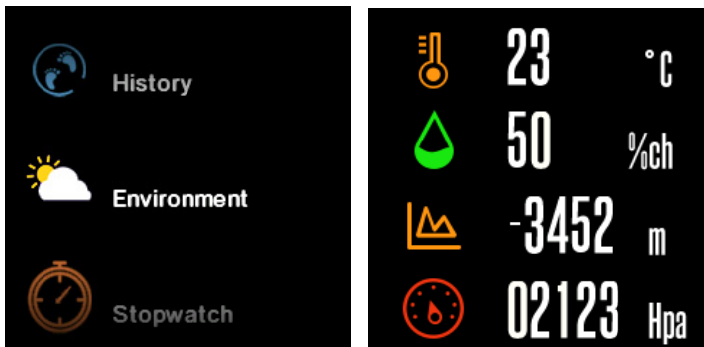


- Slide the main menu up and down and click on the environment display icon to enter the application interface.
- Application interface shows four current environmental data, from top to bottom are temperature, humidity, altitude and pressure.
- Slide the screen to the right to return to the standby screen.

 7, Stopwatch function

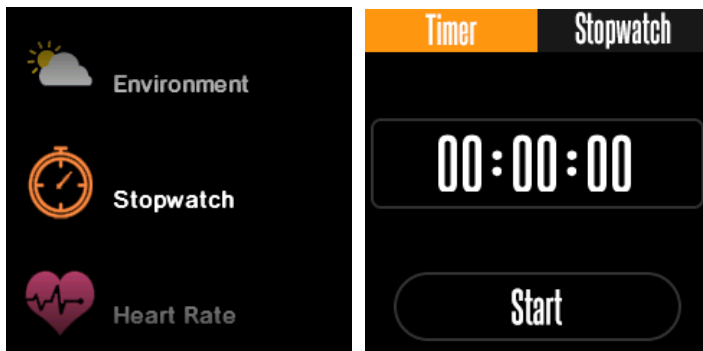

- Slide the main menu up and down and click the stopwatch icon to enter the application interface.
- Select the timer mode, click on the middle digital area, you can slide up and down the screen to modify the hour: minute: second number, set the timer level, then press the Start to turn on the countdown, click the End to turn off the countdown
- Stopwatch mode, click Start to open the timer, click the End off the timer.
- Slide the screen to the right to return to the standby screen.

 
8, Heart Rate Function

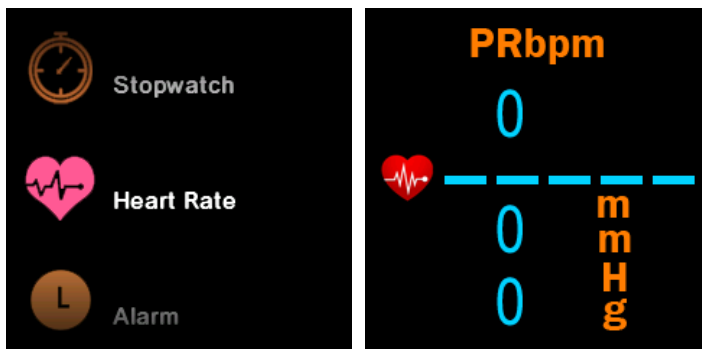

- Slide the main menu up and down and click on the heart rate icon to enter the application interface
- Into the application interface, the watch attached to the wrist, and then press the function key to start up the heart rate, the interface appears the current heart rate data. short press the function key again to close.
- The top of the screen shows heart rate, the bottom is the blood pressure (telescopic pressure and diastolic blood pressure)
- Slide the screen to the right to return to the standby screen.


Note: The watch indicator (inside the back of the watch) senses a reflective object, and the heart rate data appears. To restore the heart rate data to zero, you need to keep the watch high and the data sampling time takes 15 seconds.

 9, Calendar Function

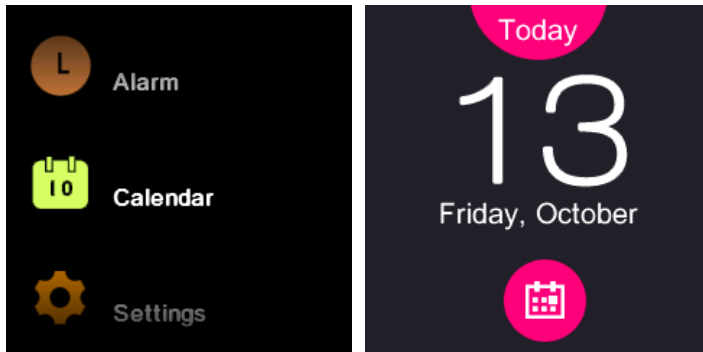


- Slide the main menu up and down and click on the calendar icon to enter the application interface.
- The application interface displays the date of the day, sliding the screen up and down to switch to another date.
- Click the calendar icon at the bottom of the screen to view the calendar and browse up and down.
- Slide the screen to the right to return to the standby screen.

 10, Alarm Function

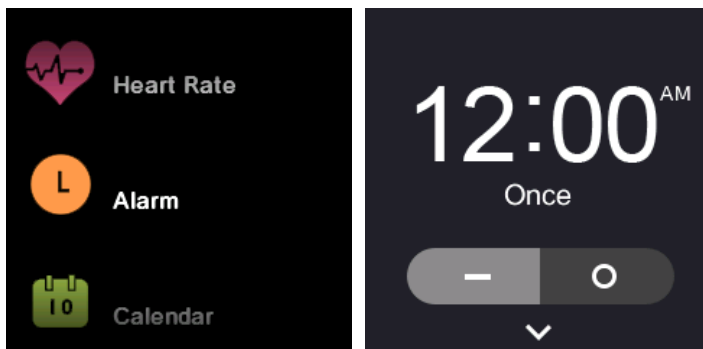


- Slide the main menu up and down and click the alarm icon to enter the application interface.
- In application interface click the circle symbol on the right of the switch button at the bottom of the screen to turn on the alarm. Click the time zone to enter the setting interface. By clicking and sliding the screen, you can set the alarm time, the number of repetitions and the alarm tone.
- Click the bar bar on the left of the switch button at the bottom of the screen to turn off the alarm
- Slide the screen to the right to return to the standby screen.

 11, Settings Menu

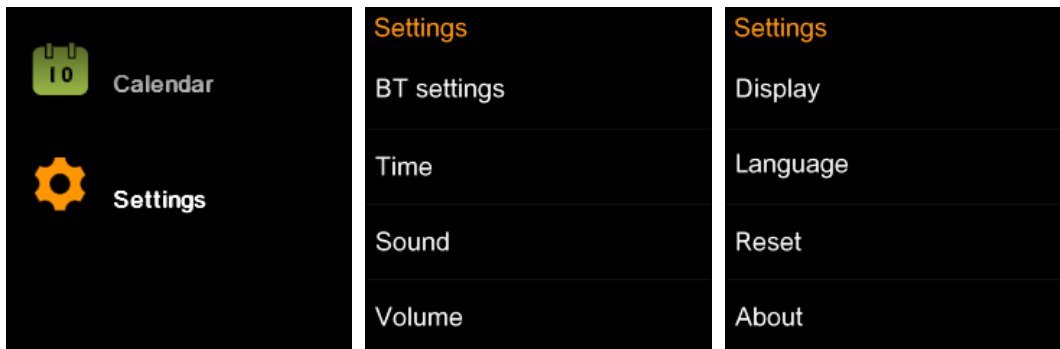


- Slide the main menu down and click the Settings icon to enter the application interface
- Application interface shows several settings options, from top to bottom are Bluetooth, time, volume, display, click to modify and save.
- Under the option item, slide down the screen also can restore the factory settings and view the watch information
- Slide the screen to the right to return to the standby screen.

 
12. Bluetooth Function

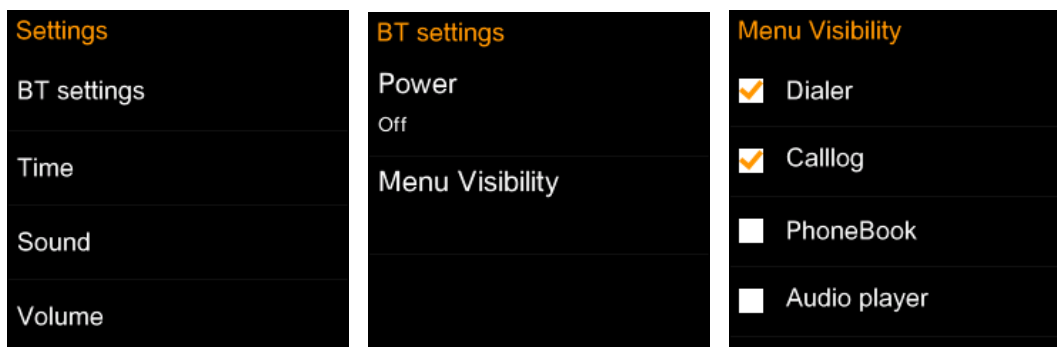

 - In the settings menu, select the Bluetooth settings option, enter the Bluetooth settings interface, open the Bluetooth and enter the menu switch settings option.
- Select your need and tick in the dial, call records, phone book, SMS and music check box , these function will display to the main menu list.

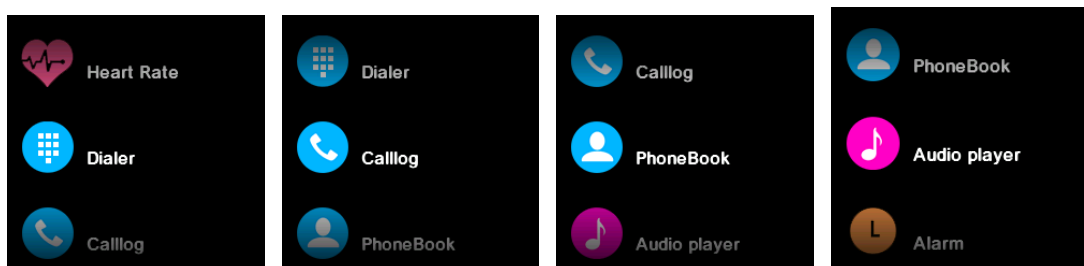

 - Open the Bluetooth of the smart phone and search to the watch, in the pop-up dialog box click on the consent (synchronous phone book, synchronous SMS), pairing success, select the appropriate menu in the main menu, enter the function interface.

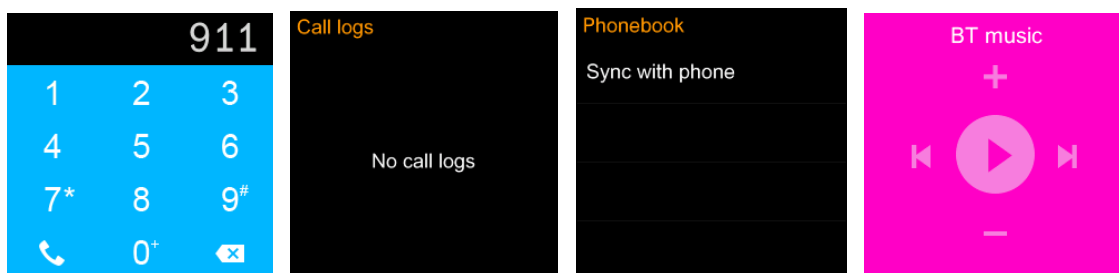


●Select the dial menu, enter the picture 1 interface, enter the number and press the dial key, you can dial the call, while the watch can also answer the call, during the call, slide up and down the screen to adjust the call volume, press the hang key to refuse / end the call. Slide the screen back to the right.

●Select the callog, display the smart phone-side callogs , the phone has recently dialed, received, missed calls are synchronized display in the watch, according to the watch storage space will automatically delete the earliest records. Slide the screen back to the right.

●Select the phone book, display the smart phone-side contacts, up to 250. Click the contact to view the details or dial the call. Slide the screen back to the right.

●Select the music, watch synchronize the smart phone-side music, click the middle button to play / pause, left and right arrow keys to switch songs, up and down arrow keys to adjust the volume. Slide the screen back to the right.

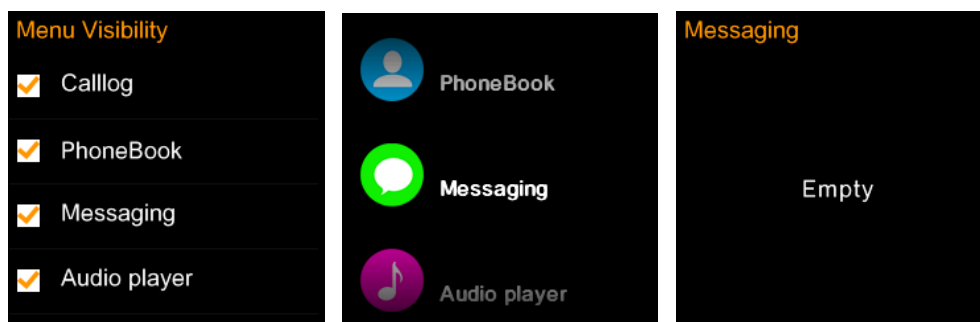

●Check the message, the main menu will also display the SMS icon, select it, the list shows the smart phone side of the received messages, up to 50. Slide the screen back to the right

Note: open the Bluetooth, the same time the smartphone to open the Bluetooth and actively search the watch to match, and agreed to synchronize the phone book and SMS, pairing success, you can synchronize the smart phone on the phone book, call records, text messages, music and call dialing function

四、 Use and Maintenance

This watch is a high-end technology product, please be careful to use. The following suggestions will enable users to better use and maintain this watch.

- Place the watch parts out of the reach of children.
- Keep the watch dry, rain, moisture and various liquids or moisture that may contain corrosion of minerals.

- Do not place the watch in a dusty, dirty place or use the watch
- Do not place the watch in high temperature, high temperature may shorten the life of electronic devices, destroy the battery, and make some plastic parts deformation or melting.
- Do not place the watch in a low temperature area. When the watch from low temperature to high temperature, the internal may produce moisture, may cause damage to the circuit board.
- Do not attempt to disassemble the watch, improper handling of non-professionals may cause damage to the device.
- Do not throw, hit the watch, rude use may damage the internal motherboard.
- Do not use irritating chemicals, detergents, or corrosive cleaners to clean your watch. To clean the watch, gently wipe with a rag dipped in mild soapy water.
- Do not apply paint to watch. Pigments may interfere with the active parts of the device and affect normal operation
- Use of qualified replacement straps, unauthorized straps or other parts that may damage the watch.
- When using the watch, take the volume, the screen backlight time shorter and other energy-saving way to help extend the watch's standby time.
- Do not touch the metal parts (except the specially configured charger interface and data cable interface) with the mobile phone charger interface to avoid short circuit.

Three packs of vouchers

User name		Contact number		Zip code	
User address					
Host number		Attachment model			
Host body number		Accessories factory serial number		Into the network logo	
Commodity origin		Enter the network card number			
Sales unit		Contact number		Zip code	
Sales address					
Sales date			Invoice number		

Note: This card is authorized to sell the unit after the seal to take effect

Maintenance records

Date of repair	Fault description	Repair processing	Repair man	Repair unit seal

--	--	--	--	--

Note: maintenance by the authorized maintenance unit, fill in the maintenance records and stamped, otherwise the maintenance records are invalid.

Warranty

Under normal use, the product warranty is around 1 year. Which battery and data line warranty period of 3 months. Damage caused by human causes is not warranted. Including but not limited to wear, dirt, fall or crush, water and so on.

Damage caused by natural disasters such as fires, floods, lightning strikes and so on is not covered by the warranty

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.