

# **LG-DB210 Operator' s Guide**

**February 08, 2000**

**Manual Part  
R&D Planning Department**



## FCC RF EXPOSURE INFORMATION

***WARNING! Read this information before using your phone***

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.



Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

### **Body-worn Operation**

This device was tested for typical body-worn operations with the back of the phone kept 0.6 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories should not contain metallic components and must provide 0.6 inch (1.5 cm) separation distance between the user's body and the back of the phone. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

*For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)*

## Front of the Phone

1. **END/PWR Switch:** Lets you power the phone on or off.
2. **Antenna:** Retractable antenna provides optimum reception for 1900 MHz frequencies.
3. **Power On Indicator:** Illuminates red when the phone powers on or when you receive incoming calls. Flashes red when you have messages or scheduled alarms.
4. **Headset Jack:** Provides connection for an optional headset.
5. **Volume Control Keys:** Adjust the Ring Volume in the Main Menu or the Voice Volume during a call. The keys also scroll through months in the Calendar or pages in the Mini Browser.
6. **Mouse Key:** Allows quick and easy scrolling through the menus.
7. **OK:** Lets you place a call, receive a call, end a call or select menu options.
8. **Clear Key:** Lets you clear an entry or back-up in the menu.
9. **Folder :** Lets you answer or end calls.

## Installing the Battery

To install the battery, insert the bottom of the battery into the opening on the back of the phone. Then, push the battery down until the latch clicks.

## Removing the Battery

To remove the battery, release the latch and remove the battery from the phone.

## Battery Charge Level

### Using the Desktop Charger

To charge the battery, plug the AC Adapter into a standard wall outlet and connect it to the phone via the I/O Connector on the bottom of the phone. Alternatively, you can place the phone in the charging cradle provided with your phone and connect the AC Adapter to the back of the cradle.

The battery Charge Status icon flashes during charging. When the battery is fully charged, the battery icon stops flashing

## Basic Functions

### Turning the Phone On

To turn your phone on, press the [END/PWR] for 2 ~ 3 secs. Your phone performs a short self-test before letting you know it is operational.

### **Turning the Phone Off**

To turn your phone off, press the [END/PWR] for a few secs until “Powering Off” is displayed. Then release [END/PWR].

### **Power Save Mode**

When the phone is in an area without service for 15 minutes, it stops searching for service and enters into the power Save Mode. When your phone activates this feature, Power Save is displayed on your screen. The phone automatically checks for service periodically or you can check manually by pressing any key.

### **Signal Strength**

The quality of each call you make or receive depends on the signal strength on your area. The number of bars in the Signal Strength icon informs you of the current strength. The more bars, the stronger the signal.

If you are outside of a service area, the “No service” icon will be displayed. No calls can be made or received, including emergency calls.

Extend the antenna when the signal strength is weak. If you are in a building, the reception may be better near a window.

## **Introduction**

### **Highlights**

Congratulations on the purchase of your LG-DB210. This phone is lightweight, easy-to-use, reliable and offers many significant features:

- Roaming capability provides access to other PCS CDMA networks where LG PCS has implemented roaming agreements.
- Data/Fax feature offers wireless modem capabilities for your personal computer in digital mode.
- Mini Browser provides Internet access in digital mode.
- Built-in Scheduler and Call Alarms remind you of events and important calls.
- Two-hundred Phone Book entries store ??? phone numbers (up to 4 phone numbers per entry)
- Graphical icons and text prompts inform you of messages, events and the status of your phone.

- A Mouse Key provides easy navigation through menu options.
- Assign one of twenty ringer tones to any Phone Book entry.

### **Important Information**

This Operator's Guide contains important information on the use and operation of this phone. Please read all of the information carefully for optimal performance and to prevent damaging or misusing the phone.

Any changes or modifications not expressly approved in this Operator's Guide could void your warranty for this equipment and void your authorization to operate this equipment.

## **Getting Started**

### **Making a Call**

When the phone is turned on, check the Signal Strength icon to see if you are in a LG PCS Service Area or authorized PCS CDMA network provider's service area.

1. Open the Flip.
2. Dial phone number, and then press **OK** .  
    • **Tip!** You also can make a call from the Call Log and through Phone Book entry number
3. When you are finished with your call, Press [END] or you can also end the call by closing the Flip.

### **Correcting Dialing Mistakes**

Press **CLR** to erase one digit at a time. To delete entire digits, hold **CLR** a key for at least 1 second.

### **Call Waiting**

While you are on a call, you may hear a beep indication another incoming call and the person's Caller ID information is displayed.

## **Adjusting the Volume**

### **Ringer Volume**

To adjust the Ring Volume, scroll to volume control keys from the MAIN menu screen and press Volume Control Keys up or down. The current Volume setting is displayed.

### **Voice Volume**

To adjust the incoming Voice Volume, press the Volume Control keys up or down during a call. The

current Volume setting is displayed.

**Note:** You also can control key beep volume from the menu. (See “ Adjusting the volume”)

## Dialing State

### Dialing Options

When you enter numbers in the Main Menu, dialing options are displayed.

To choose an option, select the option you want and press **OK** .

- Call – Dials the phone number.
- Roam Confirm – Reminds you that you are making a call on an. (See “Disabling Roam Confirm” )
- Roam Call – Dials the phone number using the current PCS CDMA networks.
- Save – Saves the phone number in your Phone Book. (See “Saving a Phone Number”)
- Find – Displays phone numbers in your Phone Book that contain the entered numbers. (See “Finding a Phone Number”)
- Hard Pause – Inserts a Hard Pause. (See “Dialing and Saving Phone Numbers With Pauses” )
- 2- Second pause – Inserts a two-second pause. (See “ Dialing and Saving Phone Numbers With Pauses” )
- Exit – Returns to the Main Menu.

## Finding a Phone Number

You can search for Phone Book entries that contain a specific string of numbers.

To find a phone number:

1. Enter one or more digits. The more numbers you enter, you can search more narrowly.
2. Move cursor to **Find** and press **OK** .
3. To Display an entry, move cursor to it and press **OK** . To speed dial a number, highlight it and press **OK** on hold.

### Phone Book Entry and Speed Dialing

To retrieve a Phone Book entry, enter its entry number. You can see name and associated numbers.

The first highlighted number is default speed-dialing number. To dial the entry’ s speed-dealing number, press and hold **OK** . To dial an alternate number, scroll by cursor key and press and hold **OK** .

### One touch / Two touch / Three touch dialing

To speed dial a Phone Book entry from the Main Menu, press the entry’ s number on hold. If the entry number is two digits, dial the first digit, then press second digit on hold. If the entry

number is three digits, dial the first and second digit, then press the third digit on hold. (This feature will not work when the Roam Confirm option is enabled.)

#### 4-Digit Dialing

4-Digit Dialing option allows you to make a call by entering the last four digits of a phone number in your Phone Book.

If you select 4-Digit Dial, your phone dials the phone number in your Phone Book that ends with the four digits you entered.

#### To use 4-Digit Dialing:

1. Dial the last four digits of an entry's phone number.
2. Move cursor to **4-Digit Dial** and press **OK**.

**Note:** 4-Digit Dialing dials the first number in your Phone Book matching the four digits.

## In Call State

#### In Call Options

Even during a conversation on your phone, you can use several menu options in addition to the Main Menu.

To select an option, Move cursor to it and press **OK**.

- End Call - Ends the call
- Send Tones - Sends the next set of numbers after a Hard Pause.
- Mute or Unmute – Select Mute to mute your phone's microphone. Select Unmute to resume.
- Dial 3-Way Call – Lets you dial another phone number.  
Flash – Answers an incoming Call Waiting call or connects the third party for Three-Way Calling.

#### Mute / Unmute

Mute or Unmute – Select Mute to mute your phone's microphone. Select Unmute to resume

#### Three-Way Calling

Three-Way Calling lets you talk to two people at the same time.

1. Dial your first number and press **OK**.
2. When you have connected, move cursor to **3-Way Call** and press **OK**.
3. Dial the second number, move cursor to **Call** and press **OK**.

4. When the second call is answered, move cursor to **Flash** and press **OK** for your Three-Way Calling.

**Note:** You can also initiate a Three-Way Call during a Call by dialing a phone number from your Phone Book, Call History or Page/Text messages.

### Redialing Last Outgoing Number

With **Call History** selected, hold **OK** key for 2 seconds.

### Emergency Dialing

Despite your phone is locked, it is possible to dial 911, one of the other three special emergency numbers that are in your emergency number list or Customer Care. As long as you're within a service area (check your signal strength indicator), these numbers can be dialed.

**Note:** To make your phone lock, see "Locking Your Phone".

### Calling 911

1. Dial **9 1 1**
2. Press **OK** .

Note: Even your account is restricted, you can still dial 911

(as long as you're within a service area) but no other emergency numbers.

### Dialing special numbers.

In an emergency, you can call your stored special numbers even when your phone is locked unless your account is restricted.

1. Dial one of the three special numbers stored in your emergency list. Your special numbers must be dialed exactly as stored – with or without the area code.
2. Press **.**

## Call History

### Retrieving Recent Call History

Your LG PCS LG-DB210 stores your last ten incoming, ten outgoing and ten missed calls in the Call History memory.



### Call History Menu

- Outgoing Calls
- Incoming Calls
- Missed Calls
- Erase

### Options for Call History

During using Call History Menu, following Call History menu Options are displayed.

To select an option, move cursor to it and press **OK** .

- Call – Dials the phone number.
- Alternate #s – If the phone number is in your Phone Book and the entry has alternate numbers, they are displayed. To dial an alternate number, highlight it and press and hold **OK** .
- Save Phone # - If the phone number is not in your Phone Book, an entry is created.
- Time/Date – Displays the time, date and duration of the call.
- Prepend – Prepends the phone number. (See “Prepend Dialing” on the following page.)
- Erase – Deletes the Call Log entry.
- Next – Displays the next Call log entry.
- Previous – Displays the previous Call log entry.

● **Tip!** You can also view the next or previous entry by pressing the Mouse Key left (previous) or right(next).

### Viewing Call logs

To view the last ten incoming, ten outgoing or ten missed calls.

1. Move cursor to **Call logs** on the Main Menu and press **OK** .
2. Select one of the following: **Outgoing Calls** , **Incoming Calls** or **Missed Calls** and press **OK** .
3. To display **OK** Call Log entry, choose the entry and press **OK** . The phone number, Phone Book entry name (if the number is in your Phone Book) and Call History menu options are shown.

### Dialing Phone Numbers From the Call Log.

1. Move cursor to **Call logs** on the Main Menu and press **OK**.
2. Select either **Outgoing Calls**, **Incoming Calls** or **Missed Calls** and press **OK**.
3. To dial from the call log, select the phone number you want to call and press **OK** on hold.
4. On the Call history menu, highlight [Call] and press [OK]

**Note:** You cannot dial phone numbers identified as No ID, Restricted, Data or Fax calls.

### Saving Phone Numbers From the Call log.

1. Move cursor to **Call logs** on the Main Menu and press **OK**.
2. Select either **Outgoing Calls**, **Incoming Calls** or **Missed Calls** and press **OK**.
3. Select the phone number you want to save and press **OK**.

**Note:** You cannot save phone numbers identified as No ID, Restricted calls.

4. On the Call history menu, move cursor to [Save] and press [OK].
5. Select one of the following: **Home**, **Work**, **Mobile**, or **Pager** and press **OK**.
6. Enter a name or move cursor to **Save w/o Name** and press **OK**.
7. Press **OK** to save the entry in the next available memory location. (You can also enter an entry number or highlight an empty location and press **OK**.)

### Viewing and Resetting Air Time

Air Time displays MiniBrowser access and Sprint PCS, PCS CDMA Networks air time (rounded to the nearest minute), as well as the number of calls made to or from your phone.

To view Air Time:

1. Move cursor to **Call logs** and press **OK**.
2. Move cursor to **Air Time** and press **OK**.
3. To reset the Air Time, move cursor to **Reset** and press **OK**.

**Note:** Air Time is not intended for billing purposes.

### Deleting Phone Numbers From the Call Log.

1. From the Main Menu, move cursor to **Call logs** and press **OK** .
2. Select either **Outgoing Calls**, **Incoming Calls** or **Missed Calls** and press **OK** .
3. Select the phone number you have stored and press **OK** .
4. On the Call history menu, move cursor to [Erase] and press [OK].

### Deleting Call Log.

1. Move cursor to **Call logs** on the Main Menu and press **OK** . .
  2. Move cursor to **Erase Calls** and press **OK** .
  3. Move cursor to **Outgoing Calls**, **Incoming Calls**, **Missed Calls** or **All Calls** and press **OK** .
- Move cursor to **Yes** and press **OK** .

## Security

### Accessing the Security Menu

Your lock code is required to be entered before viewing the Security Menu. If you forget your lock code, try entering the last four digits of your Social Security number, the last four digits of your LG PCS Phone Number or 0000.

- Lock Phone
- Change Lock
- Special #
- Restrict Outgoing
- Restrict Incoming
- Erase Phone Book
- Phone Reset

To access the Security menu:

1. On the Main Menu, move cursor to **Security** and press **OK** .
2. Enter your lock code.

### Locking Your Phone

Once your phone is locked, you can only make calls to 911, Customer Care and Special Numbers or receive incoming calls.

To lock your phone:

1. Scroll to **Lock Phone** from the Security Menu screen and press **OK** .
2. Select either **Lock Now** or **On Power up** and press **OK** . If you select On Power Up, the phone will be locked each time it power up.

### Unlocking Your Phone

1. Move cursor to **Unlock** and press **OK** .
2. Enter your lock code.

### Changing the Lock Code

To change your lock code:

1. Scroll to **Change Lock** from the Security Menu screen and press **OK** .
2. Enter your new lock code.
3. Confirm reentering your new lock code.

### Restricting Calls

You can restrict which phone numbers you can receive calls from or dial.

1. Scroll to **Restrict Calls** from the Security Menu and press **OK** .
2. Move cursor to **Outgoing** or **Incoming** and press **OK** .

To select an option, move cursor to it and press **OK** .

- Phone Book Only – You can only make or receive calls from Special Numbers or phone numbers stored in your Phone Book.
- Special # Only – You can only make or receive calls from Special Numbers.

### Unrestricting Calls:

1. Scroll to **Restrict Calls** from the Security Menu screen and press **OK** .
2. Move cursor to **Off** and press **OK** .

## OK

To unrestrict incoming or outgoing calls:

1. Scroll to **Restrict Calls** from the Security Menu screen and press **OK** .
2. Select either **Outgoing** or **Incoming** and press **OK** .
3. Move cursor to **Allow All** and press **OK** .

## Using Special Numbers

You Can enter three special Numbers that still can be called when the phone is locked.. You can also restrict your phone to dial or receive calls from Special Numbers only. (See “Restricting Calls” on the previous page.)

To enter or delete a Special Number.

1. Scroll to **Edit Special #** from the Security Menu screen and press **OK** .
2. Move cursor to entry or location and press **OK**
3. Enter or delete the phone number.
4. Move cursor to **OK** and press **OK** .

**Note:** There are no speed dialing options associated with Special Numbers.

## Erasing the Phone Book

To erase all the information stored in your Phone Book:

1. Scroll to **Erase PhoneBook** from the Security Menu screen and press **OK** .
2. If you are surely intend to reset your phone, mover cursor to **Yes** and press **OK**

## Resetting Your Phone

Resetting the phone restores all the factory defaults, including the Ringer Types and Display settings. The Phone Book, Call History, Scheduler, Messages and Call Alarms are not affected.

To reset your phone:

1. Scroll to **Phone Reset** from the Security Menu screen and press **OK** .
2. If you are certain you want to reset your phone, highlight **Yes** and press **OK**

## Set up

### Setup Menu

- Data In
- Fax In
- Key Guard
- Any Key Answer
- Auto Answer
- SVC Change Beep
- Minute Beep
- Connected Beep
- Answered Vibrate
- Languages

#### Data In

This setting enable the subscriber terminal to receive data calls. No incoming calls can be received with this setting. Outgoing calls(Voice Fax and Data) can be originated and the setting will revert back to Off/Disable of the Power cycle automatically

#### Fax In

This setting enables the subscriber terminal to receive fax transmittals. No incoming voice calls can be received with this setting. Outgoing calls (Voice Fax and Data) can be originated and the setting will revert back to Off/Disable mode of the Power cycle automatically.

#### Key Guard

This application disable key entering allows you to keep the phone in your pocket or purse without the worry of accidentally dialing a number.

To return to normal function, press and hold [CLR] key.

#### Anykey Answer

On/Off. This feature allows you to answer an incoming call by pressing any key

**Except : Power On/Off key, the Volume keys.....**

### Auto Answer

Select the number of rings before the phone automatically answer a call. This feature is most commonly used with the car kit.

### SVC Change Beep

On/Off. This feature sounds a tone notifying you when you lose/regain a service changes to roaming (out of your normal area)

### Minute Beep

On/Off. Every time you use an additional 1 minute during a call, this function warns you 10 seconds before the minute starts by making a beep sound.

### Connected Beep

On/Off. Alert sound to notify the user when the call is connected.

### Answered Vibrate

On/Off. Vibration to notify the user when the call is received.

### Languages

Set the Multi-language feature for displaying each language.

Language support: English (**default**) /Spanish/Portuguese/French

## Volume

Ringer

Key Beep

Speaker

Alert

### Adjusting the Volume

1. On the Main Menu, move cursor to **Volume** and press **OK** .
2. Select either **Ringer** or **Key Beep** and press **OK** .

**Tip!** You can use the Volume Control keys to adjust the Ring Volume in the Main Menu or the Voice Volume during a call.

3. Select one of the following: **High**, **Medium**, **Low**, **Off** or **Vibrate** (for Ringer only) and press **OK** .

**Note:** Even in Vibrate Mode, if the phone is attached to an accessory (Desktop Charger, Hands-Free Car Kit, etc.), it uses the Standard Ring Type to alert you of incoming calls, alarms or messages.

### **Tone Length (Key Beep)**

If the tone lengths are longer, it helps you recognize the tone much better when dialing voicemail or other automated systems.

To select a tone length:

1. On the Main Menu, move cursor to **Volume** and press **OK** .
2. Move cursor to **Key Beep** and press **OK** .
3. Move cursor to **Short** of **Long** and press **OK** .

### **Speaker**

This menu allows you to talk via speaker on the phone.

Alert Volume        Skip.

## **Ring Types**

With Caller ID

No Caller ID

Messages

Alarms

### **Messages**

The volume buttons on the left topside of the phone can be used to adjust message volume (SMS message volume). The upper button increases, and the lower button decreases, the volume.

### **Alarms**

Used to notify the time with alarm if you set up alarm time. Melody is rung.



## Display

### Display Menu

- Backlight
- Greetings
- Contrast
- S/W Version
- PRL Version

### Changing the Backlight Setting

The backlight will be on when you press a key or receive an phone call.

To change the backlight setting:

1. On the Main Menu, move cursor to **Display** and press **OK**.
2. Move cursor to **Backlight** and press **OK**.
3. Select one among **8 Seconds**, **15 Seconds**, **30 Seconds**, **Off** or **Always On** and press **OK**.

**Note:** Long backlight settings reduces the battery' s talk and standby times.

### Editing the Greeting

The Greeting is displayed above the time and date on the display screen.

To edit the Greeting:

1. On the Main Menu, move cursor to **Display** and press **OK**.
2. Move cursor to **Greeting** and press **OK**.
3. Move cursor to **Change** and press **OK**.
4. To delete characters one by one, press **CLR** .. To delete characters entirely, press **CLR** on hold.
5. Enter your new Greeting using the keypad.
6. Move cursor to **Save** and press **OK**.

**Contrast**

This feature allows you to customize the contrast setting [Highest, High, Medium, Low, Lowest].

**S/W Version**

View the software version.

**PRL Version**

View the PRL version

**Voice**

Voice Dial

Voice Memo

Auto Answer

Record

**Placing a Call by Voice Dialing**

You can place a call by voice if you have stored the voice dialing number in the memory address.

**Note :**

**Manual:** You can activate the function by opening the flip and pressing the ?? button.

**Auto :** The function is activated when you open the flip.

**Auto Answer**

With this function, your phone is automatically connected with a call received after a preset number of times the bell rings. (Off/ 1 Ring/ 3 Rings)

**Record**

The terminal answers to a call automatically and records the message of the calling party.