



LG-B460

Guía del Usuario

ESPAÑOL



ENGLISH

User Guide

LG-B460

MFL68488201 (1.0)



www.lg.com

LG-B460 User Guide



- Screen displays and illustrations may differ from those you see on the actual phone.
- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider. All information in this document is subject to change without notice.
- Copyright ©2014 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS :

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

1. The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
2. The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
3. This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.
4. The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
5. Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
6. The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER :

1. Defects or damages resulting from use of the product in other than its normal and customary manner.
2. Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
3. Breakage or damage to antennas unless caused directly by defects in material or workmanship.
4. That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
5. Products which have had the serial number removed or made illegible.
6. This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
7. Damage resulting from use of non-LG approved accessories.
8. All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
9. Products operated outside published maximum ratings.
10. Products used or obtained in a rental program.
11. Consumables (such as fuses).

3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent reconditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS :

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG INFOCOMM INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE :

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit www.lg.com.

Correspondence may also be mailed to:

LG Electronics MobileComm U.S.A., Inc.

201 James Record Road Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.

Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

Contents

Phone Components	7	Own Number	21
Rear view	9	My Business Card	21
Installing the SIM card and battery	10	Create Message	22
Charging your phone	11	Using Options	23
Before you begin	13	Sending a Message	23
Making a Call	13	Inbox	24
Answering a Call	14	Drafts	25
Adjusting the Volume	14	Outbox	25
Entering Text	15	Message Settings	26
During a Call	17	Message Alert	26
Making a Second Call	17	Save To	26
Swapping Between Two Calls	17	Signature	26
Answering an Incoming Call	17	Text Message	26
Rejecting an Incoming Call	17	Multimedia Message	26
Using the Speakerphone	18	Voicemail	27
Contact List	20	Edit Alarm	30
New Contact	20	Take Photo	33
Groups	20	Preview Tab	33
Speed Dial	20	Others Tab	33
SIM Management	21	Using Zoom	33
		Record Video	34
		Preview Tab	34
		Others Tab	34
		Audio	37

Music	37	Alert Tone	44
Playing Music	37	Keypad Tone	44
Adding Music To Your Phone	38	Multimedia	44
Pictures	38	Call	45
Video	38	Phone Settings	45
Other Files	38	Date & Time	45
File Manager	39	Languages	45
Voice Command	40	Set Hotkeys	45
Voice Command Options	40	Flight Mode	45
Alarm Clock	41	Security	46
Games & Apps	41	Reset Settings	46
Notepad	42	Display	47
Calculator	42	Wallpapers	47
Tasks	42	Fonts	47
Stopwatch	42	Clocks & Calendar	47
Tip Calculator	43	Brightness	47
Unit Converter	43	Backlight Timer	47
Voice Recorder	43	Menu Styles	47
Audio & Ringtones	44	Call	47
Ringtone	44	Call Forwarding	47
Message Tone	44	Send My Number	48
		Auto Redial	48
		Answer Mode	48
		Senior Mode	48
		Minute Minder	48
		Call Waiting	48

 
Call Reject	49	Applications	53
Send DTMF Tones	49	Messages	53
Accessibility	49	Browser	53
Accessibility	49	Accounts	53
Menu Readout	49	Cache	54
Keypad Tone	49	Cookies	54
Large Text	49	Clear Login Info.	54
Invert Color	50	Screen Settings	54
Mono Sound	50	Security	54
Senior Mode	50	Navigation Mode	54
TTY	50	Secure Popup	54
Hearing Aid	50	Shortcuts	54
Voice Command	50	Software Update	55
Connectivity	50	Phone Information	55
Bluetooth	50		
Turn On/Off	51		
Search New Device	51		
My Devices	51		
My Bluetooth Info	51		
Connection	52		
Internet Profiles	52		
Access Points	52		
Network Selection	52		
Memory	52		
Used Space	52		

Your Phone

Phone Components



Press and hold to activate/deactivate Vibrating Mode.

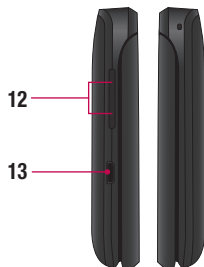

- 1. Earpiece:** Lets you hear the caller during a call.
- 2. Main LCD:** Displays phone status icons, menu items, web items, web information, pictures and more, in full color.
- 3. Left Soft Key/Right Soft Key:** Each of these keys perform the functions indicated by the text on the display immediately above them.
- 4. Camera Key:** Lets you activate the Camera and take pictures.
- 5. Message Hot Key:** Trigger this key to directly go to **Create Message**.
- 6. Navigation Keys**

Home screen functions:



Messages



Contacts



Email



 
Calendar

- In a menu: Navigates between menus.

- 7. Send Key:** Press this key in standby mode to quickly access the most recent missed, dialed, and received calls. Also dials a call when you enter a number.

- 8. Clear/Back Key:** Allows you to return to the previous screen. Press and hold to activate the Voice Command function.
- 9. TTS Mode Key:** Lets you turn the TTS mode on/off.
- 10. OK Key:** Select options and menus.
- 11. End/Power Key:** Allows you to power the phone on or off, end calls, or return to standby mode.
- 12. Volume Keys:** Allows you to control the Master Volume while in standby mode and the earpiece volume during a call.
- 13. Charger/USB Port:** Allows you to connect a charger or other supported accessories.

Rear view

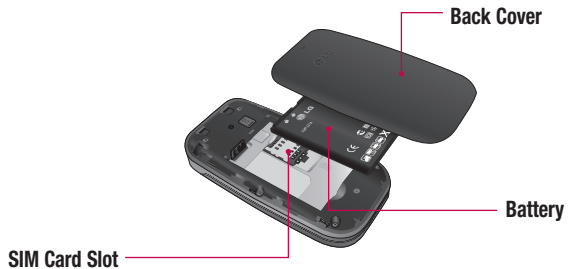


Getting Started

Installing the SIM card and battery

1. Remove the back cover

 Place your thumb at the top part of the back cover and slide it downwards to remove it.

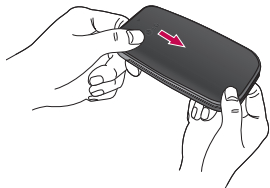

2. Remove the battery

Hold the top edge of the phone and use the fingernail cutout near the bottom of the battery to lift the battery from the phone.



Warning

Do not remove the battery when the phone is turned on; this can damage the phone.

3. Install the SIM card

Slide the SIM card into the SIM card slot (as shown below). Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, slide it gently in the opposite direction.



 
4. Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it snaps into place.



5. Install the back cover

Align the back cover on the battery compartment and slide it upwards until it locks into place.

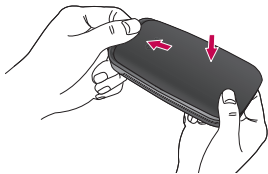


Charging your phone

Locate the Charger/USB Port on the left side of your phone. Insert the charger connector to the phone (the 'B' side of the connector has to be facing up when connecting to the phone) and then plug the other end into the wall socket. Your phone will need to be charged until the Full Battery message appears on the screen.

Important!

 You must insert the battery before charging.

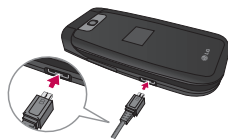























Warning

Use of unauthorized accessories could damage your phone and void your warranty.

On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

ICON/ INDICATOR	DESCRIPTION
	Network signal strength (number of bars will vary)
	No network signal
	Low Battery
	New text message
	New email
	An alarm is set
	Ring profile in use
	Silent All profile in use
	EDGE network available
	Bluetooth is active
	3G network available
	The browser is active
	Vibrating Mode On





ICON/ INDICATOR	DESCRIPTION
	Speakerphone
	Call in Progress
	Voicemail
	Battery Full
	Battery Charging
	Flight Mode On
	Camera in use
	Camcorder in use
	Camcorder timer

General Functions



Before you begin

Remember that you can select the menu icons from Menu screen using the number keys if you set the Menu Style as **List**. If you set the Menu Style as **Icon**, you can only use the **Navigation Keys** to select the menu icons.



Making a Call

- 1 Make sure your phone is powered on.
- 2 Enter a phone number including the area code. To edit a number on the display screen, simply press the **Clear/Back Key**  to erase one digit at a time.
 - ▶ Press and hold the **Clear/Back Key**  to erase the entire number.
- 3 Press the **Send Key**  to call the number.
- 4 To end the call, press the **End/Power Key** .

Making a Call with the Send Key

- 1 Press the **Send Key**  to display the most recent missed, dialed and received calls will be displayed.
- 2 Highlight the desired number by using the **Navigation Keys**.
- 3 Press the **Send Key** .

Making International Calls

- 1 Press and hold the  key and the international access character '+' will appear.
- 2 Enter the country code, area code, and the phone number.
- 3 Press the **Send Key**  to call the number.

Ending a Call

To end a call, press the **End/Power Key** .

Making a Call from the Contacts






You can store frequently called names and phone numbers in the SIM card as well as in your Contacts List.

You can dial a number by simply highlighting a name in the Contacts List and pressing the **Send Key** .

- 1 Press the **Down Navigation Key**  to access the Contact List.
- 2 Highlight the Contact and press the **Send Key** .

Answering a Call

When you receive a call, the phone displays a notification on the screen and rings and/or vibrates. If the caller can be identified, the caller's phone number (or name, if stored in your Contacts) is displayed.

- 1 Press the **Send Key**  or the **Left Soft Key**  **Accept** to answer an incoming call.
If the **Answer Mode** has been set as **Any Key** (**Menu** > **Settings** > **Call** > **Answer Mode**), any key press will answer a call, except for the **End/Power Key** , or the **Right Soft Key** .
- 2 End the call by pressing the **End/Power Key** .

Note

You can answer a call while using other functions or features.

Adjusting the Volume

Use the **Volume Keys** during a call to adjust the earpiece volume.

While in standby mode, you can adjust the Master Volume using the **Volume Keys**.

Vibrating Mode (Quick)

Vibrating Mode can be activated by pressing and holding down the **##+** key.


Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator on your phone's display screen.

Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Contacts, writing a message, or scheduling events in the calendar all require text to be entered.

Changing the Text Input Mode

Change the text input mode by pressing  when in a text entry field.


You can check the current text input mode in the upper right corner of the screen.

The following text input modes are available on the phone.



ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter.

123 Mode (Numbers Mode)




Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed in the upper right corner.

Symbol Mode

The Symbol Mode enables you to enter various symbols or special characters. To enter a symbol, press the  key. Use the **Navigation Keys** to highlight the desired symbol and press the **OK Key** .

Using the ABC Mode

Use the alphanumeric keypad to enter your text.

- 1 Press the key labeled with the required letter.
- 2 To insert a space, press the  key once. To delete letters, press the **Clear/Back Key** . Press and hold down the **Clear/Back Key**  to erase all of the entered text.

Note

Refer to the table below for more information on the characters available using the keys.

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	., ' @ ? ! - : / 1	., ' @ ? ! - : / 1
2	A B C 2	a b c 2