





## Voice command

Voice Command is the function whereby your phone's voice recognition engine identifies the voice of the user and carries out the requested commands. When the user operates the Voice Command function, there are four possible commands, Call <Name or Number>, Listen voicemail, Missed calls, and Time & date. To activate the Voice Command function, press the **Clear/Back Key**  while the phone is in standby mode or press the **Left Selection Key**  **Menu, Tools** , and .

**Voice command.**

- 1 Call <Name or Number>:** This function is activated only when the user says the command "Call" followed by the name stored in the address book or say the phone number. Please note that interfering noise might cause a problem displaying candidates. Additionally, the user has the option to select a number type at the end, such as "mobile", "home", or "work".
- 2 Listen voicemail:** This command is activated when the user says "Listen Voicemail". The user will then be automatically connected to voicemail.
- 3 Missed calls:** This command is activated when the user says the words "Missed Calls". The mobile phone presents the missed call list.
  - **Follow-up Commands Available**
    - Yes:** Make the phone call.
    - No:** Moves to the next result.
    - Cancel:** Go back to the main Voice Command menu.
    - Exit:** Terminate Voice Command.
    - Next:** Moves to the next result.
- 4 Time & date:** This command is activated when the user says "Time & Date". The phone displays the current local time and date.

## Voice command Options

When the Voice Command option is activated, you can press the **Left Selection Key**

 **Options** for the following options:

- **Mode**

**Speed:** Voice Command is abbreviated.

**Normal:** Voice Command is played normally with prompts.

- **Best match**

**1 match:** The most likely match will be displayed when finding a number from the address book.

**4 matches:** The four most likely matched names will be displayed when finding a name from the address book.

- **Sensitivity**

**High:** Operation and performance of the voice recognition engine is rarely affected by the user's voice command and surrounding sound.

**Medium:** Operation of the voice recognition engine is normally affected by user's voice command and surrounding sound.

**Low:** Operation of the voice recognition engine is strongly affected by user's voice command and surrounding sound.

- **Spk. on mode**

**Automatic on:** When this option is selected, the speakerphone is turned on and the sound is loud enough so you can hear the output when the phone is away from the ear, at a distance

**Off:** When this option is selected, the speakerphone is turned off and the sound comes from the earpiece, which is quieter and cannot be heard when the phone is away from the ear, at a distance.

## • Call alert

**Ring only:** This option will not read out the caller name. You will only hear the selected ringtone.

**Ring after name:** This option will read out the caller name once, and then will ring.

**Name repeat:** This option will read out the caller name continuously.


## Calculator

The Calculator function allows you to calculate simple mathematical equations.

To access Calculator, from the standby screen, press the **Left Selection Key**  **Menu, Tools**  and  **Calculator**.

## Tasks

This feature allows you to save and manage a task.

To access Tasks, from the standby screen, press the **Left Selection Key**  **Menu, Tools**  and  **Tasks**.

**1** To add a new task item, press the **Left Selection Key**  **New**.

**2** Input the Due Date, Note, Priority, and Status information for the new Task.

**3** Press the **Left Selection Key**  **Save** to save the Task item.




The following options are available in the Task list by pressing the **Left Selection Key**  **Options**:






- **Mark 'Complete':** Allows you to change the status of the selected task as Completed.
- **Edit:** Allows you to edit a saved task.
- **Delete:** Deletes the selected task.
- **Selective delete:** Allows you to delete All completed/All past tasks/All tasks selectively.

- **Send task via:** Enables the selected task to be sent via Text message, Multimedia message.
- **Select multiple:** Allows you to select multiple Tasks.
- **View calendar:** Allows you to view the Calendar.

## Stopwatch

This menu allows you to record the elapsed time of an event. The duration of an individual lap time (up to 20 laps) and the total time can also be displayed.




To access Stopwatch, from the standby screen, press the **Left Selection Key**  **Menu, Tools** , and  **Stopwatch**.

- **Show last:** Displays the last time recorded (only available if previous time was not reset).
- **New time**
  - 1 To start timing, press the **OK Key**  **Start**. The running time is displayed as HH.MM.SS.hh (hours, minutes, seconds, hundredths of a second).
  - 2 During the timing, you can record an individual lap time by pressing the **Right Selection Key**  **Lap**. Up to 20 lap times can be recorded.
  - 3 You can stop or restart timing by pressing the **OK Key**  again.
  - 4 To reset the stop watch, press the **Right Selection Key**  **Reset** after stopping the time, or to save the stop watch, press the **Left Selection Key**  **Options** and then select **Save**.
- **Saved times:** Allows you to see a list of the saved recorded times.

## Tip calculator

This feature allows you to quickly and easily calculate the tip amount based on the total bill as well as the split of the total bill based on the number of people.

To access Tip calculator, from the standby screen, press the **Left Selection Key**

 **Menu, Tools** , and  **Tip calculator**.



- 1 Enter the **Total bill (\$)**, **Tip (%)**, and **Split** amounts.
- 2 The **Tip (\$)** and **You owe (\$)** amounts will be automatically calculated.

## Unit converter

This function allows you to convert units of measurement.

There are 6 types of units that can be converted: Area, Length, Weight, Temperature, Volume, and Velocity.

To access Unit converter, from the standby screen, press the **Left Selection Key**

 **Menu, Tools** , and  **Unit converter**.

## Voice recorder

Allows you to record an audio clip to your phone. The recorded audio file is saved automatically in the Audio menu.

To access Voice recorder, hold down the **Clear/Back Key**  while the phone is in standby mode or press the **Left Selection Key**  **Menu, Tools**  and 

**Voice recorder.**

The following options are available when you press the **Left Selection Key** 

**Options:**

- **Record mode:** Sets the recording mode to either MMS mode or General mode.
- **Quality:** Allows you to set the quality of an audio clip. You can set it to Fine, Normal, or Economy.

When you press the **Right Selection Key**  **Gallery**, it will take you to the Audio gallery.


# Browser


The Browser is one of the services provided by your network operator and it gives you access to all the cool things you can do with your wireless phone.

## NOTE:

- Check the availability of services, pricing, and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.
- Please contact your service provider to open an Internet account.

## Launch the Browser

To launch the browser from the standby screen, press the **Right Selection Key**  **Browser** or press the **Left Selection Key**  **Menu** and select the **Browser**  using the Navigation Keys.

To exit the browser at any time, press the **End/Power Key** .

## Using the Browser

Once you are connected to the Internet, the following menu options are available when you press the **Left Selection Key**  **Options**:

- **Zoom**: Allows you to zoom in/out for better look.
- **Home**: Directs you to the homepage.
- **Enter URL**: Allows you to enter URL you desire to visit.
- **Send link**: Allows you to send the URL link in a message.

- **Bookmarks:** You can add or save the current page to Bookmarks or view your saved Bookmarks.
- **Navigation mode:** Allows you to select Back, Forward, and Refresh.
- **Search text:** Allows you to search the text.
- **Recent pages:** Allows you to view your history of recently viewed web sites.
- **Settings:** Allows you to set options for web pages and appearance.

## Menus for the Browser


You can surf the Internet using either the phone keys or the Browser menu.



## Using the Navigation Keys


When surfing the Internet, the Navigation Keys function similarly from when the phone is on standby mode.




# Alarm clock

The alarm clock function allows you to set up multiple separate alarms. You can also set the time, repetition interval, and alarm tone. If there is no alarm setting, press the **Left Selection Key**  **New** to add a new alarm.





To access Alarm clock from the standby screen, press the **Left Selection Key**  **Menu**,  **Alarm clock**.



- **Time:** Input your desired alarm time by specifying the hour and minutes. You can also choose a predefined amount of time (15 minutes later, 30 minutes later, 45 minutes later, 1 hour later, Off).
- **Repeat:** Select the desired repeat mode (Once, Daily, Mon ~ Fri, Sat ~ Sun, Select weekday).
- **Alarm tone:** Press the **OK Key**  **List** to access the list of available Alarm Tones.
- **Volume:** Set the volume of the alarm by pressing the up and down Volume Keys.
- **Type:** Select the Ring Alert Type between Ring, Vibrate, Ring & vibrate and Vibrate after ring.
- **Memo:** Enter an alarm name.
- **Snooze interval:** Select the snooze interval between 5 minutes, 15 minutes, 30 minutes, 45 minutes, 1 hour and Off.

Press the **Left Selection Key**  **Save** to save your new Alarm.

# Calendar

When you enter this menu, a calendar will be displayed. The red square cursor is used to locate a particular day. The bottom bar on the calendar indicates saved schedules (if any) for that day. This function helps you keep track of your schedule. The phone can sound an alarm tone if it has been set for a specific schedule item. The chart below shows the keys that can be used to navigate the Calendar:

Key	Description
	Weekly
	Daily
	Annually
	Monthly

To access Calendar, from the standby screen, press the **Left Selection Key**  **Menu**,  **Calendar**.

The following options are available when pressing the **Left Selection Key** 

## Options:

- **Set holiday:** Allows you to set specific dates to display as Holidays on your calendar.
- **Week view:** Allows you to view the calendar by week.
- **Go to date:** Allows you to jump to a specific date.
- **Settings:** Allows you to set various calendar settings.

## Audio & ringtones

This menu allows you to configure the audio and ringtone settings for your phone. To access Audio & ringtones, from the standby screen, press the **Left Selection Key**

 **Menu, Settings** , and  **Audio & ringtones.**

### Ringtone

- **Sounds:** Allows you to set a sound as the ringtone for your phone.
- **Volume:** Allows you to control your ringtone volume.
- **Alert Type:** Supports 3 ring alert types: Ring, Ring and vibration, and Ring after vibration.
- **Increasing ringtone:** Allows you to enable or disable the Increasing Ringtone function, which is played when you receive an incoming call.

**NOTE:** Full length music tracks cannot be set as either ringtones or message tones.

### Message tone

- **Sounds:** Allows you to set a sound as your message tone.
- **Volume:** Allows you to control your Message tone volume.
- **Alert type:** Supports 4 message alert types: Silent, Vibrate, Ring only, Ring & vibrate.
- **Alert interval:** Allows you to set the interval alert to Once, Every 2 min, Every 5 min, Every 10 min, or Every 15 min.

## Alert tone

- **Sounds:** Allows you to select a set of alert tones. Supports 2 alert tone types: Alert tone 1 and Alert tone 2.
- **Volume:** This menu allows you to control your Alert tone volume.
- **Alert type:** You can select to turn Alert tones to Ring or Silent.

## Keypad tone

- **Sounds:** Allows you to select a tone that the phone sounds when a key is pressed on the dialpad. You can select an option from Beep and Voice.
- **Volume:** Allows you to control your Keypad tone volume.

## Multimedia

This menu allows you to control your Multimedia volume.

## Call

This menu allows you to control your Call volume.

## Phone settings

This menu allows you to configure the Phone settings. To access Phone settings, from the standby screen, press the **Left Selection Key**  **Menu, Settings** , and  **Phone settings**.

## Languages

Allows you to change the language for the display text on your phone. This change will also affect the Language Input mode.

## Set hotkeys

Allows you to change the preferences on the Hotkeys that are currently assigned for your Navigation Keys (when in standby mode).

## Auto key lock

Allows you to lock your keypad automatically after a defined length of display backlight time.

(Left Selection Key  Menu >  Settings >  Display >  Backlight timer >  Display).

You can set the Auto Key lock to On or Off.

## Airplane mode

This allows you to only use the phone's features that do not require the use of the wireless network, excluding emergency calls, when you are in an airplane or in places where the wireless network is prohibited. If you set the Airplane mode on, the Airplane mode icon will be displayed on the screen instead of the network signal icon.

- **On:** You cannot make (or receive) calls, excluding emergency calls, or use other features that require network coverage.
- **Off:** You can deactivate the Airplane mode to access the network.

## Security

Various codes and passwords are used to protect the features and settings of your phone.

- **Phone lock:** You can use a security code to avoid unauthorized use of the phone. If you set the Phone Lock to **When power on**, the phone will request a security code whenever you switch the phone on. If you set the Phone Lock to **Lock phone now**, your phone will lock immediately.
- **Change codes:** The Change Codes feature allows you to change your current password to a new one. You must enter the current password before you can specify a new one. You can change the access codes for: Security code.

## Reset settings

This function allows you to restore factory settings. To do this, you need the security code.

- **Master reset:** Restores the phone settings (e.g.: Audio, Display, Language) to default values.
- **Master clear:** Deletes downloaded/user created contents (e.g.: images, videos) from the phone.

### Phone

Deletes all downloaded/user created images and audios from the phone memory.

Deletes personal information stored in the phone memory (e.g.: Contacts, Messages, Tasks, Alarm, Calendar Schedules).

Restores the settings stored in the phone memory to the default values.

## Display

This menu allows you to configure your Display settings.

To access Display, from the standby screen, press the **Left Selection Key** 

**Menu, Settings**  and  **Display**.

## Wallpapers

This menu allows you to set a picture or color as your background.

## Fonts

You can configure the font size and color of the font that your phone uses.

## Clocks & calendar

This feature allows you to select a Clock or Calendar to display on the standby screen.

## Brightness

You can set the brightness of the display screen.

## Backlight timer

Use this to set the duration of the display backlight and keypad.

## Menu styles

You can set the main menu style to Icon or List view.

## Call

This menu allows you to configure your Call settings.






To access Call, from the standby screen, press the **Left Selection Key**  **Menu, Settings** , and **4 GHJ** **Call**.

## Send my number

This network service allows you to set your phone number to be displayed or hidden from the person you are calling. You can select **Set by network** if you prefer to have different settings for different service providers.

## Answer mode

This allows you to determine how to answer the phone.

- **Any key:** Allows you to answer an incoming call by pressing any key, except the **End/Power Key** , **Volume Keys (Up/Down Navigation Keys)** , or the **Right Selection Key** .
- **Send key only:** Allows you to only answer an incoming call by pressing the **Send Key**  or **Left Selection Key**  **Accept**.

## Senior mode

Senior mode is a function that amplifies a sound for seniors to hear the voice well by emphasizing a low voice. It is used for enhancing the speech quality while you are on the phone.

You can set the Senior mode to On or Off.

## Connection vibration

Allows you to choose if you want the phone to vibrate when a connection is established.

## Call duration

Allows you to view Call duration information about Last call, Dialed calls, Received calls and All calls.

## Memory

This menu allows you to configure your Memory settings.

To access Memory, from the standby screen, press the **Left Selection Key** 

**Menu**, **Settings** , and  **Memory**.

## Used space

This function shows the memory status of the phone.

- **Phone common**

This function shows the memory status of the phone and the memory being used by Audio, Pictures, Video, Multimedia msg, Java, and Others types of files.

- **Phone reserved**

This function shows the status of the reserved memory used by Text message, Contacts, Calendar, Tasks, and the Notepad.

- **SIM card**


This function shows the status of the SIM card memory.



## Applications

This menu allows you to configure application settings

To access Applications, from the standby screen, press the **Left Selection Key** 

**Menu, Settings** , and **Applications**.

## Messages

This option allows you to configure the Messaging option.

## Browser

This menu allows you to configure the Browser settings.

## Appearance

You can choose the settings of the browser appearance (Text size, Character encoding, Show image, Java script).

## Cache

The web pages you have accessed are stored in the phone memory. This menu allows you to manage that function.

- **Clear cache:** Remove all cached data in the memory.
- **Cache:** Allows you to turn the memory cache on or off.

**NOTE:** Cache is a type of buffer memory, which is used to store data temporarily, especially when it is online.

## Cookies

The information of services you have accessed are stored in what is called a cookie. From this menu, you can choose to allow cookies or to delete cookies that are already on your phone.

## Clear login info.

You can delete the history of ID or Password information that you have saved previously.

## Screen settings

You can change the settings of the browser screen (Rendering mode).

## Security

A list of the available certificates is shown.

- **Certificates:** You can see the list of certificates and view them in detail.
- **Clear session:** Removes the secure session.

## Navigation mode

You can change the methods of browser navigation.

- **4 way navigation:** The cursor of the browser moves scroll amounts or follows hyperlinks.
- **Mouse pointer:** You can move the cursor like a mouse pointer.

## Secure popup

You can activate or deactivate the pop-up which indicates a secure page.

## Shortcuts

If set to On, you can use the Browser more quickly and conveniently with the keypad in the phone. If Shortcuts is on, the following shortcuts are available:

- |                   |                 |
|-------------------|-----------------|
| 1. Enter URL      | 2. This Page    |
| 3. View Bookmarks | 4. Info.        |
| 5. Full Screen    | 6. Saved Pages  |
| 7. Page Up        | 8. Recent Pages |
| 9. Zoom In        | 0. Search Text  |
| *. Page Down      | #. Zoom Out     |

## Phone information

This menu is used to view My number, Manufacturer, Model name, Device ID, Hardware version, Software version, Language.

To access Phone Information, from the standby screen, press the **Left Selection Key**  **Menu**, **Settings** , and  **Phone information**.